


Using [MULTI] knob to adjust 3DSS level

The convenient [MULTI] knob is used to set the scope display level, and also to adjust the levels of the various other functions. The last function used is stored in the [MULTI] control, and the knob can then be used to continually adjust that function.

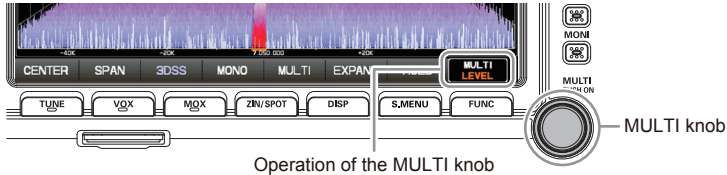


When the operating band, or the frequency span of the scope screen is changed, the 3DSS display level changes, so it is necessary to reset the display to the optimum level with each change.

By setting the [MULTI] knob to [LEVEL] control, the knob can be used to adjust the level of the 3DSS display for the optimum viewing condition by simply turning the knob.

Set the [MULTI] knob to [LEVEL] control

The [MULTI] knob can be set by either of the following operations:

1. Press the [S.MENU] key, then touch [LEVEL]

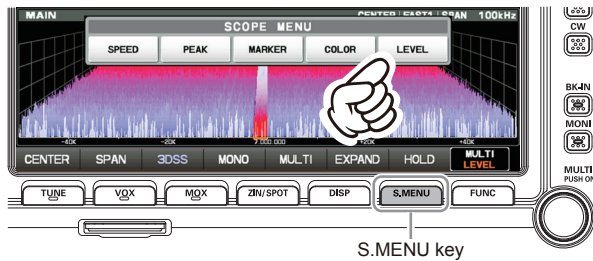

2. Press the [FUNC] key, then touch [LEVEL].

