

Network Remote Control System SCU-LAN10 Operation Manual

"Introduction"	Page 8
"Basic Operation (FTDX101MP/D)"	Page 10
"On Screen Functions & Controls (FTDX101MP/D)"	Page 17
"Basic Operation (FTDX10)"	Page 49
"On Screen Functions & Controls (FTDX10)"	Page 56
"Basic Operation (FT-710)"	Page 87
"On Screen Functions & Controls (FT-710)"	Page 94

Table of Contents

Introduction	8
Important	8
Important Notes	8
Precautions for use	8
Trademarks	8
Other notes and restrictions	9
Basic Operation (FTDX101MP/D)	10
Starting the SCU-LAN10 Remote Software	10
Remote control software screen	11
Select screen layout	11
Adjusting the receiver volume	12
AF GAIN (Speaker icon)	12
Change frequency	12
Switch frequency band	12
Change frequency	12
(1) Mouse wheel operation and drag operation	12
(2) Change the frequency on the spectrum scope screen	14
(3) Enter the frequency on the numeric keypad screen	15
Meter operation selection during transmit	16
Transmitting	16
On Screen Functions & Controls (FTDX101MP/D)	17
Power button	17
Remote button	17
Screen layout selection button	18
Transmission function button	19
TUNE button	19
VOX button	19
MIC GAIN/PROC button	19
MONI button	20
SPEED/PITCH button	20
SYNC button	20
SPLIT button	20
FUNC button (Function menu display)	21
RF POWER button	21
MONI LEVEL button	22
DNR LEVEL button	22
NB LEVEL button	22
VOX GAIN button	22
VOX DELAY button	22
ANTI VOX button	22
MEM CH button	22
M-GROUP button	23
R.FIL button	23
RPT button	23
MIC EQ button	23
ENC/DEC button	23
TONE FREQ button	23
QMB LIST button	24
Spectrum scope area	25
Screen operation	25
Scope function button	26
CENTER / CURSOR / FIX button	26

SLOW1 / SLOW2 / FAST1 / FAST2 / FAST3 buttons	27
SPAN button	27
3DSS button	27
MONO (Dual/Mono Switching) button	28
MULTI (Multi display switching) button	28
HOLD button	28
ZIN (auto Zero-in) button	28
S.MENU button (Spectrum scope menu display)	29
Oscilloscope / AF-FFT area	31
Screen operation	31
MAIN band / SUB band operation area	32
Meter operation selection during transmit	32
Selecting the memory channel	33
Selecting the QMB channel	33
Selecting the operating mode	33
Frequency change operation	34
Switch frequency band	34
MHz digit	34
kHz digit	35
Hz digit	35
QMB Operation	36
MAIN \blacktriangleleft SUB / SUB \blacktriangleright MAIN operation	36
CLAR (Clarifier) operation	36
Receiver setting operation	37
ANT (Switching the Antenna) button	37
ATT (Attenuator) button	37
IPO (Intercept Point Optimization) button	37
R.FIL (Roofing Filter Switching) button	37
AGC (Automatic Gain Control) button	38
Memory channel operation	38
V/M button	38
M \blacktriangleright V button	38
V \blacktriangleright M button	38
Memory channel list operation	39
Read memory data from radio	39
Transfer memory data to transceiver	39
Recall memory channel	39
Move memory data to VFO	39
Write to memory	40
Erase / Resume Memory Channel	40
Editing memory channels	40
AF Gain / RF Gain adjustment	41
AF (Speaker icon)	41
RF (RF GAIN) / SQL	41
SHIFT/WIDTH operation	41
SHIFT button	41
WIDTH button	42
Operation of the filter function display area	42
Interference Reduction Systems operation	42
NB (Noise blanker) button	42
DNR (Digital Noise Reduction) button	43
DNF (Digital NOTCH Filter) button	43
NOTCH (IF NOTCH Filter) button	43
CONT (Contour) button	43
APF (Audio Peak Filter) button	43
VC TUNE operation	44
VC TUNE button	44
RX/TX buttons operation	44
RX button	44
TX button	44

PTT operation	45
PTT	45
MENU bar	46
File	46
Setup	46
Help	48
Shortcut keys	48
Basic Operation (FTDX10)	49
Starting the SCU-LAN10 Remote Software	49
Remote control software screen	50
Select screen layout	50
Adjusting the receiver volume	51
AF GAIN (Speaker icon)	51
Change frequency	51
Switch frequency band	51
Change frequency	51
(1) Mouse wheel operation and drag operation	51
(2) Change the frequency on the spectrum scope screen	53
(3) Enter the frequency on the numeric keypad screen	54
Meter operation selection during transmit	55
Transmitting	55
On Screen Functions & Controls (FTDX10)	56
Power button	56
Remote button	56
Screen layout selection button	57
Transmission function button	58
TUNE button	58
VOX button	58
MIC GAIN/PROC button	58
MONI button	59
SPEED/PITCH button	59
TXW button	59
SPLIT button	59
FUNC button (Function menu display)	60
RF POWER button	60
MONI LEVEL button	61
DNR LEVEL button	61
NB LEVEL button	61
VOX GAIN button	61
VOX DELAY button	61
ANTI VOX button	61
MEM CH button	61
M-GROUP button	62
R.FIL button	62
RPT button	62
MIC EQ button	62
ENC/DEC button	62
TONE FREQ button	62
QMB LIST button	63
Spectrum scope area	64
Screen operation	64
Scope function button	65
CENTER / CURSOR / FIX button	65
SLOW1 / SLOW2 / FAST1 / FAST2 / FAST3 buttons	66
SPAN button	66
3DSS button	66
MULTI (Multi display switching) button	67

HOLD button	67
ZIN (auto Zero-in) button	67
S.MENU button (Spectrum scope menu display)	68
Oscilloscope / AF-FFT area	70
Screen operation	70
VFO-A / VFO-B operation area	71
Meter operation selection during transmit	71
Selecting the memory channel	72
Selecting the QMB channel	72
Selecting the operating mode	72
Frequency change operation	73
Switch frequency band	73
MHz digit	73
kHz digit	74
Hz digit	74
QMB Operation	75
VFO-A / VFO-B operation	75
CLAR (Clarifier) operation	76
Receiver setting operation	76
ATT (Attenuator) button	76
IPO (Intercept Point Optimization) button	76
R.FIL (Roofing Filter Switching) button	76
AGC (Automatic Gain Control) button	77
Memory channel operation	77
M button	77
V/M button	77
Memory channel list operation	78
Read memory data from radio	78
Transfer memory data to transceiver	78
Recall memory channel	78
Move memory data to VFO	78
Write to memory	79
Erase / Resume Memory Channel	79
Editing memory channels	79
AF Gain / RF Gain adjustment	80
AF (Speaker icon)	80
RF (RF GAIN) / SQL	80
SHIFT/WIDTH operation	80
SHIFT button	80
WIDTH button	80
Operation of the filter function display area	81
Interference Reduction Systems operation	81
NB (Noise blanker) button	81
DNR (Digital Noise Reduction) button	81
DNF (Digital NOTCH Filter) button	81
NOTCH (IF NOTCH Filter) button	82
CONT (Contour) button	82
APF (Audio Peak Filter) button	82
PTT operation	83
PTT button	83
MENU bar	84
File	84
Setup	84
Help	86
Shortcut keys	86
Basic Operation (FT-710)	87
Starting the SCU-LAN10 Remote Software	87
Remote control software screen	88

Select screen layout	88
Adjusting the receiver volume	89
AF GAIN (Speaker icon)	89
Change frequency	89
Switch frequency band	89
Change frequency	89
(1) Mouse wheel operation and drag operation	89
(2) Change the frequency on the spectrum scope screen	91
(3) Enter the frequency on the numeric keypad screen	92
Meter operation selection during transmit	93
Transmitting	93
On Screen Functions & Controls (FT-710)	94
Power button	94
Remote button	94
Screen layout selection button	95
Transmission function button	96
TUNE button	96
VOX button	96
MIC GAIN/PROC button	96
MONI button	97
SPEED/PITCH button	97
TXW button	97
SYNC button	97
SPLIT button	97
FUNC button (Function menu display)	98
RF POWER button	98
MONI LEVEL button	99
DNR LEVEL button	99
NB LEVEL button	99
VOX GAIN button	99
VOX DELAY button	99
ANTI VOX button	99
MEM CH button	99
M-GROUP button	100
RPT button	100
MIC EQ button	100
ENC/DEC button	100
TONE FREQ button	100
QMB LIST button	100
Spectrum scope area	101
Screen operation	101
Scope function button	102
CENTER / CURSOR / FIX button	102
SLOW1 / SLOW2 / FAST1 / FAST2 / FAST3 buttons	103
SPAN button	103
3DSS button	103
MULTI (Multi display switching) button	103
HOLD button	104
ZIN (auto Zero-in) button	104
S.MENU button (Spectrum scope menu display)	105
Oscilloscope / AF-FFT area	107
Screen operation	107
VFO-A / VFO-B operation area	108
Meter operation selection during transmit	108
Selecting the memory channel	109
Selecting the QMB channel	109
Selecting the operating mode	109

Frequency change operation	110
Switch frequency band	110
MHz digit	110
kHz digit	111
Hz digit	111
QMB Operation	112
VFO-A / VFO-B operation	112
CLAR (Clarifier) operation	113
Receiver setting operation	113
ATT (Attenuator) button	113
IPO (Intercept Point Optimization) button	113
AGC (Automatic Gain Control) button	113
Memory channel operation	114
M button	114
V/M button	114
Memory channel list operation	115
Read memory data from radio	115
Transfer memory data to transceiver	115
Recall memory channel	115
Move memory data to VFO	115
Write to memory	116
Erase / Resume Memory Channel	116
Editing memory channels	116
AF Gain / RF Gain adjustment	117
AF (Speaker icon)	117
RF (RF GAIN) / SQL	117
SHIFT/WIDTH operation	117
SHIFT button	117
WIDTH button	117
Operation of the filter function display area	118
Interference Reduction Systems operation	118
NB (Noise blanker) button	118
DNR (Digital Noise Reduction) button	118
DNF (Digital NOTCH Filter) button	118
NOTCH (IF NOTCH Filter) button	119
CONT (Contour) button	119
APF (Audio Peak Filter) button	119
PTT operation	120
PTT button	120
MENU bar	121
File	121
Setup	121
Help	123
Shortcut keys	123

Introduction

The SCU-LAN10 and the Network Remote-control software make available remote operation of compatible transceivers using the Internet or LAN.

Important

Before downloading this software, please read the “Important Notes” carefully.

Downloading or installing this software will be taken as indicating your agreement with the contents of the “Important Notes”.

Important Notes

- To remotely control a transceiver using the SCU-LAN10, be sure that you comply with your local regulations.
- All responsibility for the use of this software lies with the customer. Yaesu cannot be held responsible in any way for any damages or losses which may be incurred by the customer as a result of using this software.
- Copyrights and all other intellectual property rights for the software, as well as the software manual, are the property of YAESU MUSEN CO., LTD.
- The revision, modification, reverse engineering, and decompiling of this software is prohibited. Redistribution, transfer, and resale of downloaded files are also prohibited.
- Downloaded files may only be used for personal use.

Precautions for use

- Settings for remote operation require knowledge of PCs and networks as well as transceiver settings. We do not provide support for the PC settings or network settings.
- For the operation of a PC and peripheral devices, follow the instructions provided in the manuals that come with the PC and peripheral devices.
- To use SCU-LAN10, you need to open the port of the router and change the settings of the firewall and security software. Customers are responsible for network security when using this product.
- In communication using a network, changes in audio, operation delay, and changes in voice quality occur, this cannot be improved in principle.
- Depending on the environment or status of a network, PC, OS, security software, etc., the procedures described in this manual may not as expected.
- As a result of using SCU-LAN10 and software, we will not be liable for incidental damages such as damages caused by missed communication and call opportunities due to customer’s incorrect settings, or malfunctions. Use of this software is at your own risk. Yaesu shall not be liable for any damages caused to you by using this software.

Trademarks

Microsoft®, Windows®, Windows® 10, Windows® 11 are registered trademarks in the United States and other countries.

Other notes and restrictions

In principle, when performing remote operation via a network, delays and data loss are inevitable, and smooth operation may not be possible as in direct transceiver operation. Specifically, the following phenomena may occur.

- Sound may be interrupted
- Since the transmit / standby timing may be delayed, it is not suitable for communications that require quick response such as contests and pileups.
- The voice quality of the transmit and receive audio is altered.
- It does not support image communication such as SSTV and digital mode communication such as RTTY (AFSK), JT65, FT8
- CW mode reception is supported, but remote station operation in CW mode is not possible.

● Supported Transceivers

FTDX101MP, FTDX101D, FTDX10, FT-710 (As of October 2023)

• Supported Firmware



Update to the latest software and firmware on the YAESU website (<https://www.yaesu.com>).

FTDX101MP/D	MAIN:	V01-14 or later
	DISPLAY:	V01-06 or later
	IF DSP:	V01-05 or later
	SDR:	V02-03 or later
	AF:	V01-00 or later
FTDX10	MAIN:	V01-01 or later
	DISPLAY:	V01-01 or later
	IF DSP:	V01-01 or later
	SDR:	V01-00 or later
	AF:	V01-00 or later
FT-710	MAIN:	V01-11 or later
	DISPLAY:	V01-08 or later
	IF DSP:	V01-01 or later
	SDR:	V01-04 or later

Basic Operation (FTDX101MP/D)

Starting the SCU-LAN10 Remote Software

1. Click the Windows **Start** button, and then click the [YAESU SCU-LAN10] icon in the “Yaesu Musen” group to start the remote-control software.



- You can also double-click the [YAESU SCU-LAN10] icon on the desktop to start the remote-control software.
- If the transceiver (FTDX101) to be used is not set to “**Connection Setup**” of the “**Setup**” menu on the upper left of the screen, some functions and the screen display will not work properly. For details on the settings, refer to “**SCU-LAN10 Installation Manual**”.
- When connecting to the SCU-LAN10 for the first time, the “**Connection Setup**” screen will be displayed automatically. Set it by referring to the “**SCU-LAN10 Installation Manual**”.

2. Click the [] button.

The “  ” button and the “**REMOTE**” button turns red during remote control.



- The [REMOTE] button starts or stops the remote control. Click the [REMOTE] button to turn it ON automatically when the transceiver is turned OFF. If the remote control is disconnected due to network instability, you can restart it by clicking the [REMOTE] button.
- When using the remote-control software for the first time, a warning screen of Windows or firewall software may appear. In this case, set it to allow (unblock) Internet access from the remote-control software.




Remote control software screen


By default, the MAIN band is displayed on the upper area of the screen, the SUB band is displayed on the lower area, the spectrum scope is displayed on the left side of the screen, and the frequency and meter are displayed on the right side.



- The size and layout of each area will be adjusted automatically depending on the screen resolution of your computer, so the display may differ slightly from the example below.
- In the display example below, the **[MULTI]** button is may be clicked to display the oscilloscope and the AF-FFT.

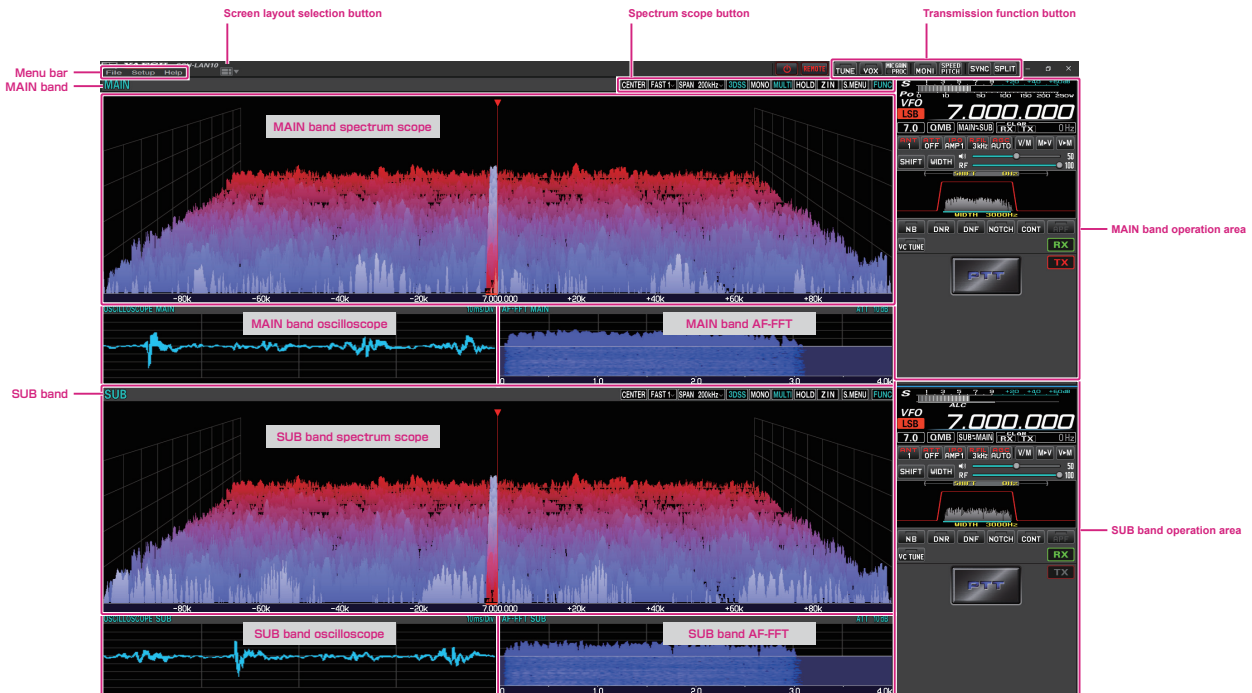

Select screen layout

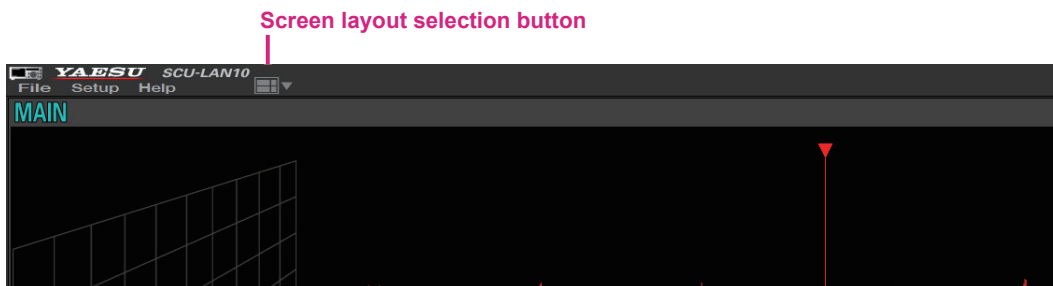


Click: Select the screen layout from 6 types.



Click & Hold: Returns the size of each area on the screen to the default settings.

Adjusting the receiver volume

AF GAIN (Speaker icon)

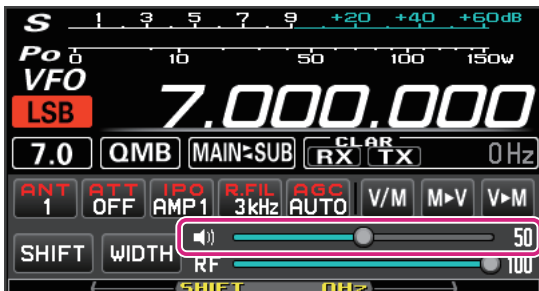

Turn the **mouse wheel**, or drag or click on the slide bar to adjust the receive audio to a comfortable volume.




- Each time you click the speaker icon, mute & mute cancel are switched.
- Keyboard shortcuts
MAIN band: Arrow keys (Up/Down)
SUB band: Shift + Arrow keys (Up/Down)

Change frequency

Switch frequency band

1. Click the MHz digit or the Band icon to display the band selection screen.

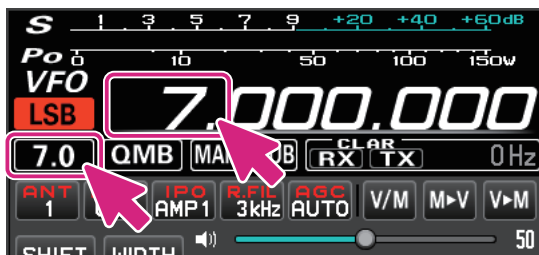

2. Click the desired band.




Change frequency

There are three ways to change the frequency:

(1) Mouse wheel operation and drag operation

• MHz digit


1. When you mouse over the MHz digit of the frequency, the number turns green.

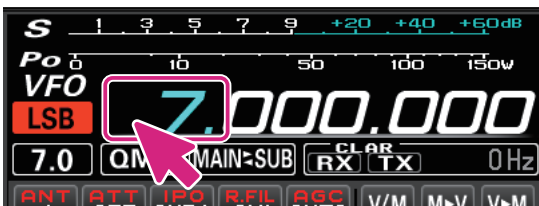

2. In this state, turning the mouse wheel will change the frequency in 1MHz steps.

● kHz digit

1. When you mouseover the 3 digits of the frequency from 100kHz to 1kHz, the digits higher than 1kHz turn green.

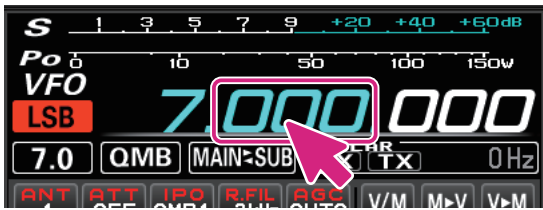

2. In this state, turning the mouse wheel will change the frequency in the set “FAST” step.
 - Click in the upper or lower half of the number to increase or decrease the frequency in the set “FAST” step.
 - If you move the mouse up or down while clicking the number, the frequency will change continuously with the set “FAST” step.
 - Right-click on the 100kHz or 1Hz digit to select the FAST step or TUNING step. For details, see “**Changing the tuning step**” on the next page.



By holding down the [SHIFT] key on the keyboard and clicking a number from 100kHz to 1Hz, you can zero the numbers below that digit with a single touch.

● Hz digit

1. When you mouseover the 3 digits of the frequency from 100Hz to 1Hz, all the digits of the frequency change to green.




2. In this state, turning the mouse wheel will change the frequency in the set “TUNING” step.
 - Click in the upper or lower half of the number to increase or decrease the frequency in the set “TUNING” steps.
 - If you click the number and then move the mouse up or down, the frequency will change continuously at the “TUNING” step.
 - Right-click on the 100kHz or 1Hz digit to select the FAST step or TUNING step. For details, see “**Changing the tuning step**” on the next page.



- By holding down the [SHIFT] key on the keyboard and clicking a number from 100kHz to 1Hz, you can zero the numbers below that digit with a single touch.
- Turning the wheel while holding down the [SHIFT] key on the keyboard does not change the TUNING step to the FAST step.
- Keyboard shortcuts
 - MAIN band: Page Up / Page Down keys
 - SUB band: Shift + Page Up / Page Down keys


• **Change the frequency step**

1. Right-click on the digit from 100kHz to 1Hz of the frequency to display the setting screen for the FAST step and TUNING step.
2. Click on the desired FAST step or TUNING step.

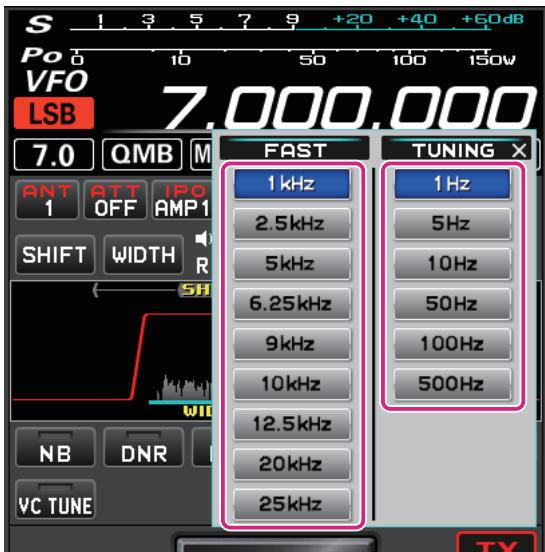


(2) Change the frequency on the spectrum scope screen

1. Move the mouse cursor to the display area of the spectrum scope and turn the mouse wheel to change the frequency in the set “TUNING” step.
 - In the Spectrum Scope screen, press and hold the [SHIFT] key on the keyboard and turn the mouse wheel to increase or decrease the frequency in the set FAST steps.
 - When you click on the point you want to receive such as the peak of the signal on the spectrum scope screen, the frequency jumps to the vicinity. You can then turn the mouse wheel to fine tune the frequency and hear the desired signal.

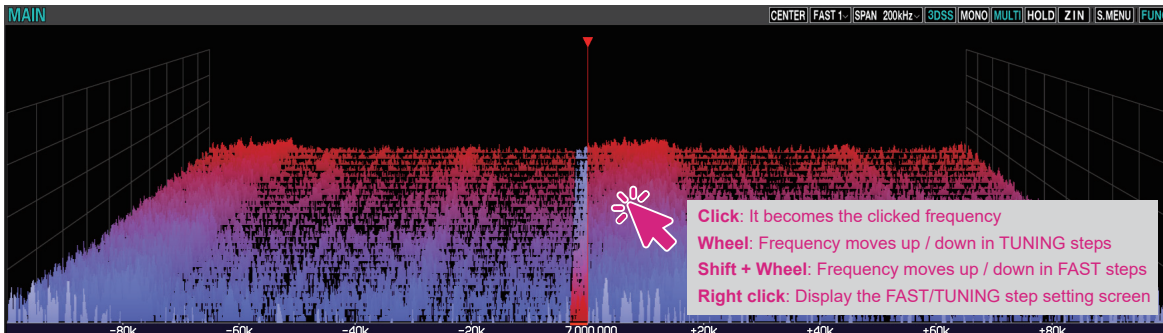


(3) Enter the frequency on the numeric keypad screen

1. Right-click on the MHz digit of the frequency to display the numeric keypad screen.

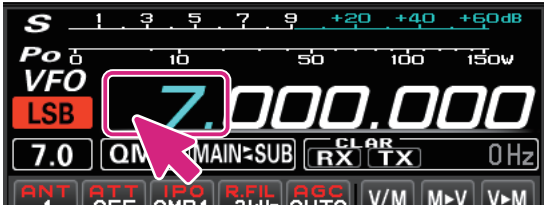

2. You can enter the frequency by clicking on the screen or using the keys on your computer.

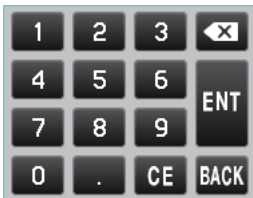

Keyboard operation:

Enter key: Finish the input (**ENT**)


Backspace key: Delete the character before the cursor (**←X**)

Delete key: Delete the character (**CE**)

Esc key: Cancels input and closes the numeric keypad screen (**BACK**)

● Select mode

1. Click the mode icon.

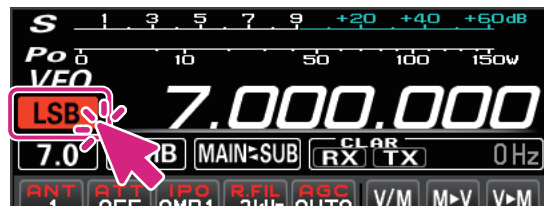

2. Click on the desired mode.




- You can right-click the mode icon to switch between the following modes with one touch:
LSB↔USB; CW-L↔CW-U; AM↔AM-N; FM↔FM-N; DATA-L↔DATA-U; DATA-FM↔D-FM-N; RTTY-L↔RTTY-U



- Keyboard shortcuts
LSB / USB: F1 key (MAIN band) / Shift + F1 key (SUB band)
CW-L / CW-U: F2 key (MAIN band) / Shift + F2 key (SUB band)
AM: F3 key (MAIN band) / Shift + F3 key (SUB band)
FM: F4 key (MAIN band) / Shift + F4 key (SUB band)

Meter operation selection during transmit

1. Click on the S/Power meter.

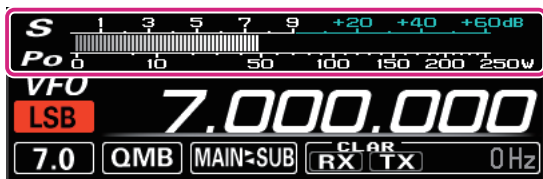

2. Click on the desired meter function.



Transmitting

1. While clicking and holding the **PTT** button, the transceiver will be in transmit status.

The TX icon is displayed above the frequency during transmission.



Keyboard shortcuts
Space key

2. Speak into the microphone of the computer.
3. Release the PTT button to return to receive.

● Change to the MOX button

Change the PTT button to the MOX button.


1. Right-click the PTT button to display the “PTT” and “MOX” setting screens.



2. Click MOX.


On Screen Functions & Controls (FTDX101MP/D)

Power button

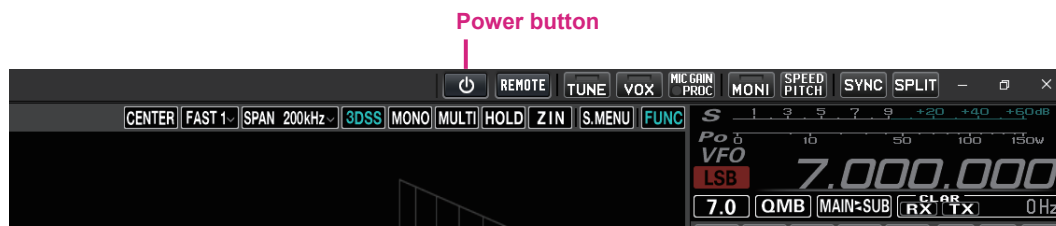

Click: When not in remote control, the transceiver automatically powers ON and remote control starts. During remote control, the transceiver automatically turns OFF and remote control stops.

Remote button

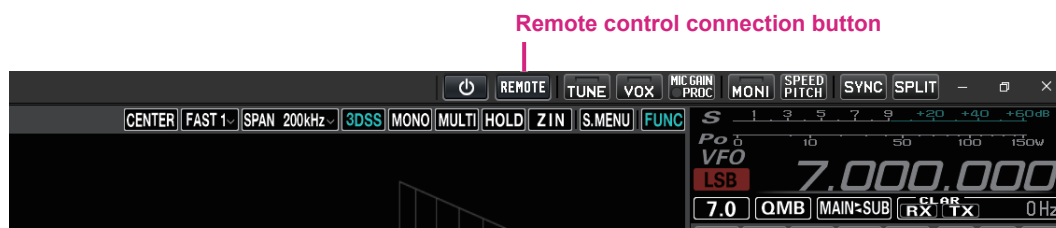

Click: When not in remote control, the transceiver automatically powers ON and remote control starts. During remote control, the transceiver remains ON and only remote control stops.



If the remote control is disconnected due to network instability, etc., you can restart the remote control by clicking the [REMOTE] button.

• Warning sign

If the warning sign illuminates or occasionally opens, there may be a problem with the network line or port open settings. Refer to the SCU-LAN10 Installation Manual and restart the settings from the beginning. Click the warning sign to see the detected issues.




Screen layout selection button

Screen layout selection button




Click: Select a screen layout from 6 types.

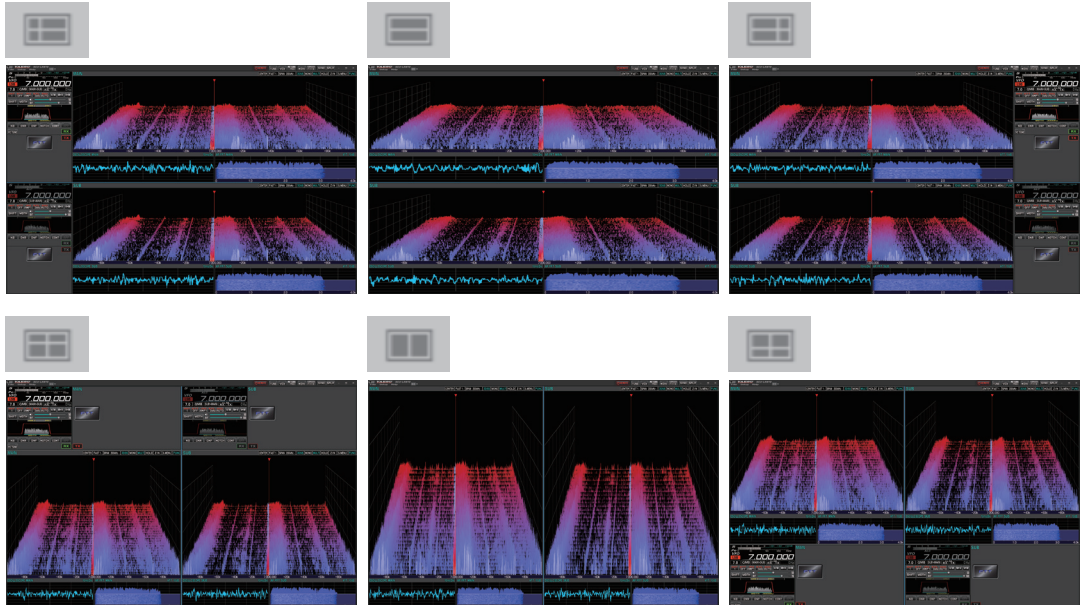

Click & Hold: To reset the size of the changed display area on the screen to the default setting.

Transmission function button

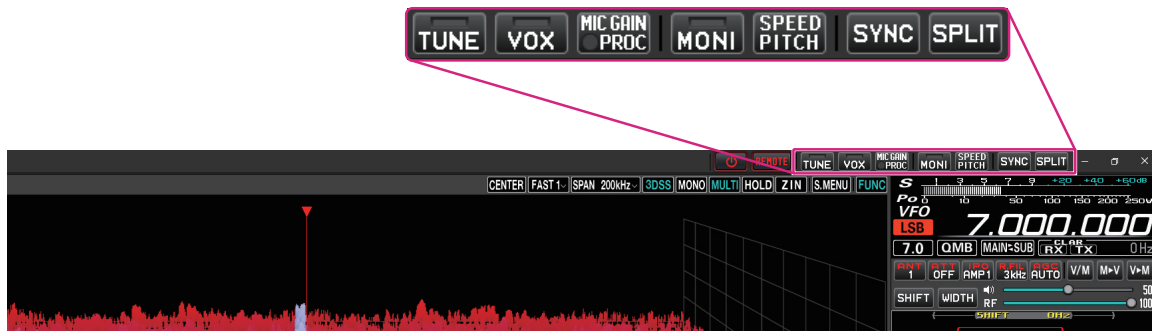

TUNE button



Click: Switches the antenna tuner ON / OFF.
When ON, the button indicator lights red.


Click & Hold: The transceiver will switch to the transmit mode, and automatically start the antenna tuner.

VOX button



Click: Switches VOX ON / OFF.
When ON, the button indicator lights red.


Right click: The VOX settings window opens.

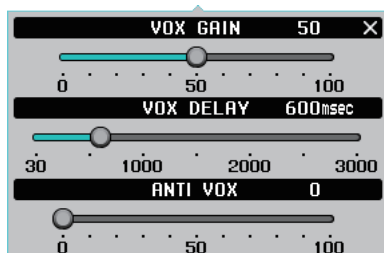

MIC GAIN/PROC button



Click: Switches the PROC ON / OFF. (Only works in LSB / USB modes)
When ON, the round indicator on the button lights red.

Right click: The MIC GAIN / AMC / PROC settings window opens.
To keep the MIC GAIN / AMC / PROC settings window displayed, click the [Pin Button]  in the upper right of the window.



MONI button



Click: Switches MONITOR ON / OFF.
When ON, the button indicator lights red.


Right click: The MONITOR level settings window opens.



SPEED/PITCH button



Click: The CW SPEED and CW PITCH settings window opens.

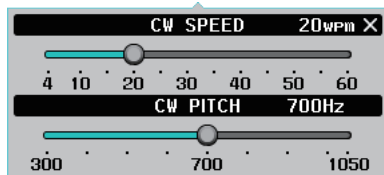

SYNC button



Click: Switches SYNC (synchro function) ON / OFF.
When ON, the button is displayed in red.

SPLIT button



Click: Switches the SPLIT function ON / OFF.
When ON, the button is displayed in red.


Click & Hold: With the quick split function, the SUB band frequency is set to the frequency of the MAIN band + the offset frequency of the quick split function (default setting: +5 kHz), and the split function is turned ON.

When the split function is ON, the offset frequency (default setting: +5 kHz) is added to the SUB band frequency each time you click and hold.


Right click: The setting screen for the offset frequency of the quick split function opens.



FUNC button (Function menu display)

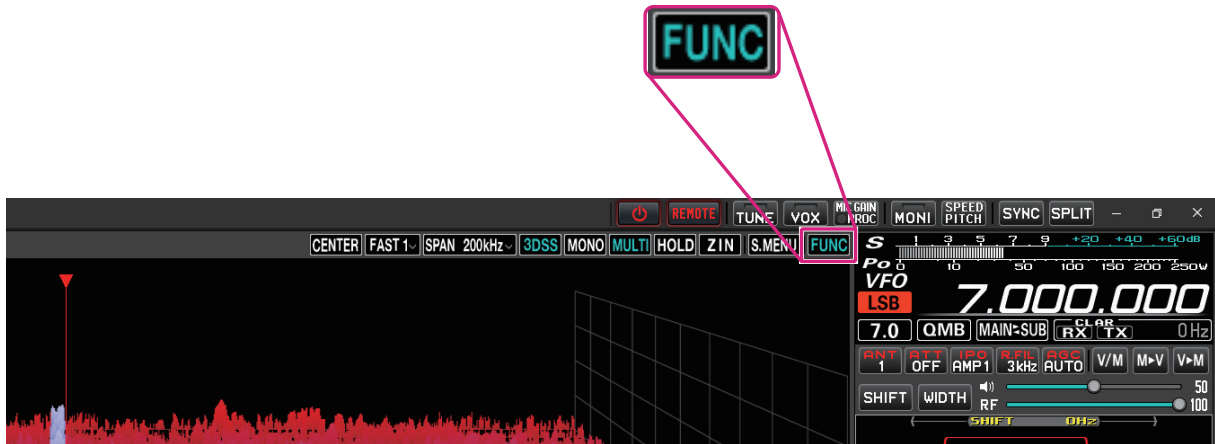




Displays the function menu screen for setting various functions. (Some items are different from the transceiver function menu display.)

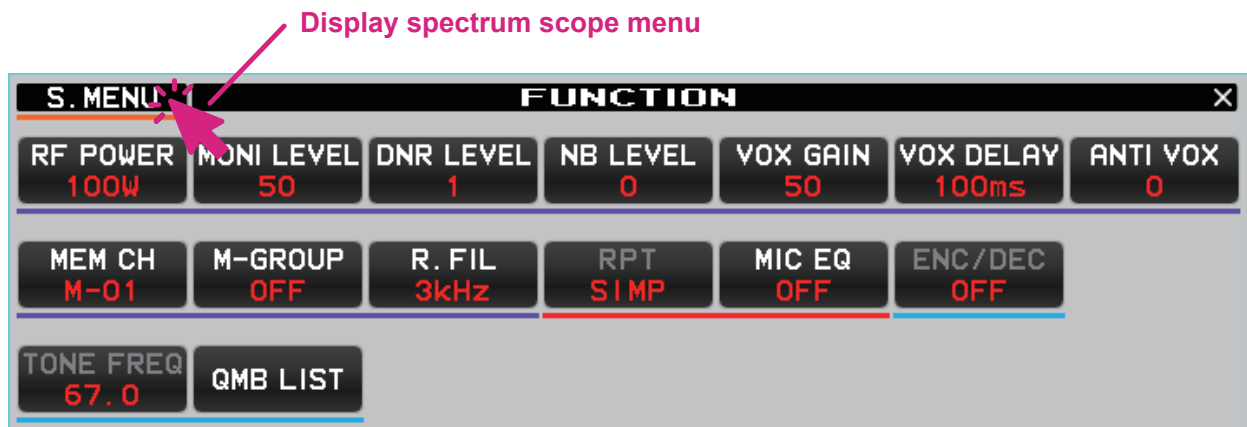

RF POWER button



   Adjust the current transmit frequency (HF / 50MHz band) or communication mode (AM mode) and the transmit output of each.



The maximum transmit power that can be set is less than or equal to the following MAX POWER set in the transceiver set mode.

SET MODE [OPERATION SETTING] → [TX GENERAL]

HF MAX POWER (HF)

50M MAX POWER (50MHz)

AM MAX POWER (AM Mode)

MONI LEVEL button

MONI LEVEL
50

Monitor level adjustment



DNR LEVEL button

DNR LEVEL
1

Set the Digital Noise Reduction response.



NB LEVEL button

NB LEVEL
0

Noise blanker level setting



VOX GAIN button

VOX GAIN
50

VOX gain setting



VOX DELAY button

VOX DELAY
500ms

 
The “Hang-Time” of the VOX system (the transmit-receive delay after the cessation of speech) may also be adjusted.



ANTI VOX button

ANTI VOX
50

The Anti-Trip setting sets the negative feedback of receiver audio to the microphone, to prevent receiver audio from activating the transmitter



MEM CH button

Selects the memory channel in memory mode.

MEM CH
M-01

Click: Select memory channels in sequence.

Wheel: Select a memory channel.

M-GROUP button

M-GROUP
OFF

Click: When the memory group function is ON, memory groups are selected in sequence.

Wheel: Selects the memory group when the memory group function is ON.

Right click: Select ON / OFF of the memory group function.

OFF ON

R.FIL button

R. FIL
3kHz

Select the bandwidth of the roofing filter. The bandwidth of the roofing filter that can be selected depends on the communication mode.

300Hz 600Hz 1.2kHz 3kHz 12kHz



- Roofing filters that are not included in the remote control transceiver are not displayed.
- 300Hz & 1.2kHz roofing filters are optional. (300Hz is included on the MAIN side with the FTDX101MP)
- Keyboard shortcuts
MAIN band: r key
SUB band: Shift + r key

RPT button

RPT
SIMP

Select the shift direction when operating through a repeater.

- SIMP +

SIMP: Both transmit and receive have the same frequency.

+ (plus): Transmit is at a higher frequency than the receive frequency (default setting is +100kHz).

- (minus): Transmit is at a lower frequency than the receive frequency (default setting is -100kHz).

MIC EQ button

MIC EQ
OFF



The parameters of the microphone equalizer cannot be set with the remote control.

ENC/DEC button

ENC/DEC
OFF

Turn the tone encoder function or tone squelch function ON.

OFF ENC TSQ

TONE FREQ button

TONE FREQ
88.5

Set the tone frequency for the tone encoder function and tone squelch function.

67.0 254.1

QMB LIST button

QMB LIST


You can check or delete the contents stored in the QMB (quick memory bank) of the current frequency band. Also, the number of QMB channels can be selected from 5ch or 10ch.

QMB LIST						X
1	--.---.---	-----	6	--.---.---	-----	10ch
2	--.---.---	-----	7	--.---.---	-----	
3	--.---.---	-----	8	--.---.---	-----	
4	--.---.---	-----	9	--.---.---	-----	
5	--.---.---	-----	10	--.---.---	-----	DELETE

Spectrum scope area


Screen operation

3DSS display

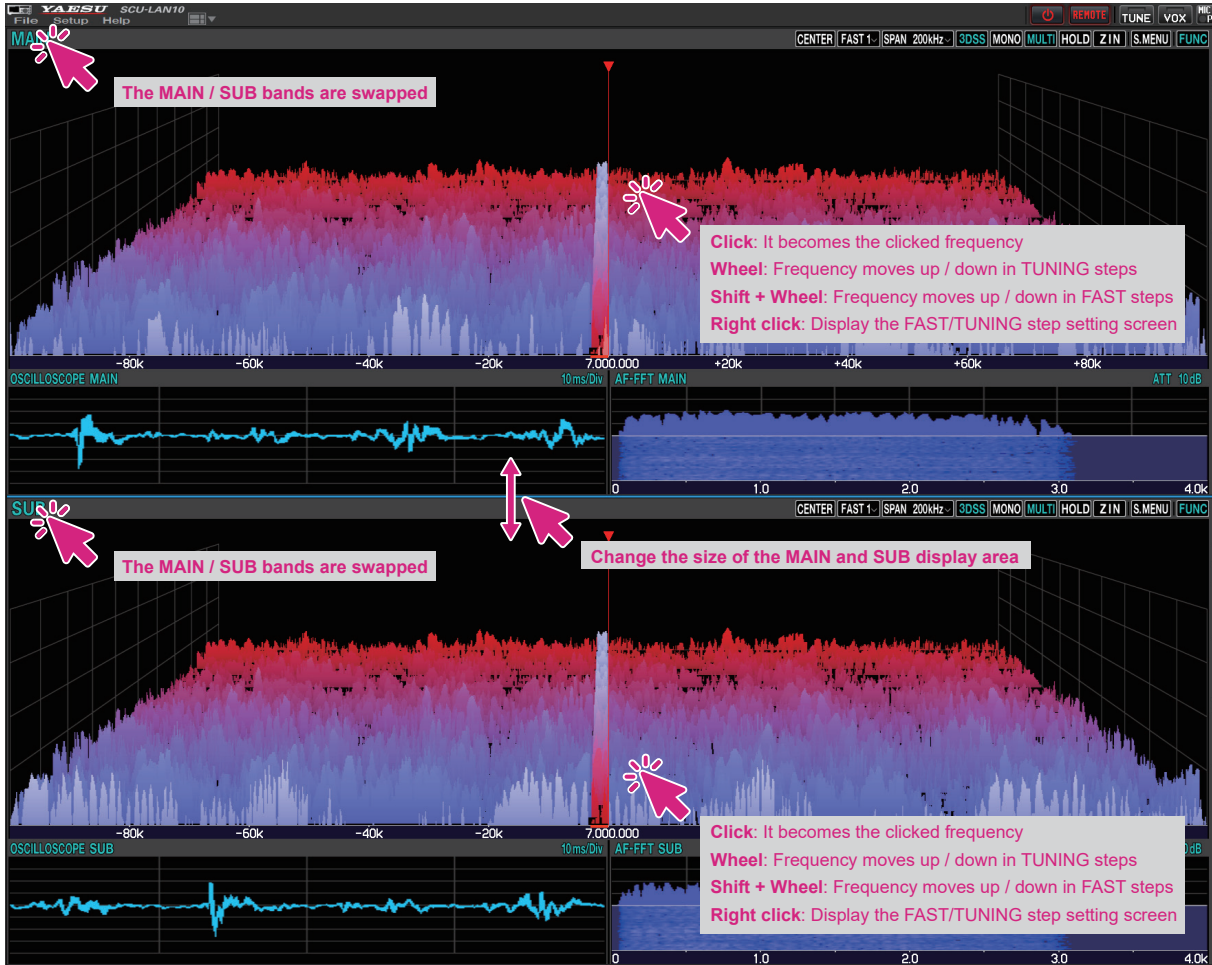

If you hold down the [SHIFT] key on the keyboard and turn the mouse wheel, the frequency will increase or decrease in FAST steps.

Water fall display

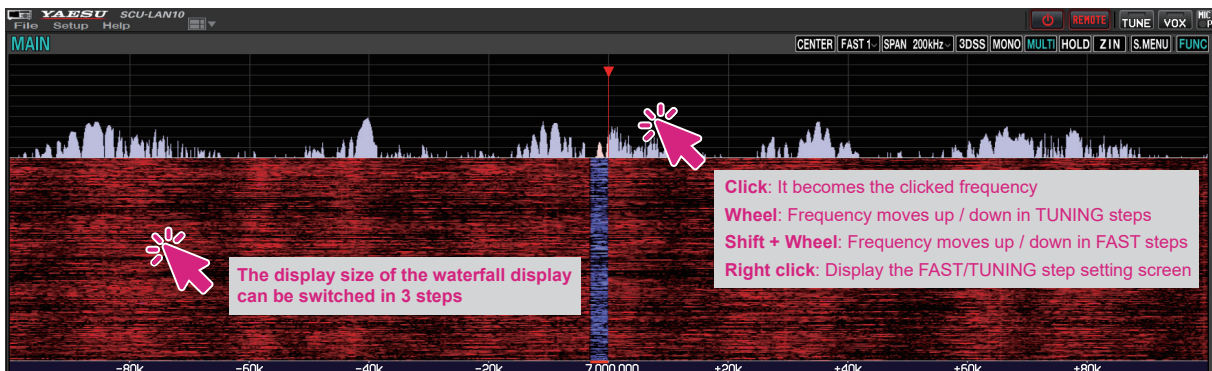

If you hold down the [SHIFT] key on the keyboard and turn the mouse wheel, the frequency will increase or decrease in FAST steps.

- **Turn the wheel to change the receive frequency**

Turn the **mouse wheel** on the spectrum scope screen to change the frequency in the set “**TUNING**” step. If you turn the **mouse wheel** while pressing the **[SHIFT]** key on the keyboard, the frequency will increase or decrease in “**FAST**” steps.

- **Click to change the receive frequency**

Click on the spectrum scope screen to jump to that frequency. You can then turn the mouse wheel to tune the frequency and hear the desired signal.

- **Right-click to change the steps**

Right-click on the spectrum scope screen to display the setting screen for the FAST step and TUNING step.


- **MAIN / SUB band display switching**



The display positions of the MAIN band and the SUB band will swap each time you click.


- **Change the size of the MAIN / SUB area**

The size* of the MAIN band and SUB band display area may be changed by dragging the mouse cursor when it changes to “↕”.


*You can initialize the size by clicking and holding the screen layout icon .

- **Resize the waterfall display area**

While the spectrum scope is in the waterfall display, the size* of the display area may be changed in 3 steps by clicking the waterfall display.

*You can initialize the size by clicking and holding the screen layout icon .

Scope function button

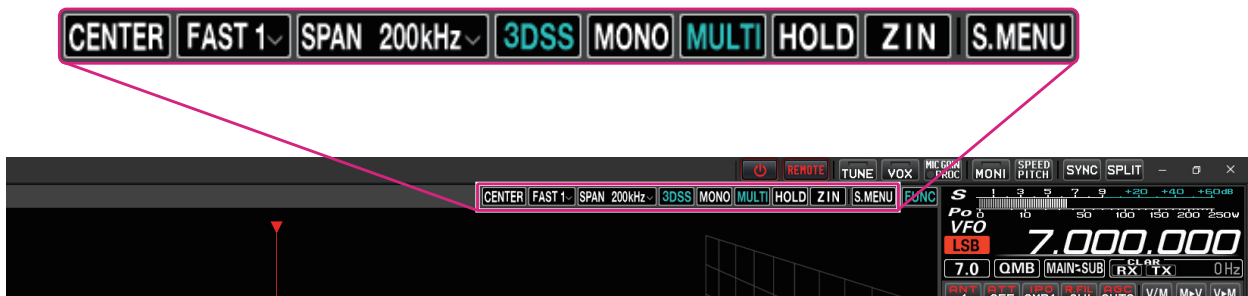

CENTER / CURSOR / FIX button



Switches the operation of the spectrum scope.

Click: The CENTER display, CURSOR display, and FIX display switch each time the button is clicked.

Click & Hold:

- If you click and hold the button while in CENTER or CURSOR, the digits below 100 Hz of the receive frequency will be zero.
- If you click and hold the button during FIX, the receive frequency will return to the scope start frequency.

Right Click: Right clicking the button during FIX will open a pop-up screen for entering the scope start frequency (left edge).



Keyboard operation:

Enter key: Finish the input (**ENT**)

Backspace key: Delete the character before the cursor (**X**)

Delete key: Delete the character (**CE**)

Esc key: Cancels input and closes the numeric keypad screen (**BACK**)

SLOW1 / SLOW2 / FAST1 / FAST2 / FAST3 buttons



Switches the scope display speed.

Click: A popup screen for selecting the speed of the scope display is displayed.



SLOW1:	sweep speed	Slow
SLOW2:	sweep speed	↑
FAST1:	sweep speed	Normal
FAST2:	sweep speed	↓
FAST3:	sweep speed	Fast



The settings for this feature apply only to the remote-control software.

SPAN button



Sets the frequency span (display range) of the scope screen.

Click: A popup screen for selecting the span of the scope display is displayed.



Keyboard shortcuts
 MAIN band: Arrow keys (Left/Right)
 SUB band: Shift + Arrow keys (Left/Right)

3DSS button



Switches between the 3DSS display and the waterfall display.

Click: The “3DSS” display and “Waterfall” display switch. When “3DSS” is displayed, the button text is displayed in green.

MONO (Dual/Mono Switching) button



The scope screen switches to the "MONO" display, which displays only one side of the MAIN band or SUB band.

Click: When "MONO" is displayed, the button flashes red.

MULTI (Multi display switching) button



Click: Switches to the "multi display" that displays the oscilloscope screen and AF-FFT screen. When "MULTI" is displayed, the button text is displayed in green.

Click & Hold: Clicking and holding the button during "Multi display" will change the display position of the oscilloscope screen and AF-FFT screen.

HOLD button



Temporarily suspends waveform drawing on both the MAIN / SUB scope screen and the receive filter screen.

Click: Switches between pause / cancel.
The button flashes red and appears during pause.

ZIN (auto Zero-in) button




While receiving a CW signal in CW mode, it can be automatically adjusted (zero-in) to the frequency of the partner station so that it matches the received PITCH (pitch).

Click: If you click while receiving a CW signal, it will automatically zero in.

S.MENU button (Spectrum scope menu display)



Displays the scope menu screen to permit settings related to the scope display.

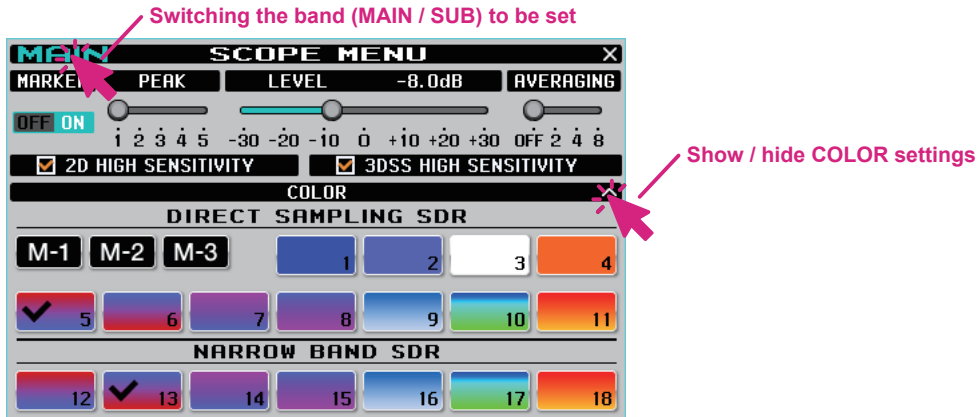


● **MARKER**



Click the button to turn the display of the receive frequency marker (green line) and transmit frequency marker (red line) ON / OFF.

i When the operation of the spectrum scope is set to “CENTER”, the center of the scope is always the receive frequency, so the receive frequency marker (green) is not displayed.

 ● **PEAK**



The color density may be adjusted to the level of the signal.

- LV1: Light
- LV2: ↑
- LV3: Normal
- LV4: ↓
- LV5: Dark

 
i The settings for this feature apply only to the remote-control software.

● **LEVEL**



Adjust the level to make it easier to distinguish between the desired signal and noise.

● **AVERAGING**



Waveforms are averaged and displayed smoothly.

OFF: Do not average

2 to 8: Display averaging ON



- The AVERAGING setting is common to the MAIN band / SUB band spectrum scope screens.
- This function is available only with the remote-control software.

● **2D HIGH SENSITIVITY**




If a check mark is added, the waterfall display sensitivity will be emphasized.

● **3DSS HIGH SENSITIVITY**



If a check mark is added, the 3DSS display sensitivity will be emphasized.

● **COLOR**

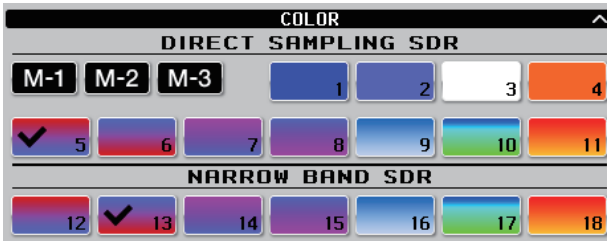

Click the preferred colors to select the display colors for the receive part of the direct sampling SDR and again for the receive part of the narrowband SDR.



The settings for this feature apply only to the remote-control software.

● **Display color memory**

You can save the set combination of display colors by clicking and holding the [M-1], [M-2] or [M-3] button. The settings can be recalled by clicking the [M-1], [M-2] or [M-3] button.


Default settings: M-1: COLOR-5, COLOR-13

M-2: COLOR-9, COLOR-17

M-3: COLOR-1, COLOR-18

Oscilloscope / AF-FFT area

Screen operation

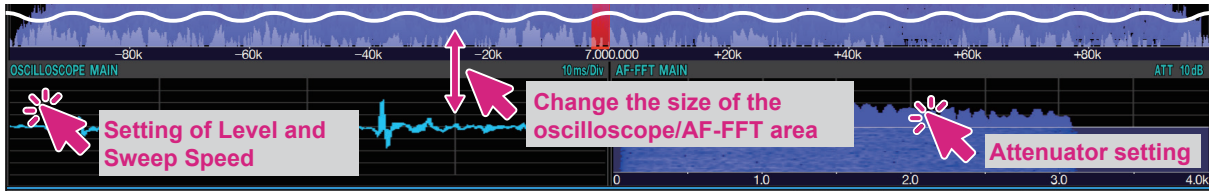

- **Resize oscilloscope / AF-FFT area**

The size* of the oscilloscope / AF-FFT display area can be reduced by dragging the title bar at the top of the oscilloscope / AF-FFT area.

*Click and hold the screen layout icon  at the top of the screen to initialize the size.

- **Click to set the level and sweep speed of the oscilloscope**

Click in the oscilloscope display area to set the waveform display level and time axis scale.



The level settings and sweep speed settings are common to the MAIN & SUB band oscilloscope screens.

- **Attenuator setting (AF-FFT)**


You can set the attenuator by clicking inside the AF-FFT display area.



The attenuator settings are common to the MAIN band & SUB band AF-FFT screen.

- **Change the display position**


You can change the display position of the oscilloscope screen and AF-FFT screen by clicking and holding the [MULTI] button during "Multi display".

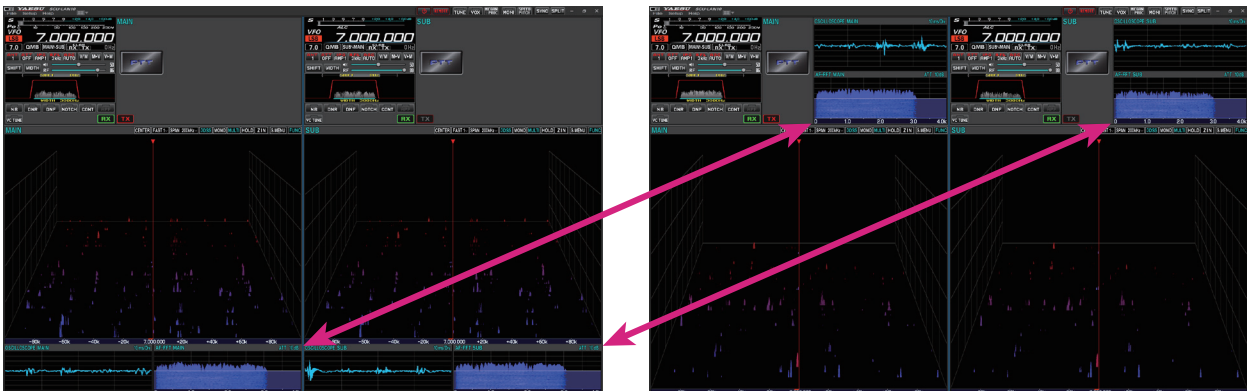

MAIN band / SUB band operation area



Meter operation selection during transmit

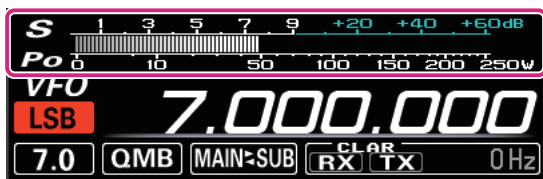


Click: To select the meter operation during transmit:




- PO: Transmission output display
- ALC: ALC voltage display
- SWR: Antenna SWR display
- COMP: AMC gain control display
(Compression level display when the speech processor is operating)
- ID: Final stage FET Drain current display
- VDD: Final stage FET Drain voltage display
- TEMP: Final FET temperature display

Selecting the memory channel

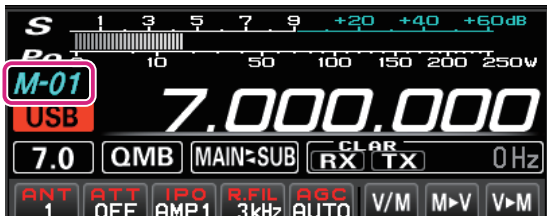

Wheel: Select the memory channel during a memory channel recall.

Selecting the QMB channel

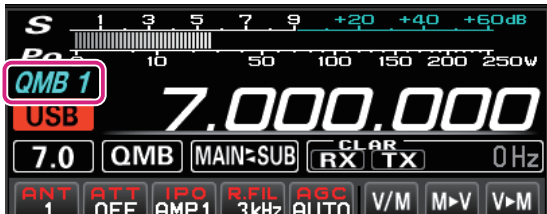


Wheel: Select the QMB channel during a QMB channel recall.



Keyboard shortcuts
MAIN band: q key
SUB band: Shift + q key

Selecting the operating mode

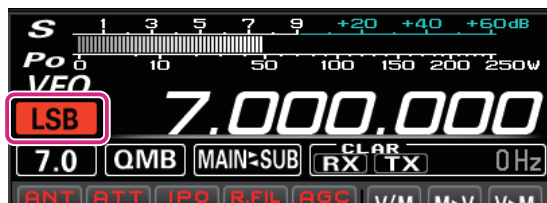

Click: Select the operating mode.



Right Click: Switch between the following modes with one touch.

LSB ↔ USB
CW-L ↔ CW-U
AM ↔ AM-N
FM ↔ FM-N
DATA-L ↔ DATA-U
DATA-FM ↔ D-FM-N
RTTY-L ↔ RTTY-U




Keyboard shortcuts
LSB/USB: F1 key (MAIN band), Shift + F1 key (SUB band)
CW-L/CW-U: F2 key (MAIN band), Shift + F2 key (SUB band)
AM: F3 key (MAIN band), Shift + F3 key (SUB band)
FM: F4 key (MAIN band), Shift + F4 key (SUB band)

Frequency change operation

Switch frequency band


Click the MHz digit or band icon to display the band selection screen.

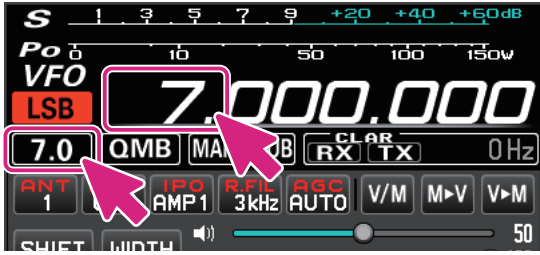

Click: Band selection



MHz digit

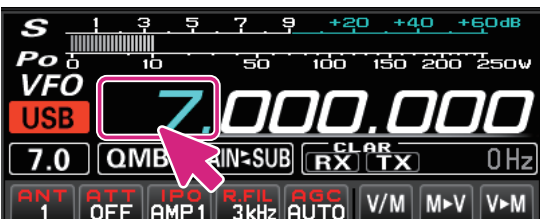


Wheel: Move frequency Up / down at 1MHz

Click: Band selection



Right Click: The numeric keypad screen pops up and you can enter the frequency. You can also click with the mouse, or enter with the number keys on your computer keyboard.

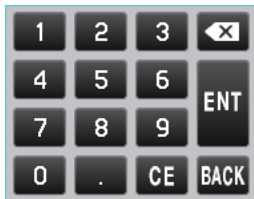

Keyboard operation:


Enter key: Finish the input (ENT)

Backspace key: Delete the character before the cursor (X)

Delete key: Delete the character (CE)

Esc key: Cancels input and closes the numeric keypad screen (BACK)

kHz digit

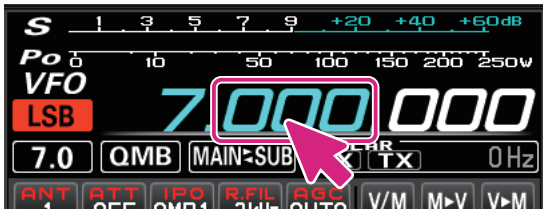

- Wheel:** Frequency moves up/down in FAST steps
- Click:** Click the upper half / lower half of the number move the frequency up/down in FAST steps
- Drag up and down:** Frequency changes up / down in FAST step
- Right Click:** Display the setting screen of FAST step / TUNING step



By holding down the [SHIFT] key on the keyboard and clicking the number of each digit, you can zero the numbers below that digit with one touch.

Hz digit




- Wheel:** Frequency goes up / down in TUNING step
- Click:** Click the upper half / lower half of the number to frequency goes up / down the frequency in TUNING steps
- Drag up and down:** Frequency continuously increases / decreases in TUNING steps
- Right Click:** Displays the FAST step / TUNING step setting screen



- In the frequency display, turning the wheel while pressing the [SHIFT] key on the keyboard does not result in the FAST step.
- By holding down the [SHIFT] key on the keyboard and clicking the number of each digit, you can zero the numbers below that digit with one touch.
- Keyboard shortcuts
 - MAIN band: Page Up / Page Down keys
 - SUB band: Shift + Page Up / Page Down keys

QMB Operation

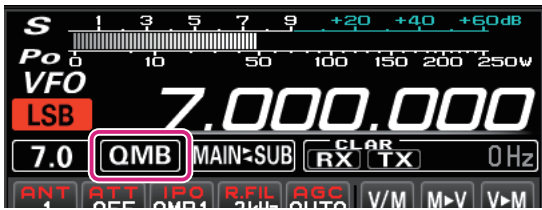

Click: Recalls the information stored in QMB in order.



- You can select a QMB channel by turning the wheel while hovering the mouse over the QMB channel number display while recalling QMB.
- Keyboard shortcuts
 MAIN band: q key
 SUB band: Shift + q key

Click & Hold: Stores up to 5 or 10 channels of the current operating status in a dedicated memory channel (QMB: Quick Memory Bank).


Right Click: A list of QMB memories will be displayed.

QMB LIST						
1	--.---.---	-----	6	--.---.---	-----	10ch
2	--.---.---	-----	7	--.---.---	-----	
3	--.---.---	-----	8	--.---.---	-----	
4	--.---.---	-----	9	--.---.---	-----	
5	--.---.---	-----	10	--.---.---	-----	DELETE

Click the QMB channels you want to delete and click the [DELETE] button to delete them.


Click the [5ch] or [10ch] button to switch the number of QMB channels.

MAIN \rightrightarrows SUB / SUB \rightrightarrows MAIN operation

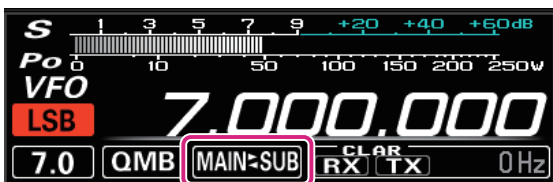

Click: The frequency data of MAIN band and SUB band are exchanged.

CLAR (Clarifier) operation

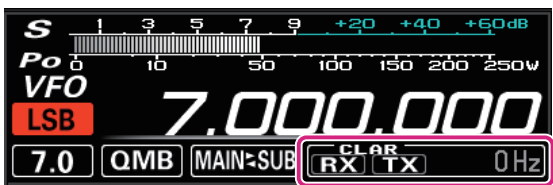


Click: Click the [RX] or [TX] button to turn the RX clarifier or TX clarifier ON.

Wheel: When the mouse wheel is rotated on the display of the offset amount (difference between reception frequency and transmission frequency), the offset amount changes in 10Hz or 100Hz steps (AM / FM / DATA-FM / D-FM-N).

Click & Hold: Click and hold the [RX] or [TX] button to clear the offset amount.

Receiver setting operation

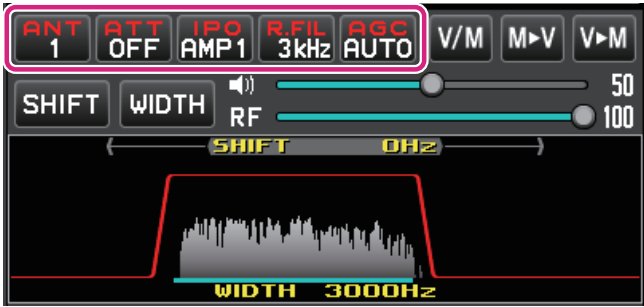

ANT (Switching the Antenna) button



The currently used antenna jack number (“ANT 1”, “ANT 2”, “ANT 3/RX”) is displayed.

Click: Select the antenna terminal.



ATT (Attenuator) button



Displays the current ATT (Amount of receive input signal attenuation).

Click: Select the attenuation level.



IPO (Intercept Point Optimization) button



Displays the current IPO (Intercept Point Optimization). can establish the gain of the RF amplifier section to accommodate the connected antenna and the received signal conditions.

Click: Select from IPO, AMP1 (Approximately 10 dB gain) and AMP2 (Approximately 20 dB gain).



R.FIL (Roofing Filter Switching) button



Displays the bandwidth of the currently selected roofing filter.

Click: Switches the crystal roofing filters of 300Hz, 600Hz, 1.2kHz, 3kHz, and 12 kHz that are installed in this transceiver.



- Roofing filters that are not included in the remote control transceiver are not displayed.
- 300Hz & 1.2kHz roofing filters are optional. (300Hz is included on the MAIN side with the FTDX101MP)
- Keyboard shortcuts
MAIN band: r key
SUB band: Shift + r key

AGC (Automatic Gain Control) button



Displays the currently selected AGC setting. The AGC system is designed to help compensate for fading and other propagation effects.

Click: Select from OFF, AUTO, FAST, MID and SLOW. The “AUTO” selection mode selects the optimum receiver-recovery time for the reception mode.



Memory channel operation



V/M button



When the memory channel list is not displayed:

Click: The VFO and the last used memory channel will be recalled alternately.

Click & Hold: Open the memory channel list.

When the memory channel list is displayed:

Click: Close the memory channel list.

M>V button



When the memory channel list is not displayed:

Click: Open the memory channel list.

When the memory channel list is displayed:

Click: The data saved in the memory channel selected in the memory channel list will be transferred to the VFO, and the memory channel list will close.

V>M button



When the memory channel list is not displayed:

Click: Open the memory channel list.

Click & Hold: The VFO data will be written to the memory channel that was last called / written.

When the memory channel list is displayed:

Click: Close the memory channel list.

Click & Hold: The VFO data will be written to the memory channel selected in the memory channel list.

Memory channel list operation

CH	FREQ	MODE	NAME	SCAN MEMORY	DISPLAY TYPE
M-01	7.000.000	LSB		SCAN	FREQ
M-02	7.000.000	LSB		SCAN	FREQ
M-03	14.000.000	LSB		SCAN	FREQ
M-04	--.---.---	-----	-----	----	----
M-05	--.---.---	-----	-----	----	----
M-06	--.---.---	-----	-----	----	----

GET DATA
 RECALL-MAIN
 M-VFO MAIN
 MAIN-M
 SEND DATA
 RECALL-SUB
 M-VFO SUB
 SUB-M
 ERASE



The window can be expanded to increase the number of channels displayed by dragging the bottom border of the memory channel list screen.

Read memory data from radio



The data of all memory channels stored in the transceiver can be read into the remote-control software.



When memory data is read from the transceiver, the memory data currently set in the remote-control software will be overwritten.



If the memory data currently held by the remote-control software is written to a different model transceiver, the transferred initial values may not match the different model. Be very careful when writing data to other models.

Click: A confirmation screen is displayed. Click [YES] to load.

Right click: Displays the date and time when the memory data was last read.

Transfer memory data to transceiver



The data of all memory channels stored in the remote-control software can be transferred to the transceiver.



In the remote-control software, in addition to the memory data stored in the transceiver, the remote-control software has memory data independently.



When reading data from a different model transceiver than the memory data currently held by the remote-control software, all the data stored in the memory channels, including the model-dependent data, is transferred and overwritten. Please be careful when reading data from other models.

Click: A confirmation screen is displayed. Click [YES] to transfer.

Right click: Displays the date and time when the memory data was last transferred.

Recall memory channel



Click: Recall the data of the selected memory channel in the MAIN band or SUB band.

Move memory data to VFO



Click: Transfers the data of the selected memory channel to the MAIN band or SUB band.

Write to memory



Click: Writes information such as the MAIN band or SUB band frequency and operation mode to the selected memory channel.

Erase / Resume Memory Channel




Click: Erases or restores the selected memory channel.

Right click: A confirmation screen is displayed. Click [YES] to initialize all memory information.



Memory channel "M-01" cannot be erased.

Editing memory channels

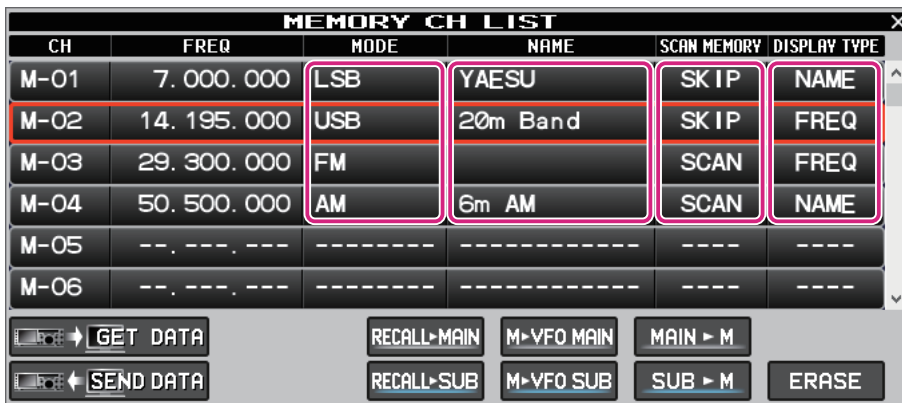

You can edit the contents of the memory channel by right-clicking the MODE, NAME, SCAN MEMORY, and DISPLAY TYPE fields.

● MODE

Select the operation mode.



● NAME

Edit the alpha tag (maximum 12 characters) of the memory channel.

● SCAN MEMORY

When scanning the memory, set the channels you do not want to scan to "SKIP".




● DISPLAY TYPE

Set the display when the memory is called to "frequency display" or "alpha tag display".



AF Gain / RF Gain adjustment

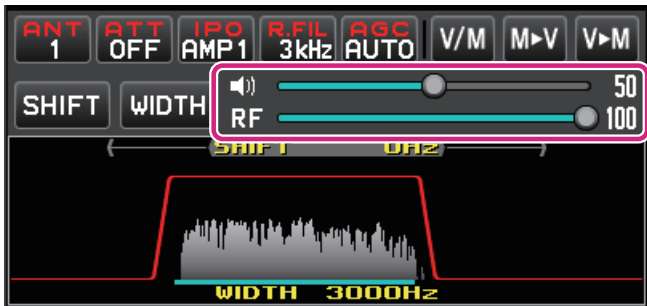

AF (Speaker icon)

Turn the mouse wheel over the slide bar or drag or click to adjust the receive volume.



Each time you click the speaker icon, MUTE & MUTE cancel will switch.


RF (RF GAIN) / SQL

Turn the mouse wheel over the slide bar or drag or click to adjust the RF gain.



Right-click on RF to select whether to adjust RF gain or SQL level.

SHIFT/WIDTH operation

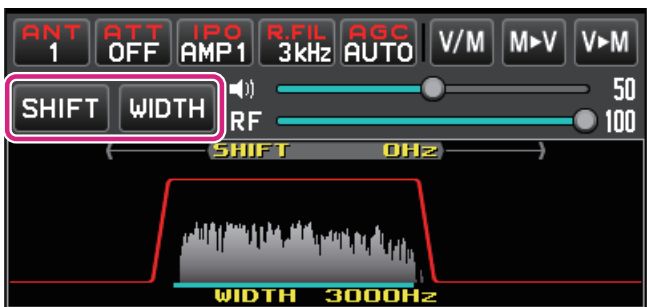

SHIFT button



Click: When the button is blue, the IF filter shift frequency can be changed by operating the mouse in the filter function display area.



Keyboard shortcuts
MAIN band: s key
SUB band: Shift + s key

Click & Hold: The IF filter shift frequency returns to 0 Hz.



When the radio wave format cannot be shifted, the button is grayed out.

WIDTH button



Click: When the button is blue, you can change the IF filter bandwidth by operating the mouse in the filter function display area.



Keyboard shortcuts
MAIN band: w key
SUB band: Shift + w key

Click & Hold: The IF filter bandwidth returns to the initial value.



The button is grayed out for radio wave formats where the bandwidth cannot be changed.

Operation of the filter function display area



Right Click: You can select to show / hide the spectrum display of the signal in the filter function display area.



Interference Reduction Systems operation




NB (Noise blanker) button



Click: The noise blanker function turns ON / OFF.

Right click: The operation setting of the noise blanker function can be changed.

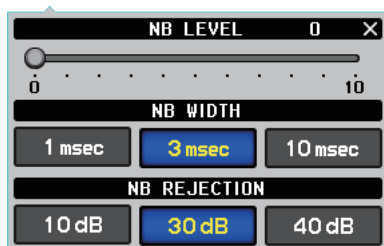

DNR (Digital Noise Reduction) button



- Click:** The digital noise reduction function turns ON / OFF.
- Right click:** You can set the level of the digital noise reduction function.



DNF (Digital NOTCH Filter) button

 


- Click:** The digital NOTCH filter function turns ON / OFF.

NOTCH (IF NOTCH Filter) button



- Click:** The IF NOTCH filter function turns ON / OFF.




- Right click:** The bandwidth of the IF NOTCH filter function can be selected.




CONT (Contour) button



 
- Click:** The Contour function turns ON / OFF.



- Right click:** The attenuation and bandwidth of the contour function can be set.

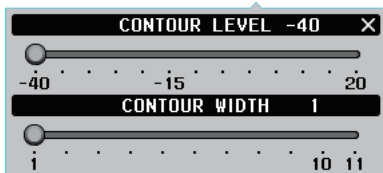


APF (Audio Peak Filter) button

 

- Click:** The APF function turns ON / OFF.
- Right click:** The bandwidth of the APF function can be set.



VC TUNE operation

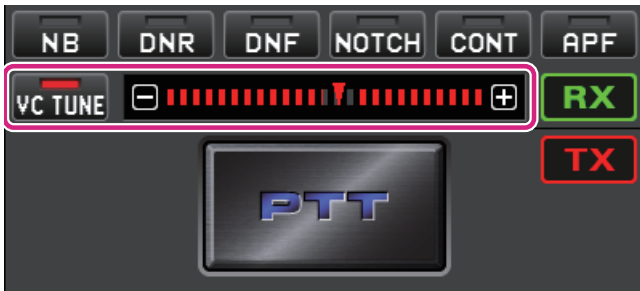

VC TUNE button



Click: The VC TUNE function turns ON / OFF.



When the VC TUNE function is on, the center meter of the tuning point is grayed out at frequencies that cannot be used.

Click & Hold: When the tuning point is finely adjusted by the following operation, it automatically returns to the optimum tuning point.

- **Fine-tune the tuning points**

Fine adjustments can be made by clicking or on the VC tune bar graph or operating the mouse wheel. Also, you can click the bar graph to adjust with a slightly larger amount of change.

RX/TX buttons operation



RX button



When clicked and grayed out, the receive audio of the band is muted. Click again to unmute.



Even when the audio is muted, the spectrum of the spectrum scope and the signal spectrum in the filter function display area are visible.

TX button



Each time you click the TX button, the transmit band switches between the MAIN band and SUB band.

PTT operation



PTT


Click & Hold: To transmit




Right click: To switch the button function between "PTT" and "MOX".



MENU bar

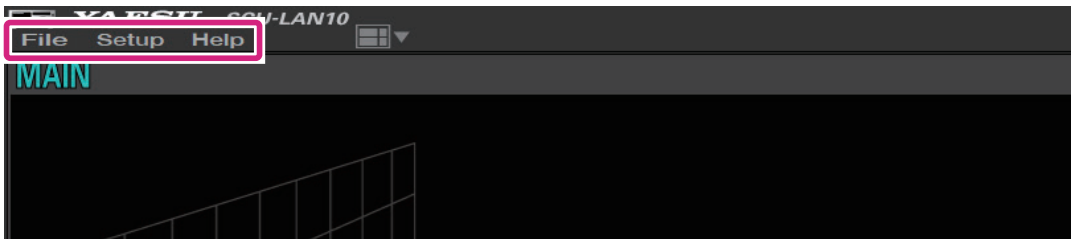


File

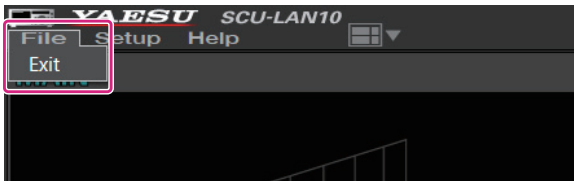


Exit: Closes the remote-control software.

Setup

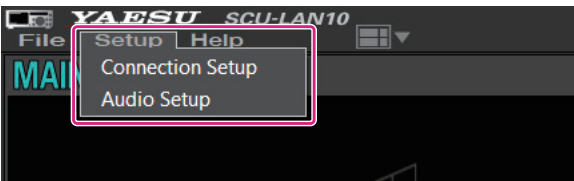


Connection Setup: Make settings related to connection with SCU-LAN10.
There is no need to change it if you have set it once at the beginning.

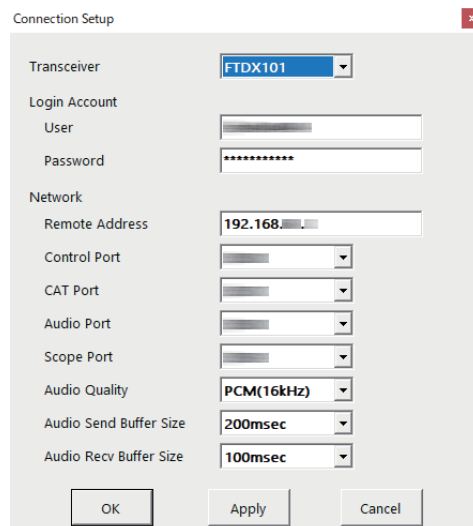

While remotely connected to the SCU-LAN10, it is grayed out and you can only check the settings.

For details, refer to the SCU-LAN10 Installation Manual.

Audio Setup: Opens the audio level settings screen.

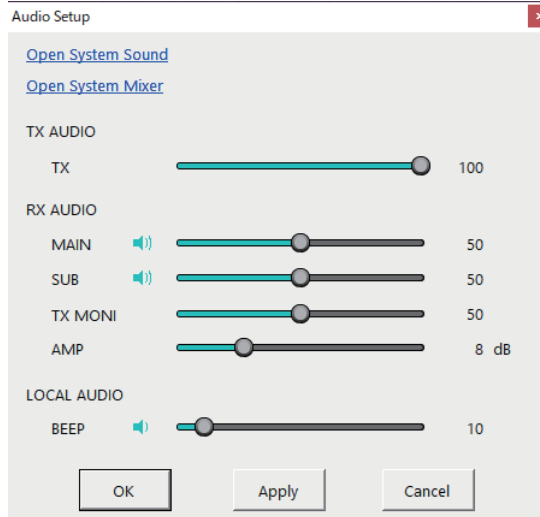

Open System Sound
Open System Mixer

The Windows **“Sound”** screen appears.

The Windows **“Volume Mixer”** screen appears.

 
For details on adjusting the volume on Windows, refer to the SCU-LAN10 Installation Manual.

TX AUDIO

TX

Adjust the transmit modulation level.

This adjustment is the same as adjusting the MIC GAIN adjustment bar that appears when you right-click the MIC GAIN / PROC button



RX AUDIO

MAIN

Adjusts the receive volume of the MAIN band.

This adjustment is the same as adjusting the volume control bar on the MAIN band operation block.



SUB

Adjusts the receive volume of the SUB band.

This adjustment is the same as adjusting the volume control bar on the SUB band operation block.



TX MONI

Adjusts the volume of the transmitted audio that is monitored by the monitor function.

This adjustment is the same as the MONI adjustment bar that appears when you right-click the **MONI** button.



AMP

Adjust this when the receive audio of the MAIN / SUB band or the TX MONI volume is extremely low or distorted even when the Windows volume adjustment or the above volume adjustment is performed. Normally you do not need to change. (Factory setting: 8 dB)

LOCAL AUDIO


BEEP

Adjusts the beep volume when operating the remote-control software.



If the volume is extremely low even if you adjust it on the “Audio Setup” screen, or if the sound is too loud and distorted, use Windows to adjust the volume. For details on adjusting the volume on Windows, refer to the SCU-LAN10 Installation Manual. If you are still unable to make adjustments, change the RX AUDIO “AMP” setting above.

Help

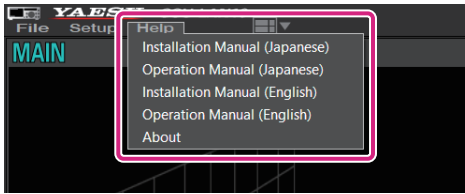

- Installation Manual (Japanese):** Open the Installation Manual (Japanese)
Operation Manual (Japanese): Open the Operation Manual (Japanese)
Installation Manual (English): Open the Installation Manual (English)
Operation Manual (English): Open the Operation Manual (English) (This Manual)

About: Displays information about this software.

Shortcut keys

The functions in the table below can be operated with the keys on the PC keyboard.

Function	Shortcut	
	MAIN band	SUB band
Spectrum scope span (wide)	Cursor key Right (→)	Shift + Cursor key Right (→)
Spectrum scope span (narrow)	Cursor key Left (←)	Shift + Cursor key Left (←)
VFO frequency Up	Page Up key	Shift + Page Up key
VFO frequency Down	Page Down key	Shift + Page Down key
AF GAIN Up	Cursor key Up (↑)	Shift + Cursor key Up (↑)
AF GAIN Down	Cursor key Down (↓)	Shift + Cursor key Down (↓)
SHIFT function select	s key	Shift + s key
WIDTH function select	w key	Shift + w key
Roofing filter select	r key	Shift + r key
NOTCH function select	n key	Shift + n key
CONTOUR function select	c key	Shift + c key
Mode select (LSB / USB)	F1 key	Shift + F1 key
Mode select (CW-L / CW-U)	F2 key	Shift + F2 key
Mode select (AM)	F3 key	Shift + F3 key
Mode select (FM)	F4 key	Shift + F4 key
QMB recall	q key	Shift + q key
PTT (Transmission)	Space key	

Basic Operation (FTDX10)


Starting the SCU-LAN10 Remote Software

1. Click the Windows **Start** button, and then click the [YAESU SCU-LAN10] icon in the “Yaesu Musen” group to start the remote-control software.




- You can also double-click the [YAESU SCU-LAN10] icon on the desktop to start the remotecontrol software.
- If the transceiver (FTDX10) to be used is not set to “**Connection Setup**” of the “**Setup**” menu on the upper left of the screen, some functions and the screen display will not work properly. For details on the settings, refer to “**SCU-LAN10 Installation Manual**”.
- When connecting to the SCU-LAN10 for the first time, the “**Connection Setup**” screen will be displayed automatically. Set it by referring to the “**SCU-LAN10 Installation Manual**”.

2. Click the [] button.

The “  ” button and the “**REMOTE**” button turns red during remote control.



- The [REMOTE] button starts or stops the remote control. Click the [REMOTE] button to turn it ON automatically when the transceiver is turned OFF. If the remote control is disconnected due to network instability, you can restart it by clicking the [REMOTE] button.
- When using the remote-control software for the first time, a warning screen of Windows or firewall software may appear. In this case, set it to allow (unblock) Internet access from the remote-control software.

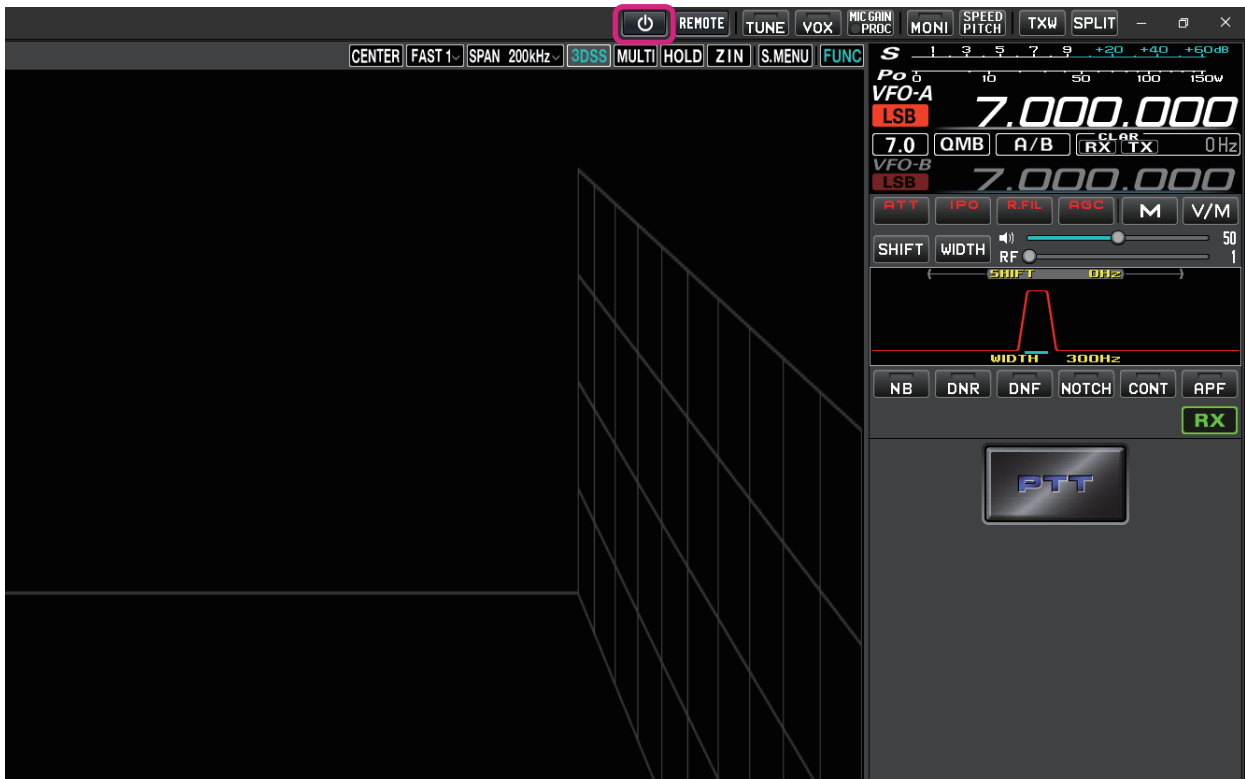


Remote control software screen


By default, the MAIN band is displayed on the upper area of the screen, the SUB band is displayed on the lower area, the spectrum scope is displayed on the left side of the screen, and the frequency and meter are displayed on the right side.



- The size and layout of each area will be adjusted automatically depending on the screen resolution of your computer, so the display may differ slightly from the example below.
- In the display example below, the **[MULTI]** button is may be clicked to display the oscilloscope and the AF-FFT.

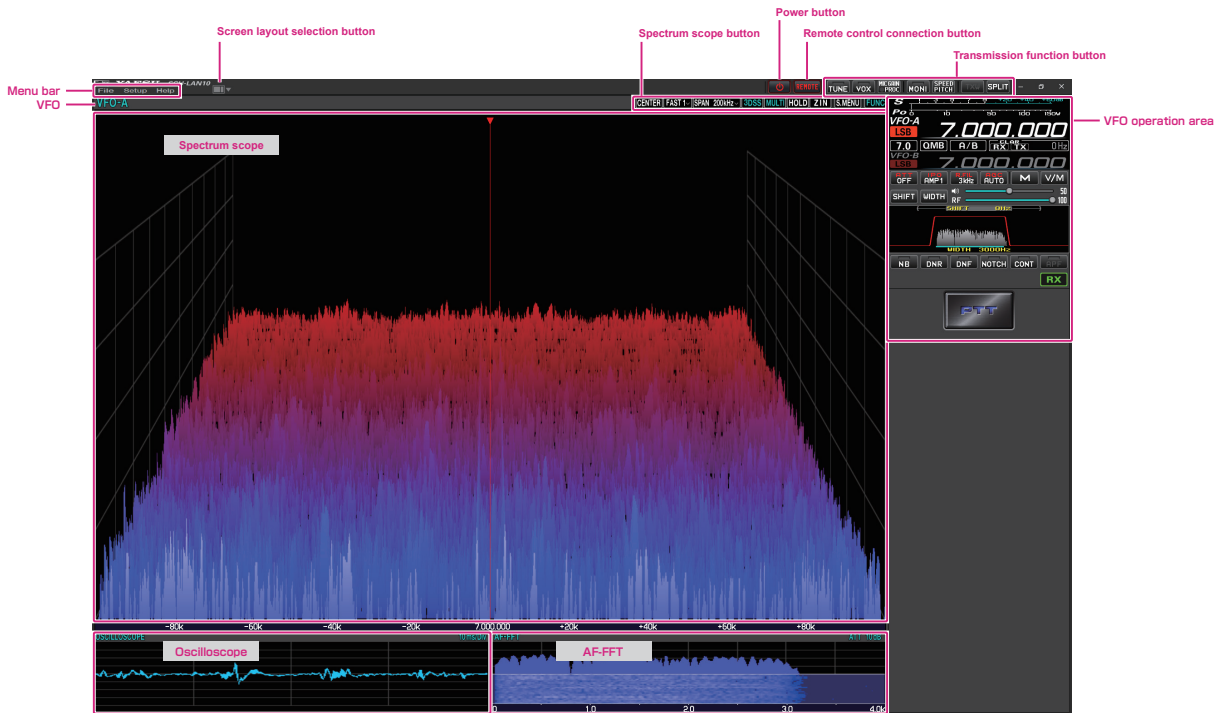

Select screen layout

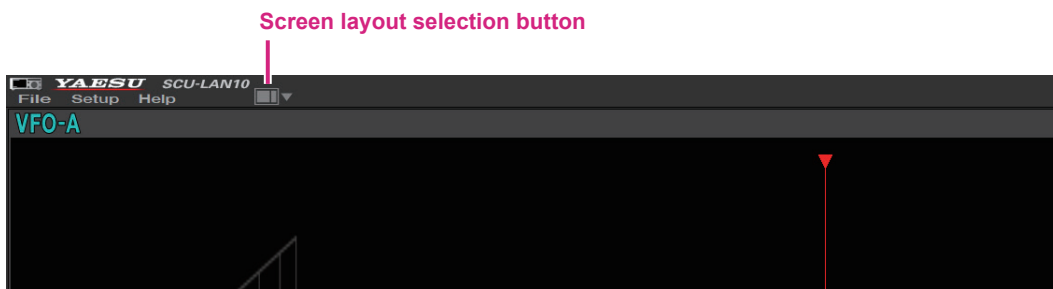


Click: Select the screen layout from 5 types.



Click & Hold: Returns the size of each area on the screen to the default settings.

Adjusting the receiver volume

AF GAIN (Speaker icon)

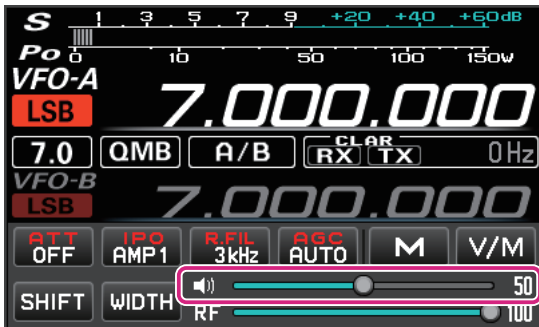

Turn the **mouse wheel**, or drag or click on the slide bar to adjust the receive audio to a comfortable volume.




- Each time you click the speaker icon, mute & mute cancel are switched.
- Keyboard shortcuts
Arrow keys (Up/Down)

Change frequency

Switch frequency band

1. Click the MHz digit or the Band icon to display the band selection screen.

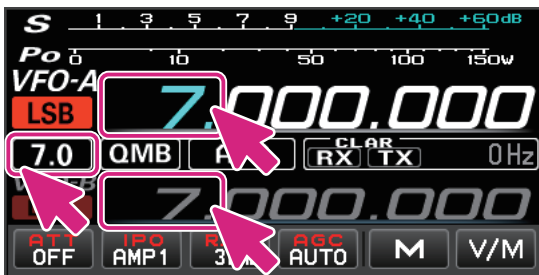

2. Click the desired band.




Change frequency

There are three ways to change the frequency:

(1) Mouse wheel operation and drag operation

• MHz digit


1. When you mouse over the MHz digit of the frequency, the number turns green.

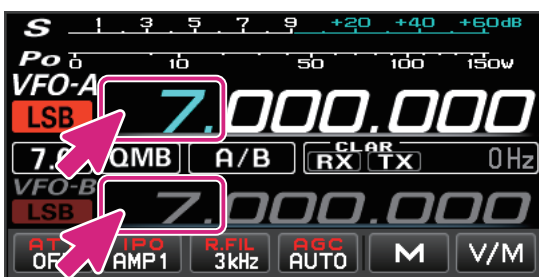

2. In this state, turning the mouse wheel will change the frequency in 1MHz steps.

● kHz digit

1. When you mouseover the 3 digits of the frequency from 100kHz to 1kHz, the digits higher than 1kHz turn green.

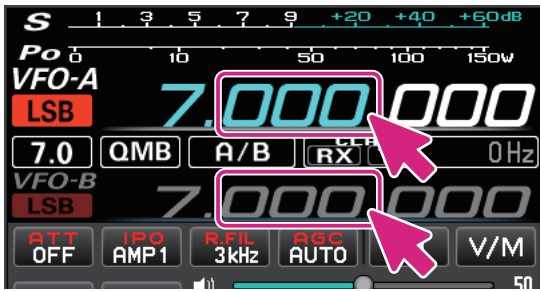


2. In this state, turning the mouse wheel will change the frequency in the set “FAST” step.
 - Click in the upper or lower half of the number to increase or decrease the frequency in the set “FAST” step.
 - If you move the mouse up or down while clicking the number, the frequency will change continuously with the set “FAST” step.
 - Right-click on the 100kHz or 1Hz digit to select the FAST step or TUNING step. For details, see “Changing the tuning step” on the next page.



By holding down the [SHIFT] key on the keyboard and clicking a number from 100kHz to 1Hz, you can zero the numbers below that digit with a single touch.

● Hz digit

1. When you mouseover the 3 digits of the frequency from 100Hz to 1Hz, all the digits of the frequency change to green.

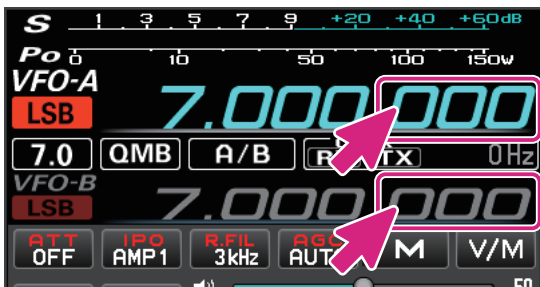


2. In this state, turning the mouse wheel will change the frequency in the set “TUNING” step.
 - Click in the upper or lower half of the number to increase or decrease the frequency in the set “TUNING” steps.
 - If you click the number and then move the mouse up or down, the frequency will change continuously at the “TUNING” step.
 - Right-click on the 100kHz or 1Hz digit to select the FAST step or TUNING step. For details, see “Changing the tuning step” on the next page.



- By holding down the [SHIFT] key on the keyboard and clicking a number from 100kHz to 1Hz, you can zero the numbers below that digit with a single touch.
- Turning the wheel while holding down the [SHIFT] key on the keyboard does not change the TUNING step to the FAST step.
- Keyboard shortcuts
 - Current VFO: Page UP key/Page Down key
 - Opposite VFO: Shift + Page UP key/Shift + Page Down key


- **Change the frequency step**

1. Right-click on the digit from 100kHz to 1Hz of the frequency to display the setting screen for the FAST step and TUNING step.
2. Click on the desired FAST step or TUNING step.

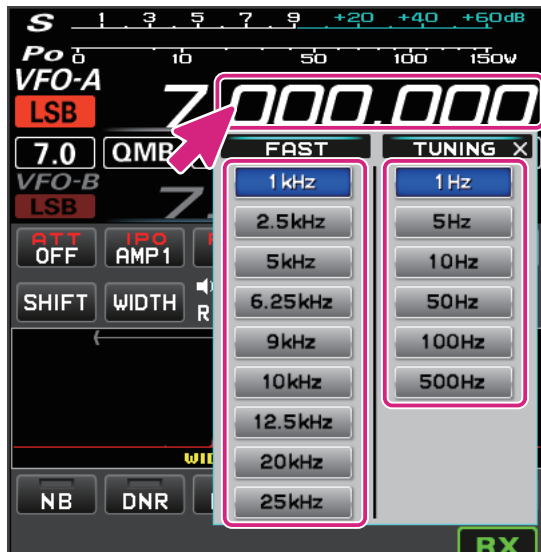

(2) Change the frequency on the spectrum scope screen

1. Move the mouse cursor to the display area of the spectrum scope and turn the mouse wheel to change the frequency in the set "TUNING" step.
 - In the Spectrum Scope screen, press and hold the [SHIFT] key on the keyboard and turn the mouse wheel to increase or decrease the frequency in the set FAST steps.
 - When you click on the point you want to receive such as the peak of the signal on the spectrum scope screen, the frequency jumps to the vicinity. You can then turn the mouse wheel to fine tune the frequency and hear the desired signal.

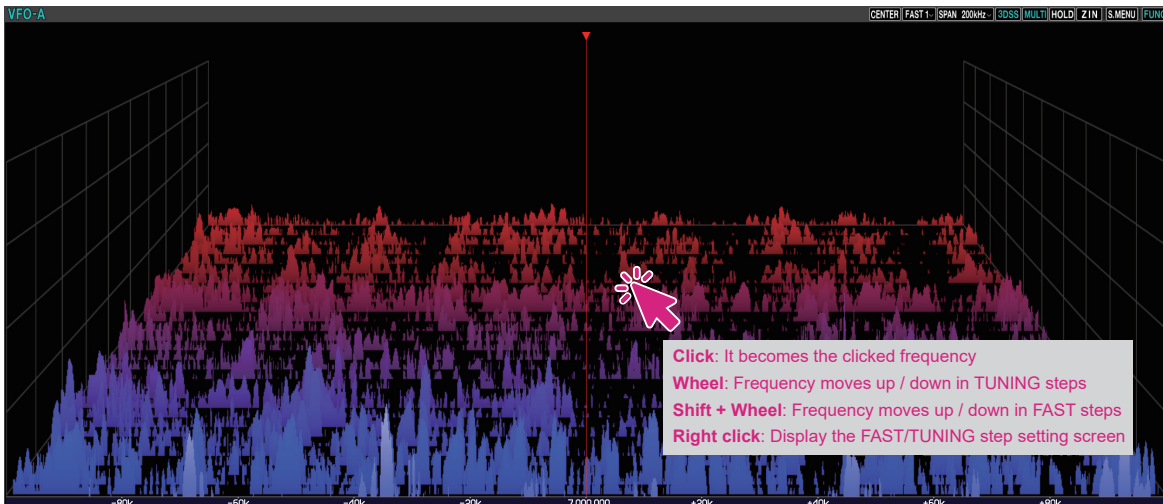


(3) Enter the frequency on the numeric keypad screen

1. Right-click on the MHz digit of the frequency to display the numeric keypad screen.



2. You can enter the frequency by clicking on the screen or using the keys on your computer.

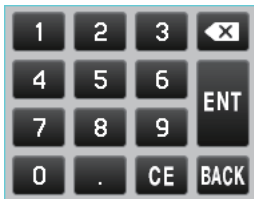

Keyboard operation:

Enter key: Finish the input (**ENT**)

Backspace key: Delete the character before the cursor (**⌫**)

Delete key: Delete the character (**CE**)

Esc key: Cancels input and closes the numeric keypad screen (**BACK**)

● Select mode

1. Click the mode icon.



2. Click on the desired mode.




- You can right-click the mode icon to switch between the following modes with one touch:
LSB↔USB; CW-L↔CW-U; AM↔AM-N; FM↔FM-N; DATA-L↔DATA-U; DATA-FM↔D-FM-N; RTTY-L↔RTTY-U



- Keyboard shortcuts
LSB / USB: F1 key
CW-L / CW-U: F2 key
AM: F3 key
FM: F4 key

Meter operation selection during transmit

1. Click on the S/Power meter.

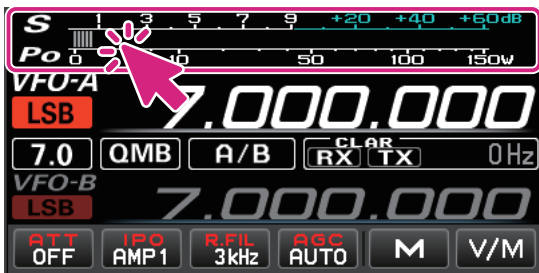

2. Click on the desired meter function.



Transmitting

1. While clicking and holding the **PTT** button, the transceiver will be in transmit status.
The TX icon is displayed above the frequency during transmission.



 Keyboard shortcuts
Space key

2. Speak into the microphone of the computer.
3. Release the PTT button to return to receive.

● Change to the MOX button

Change the PTT button to the MOX button.


1. Right-click the PTT button to display the “PTT” and “MOX” setting screens.



2. Click MOX.


On Screen Functions & Controls (FTDX10)

Power button

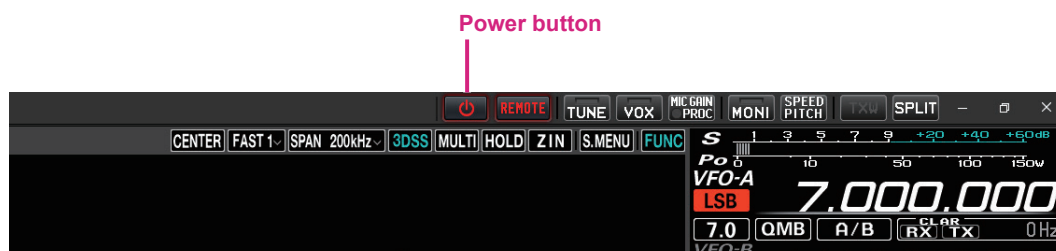

Click: When not in remote control, the transceiver automatically powers ON and remote control starts. During remote control, the transceiver automatically turns OFF and remote control stops.

Remote button

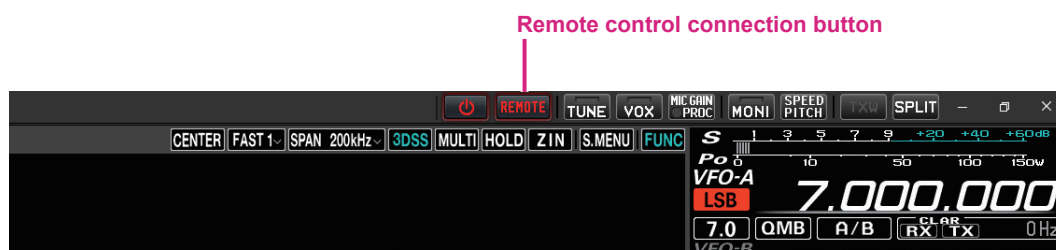


Click: When not in remote control, the transceiver automatically powers ON and remote control starts. During remote control, the transceiver remains ON and only remote control stops.



If the remote control is disconnected due to network instability, etc., you can restart the remote control by clicking the [REMOTE] button.

• Warning sign

If the warning sign illuminates or occasionally opens, there may be a problem with the network line or port open settings. Refer to the SCU-LAN10 Installation Manual and restart the settings from the beginning. Click the warning sign to see the detected issues.

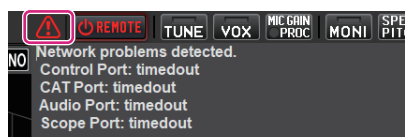






Screen layout selection button

Screen layout selection button




Click:

Select a screen layout from 5 types.

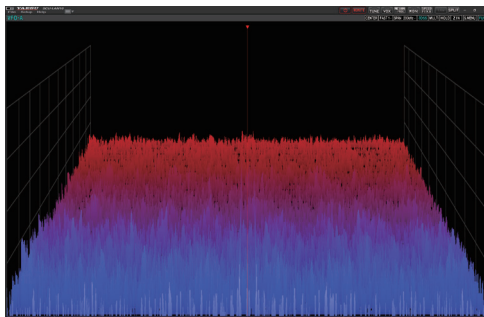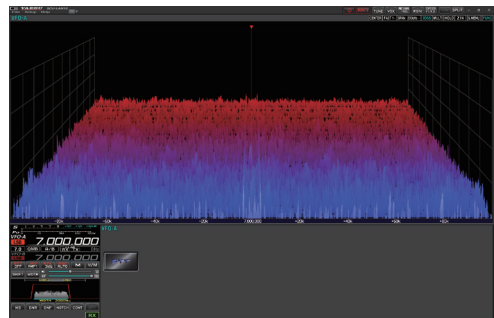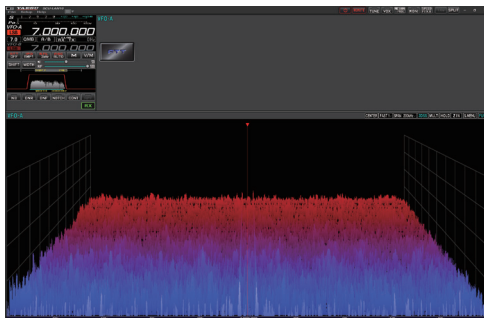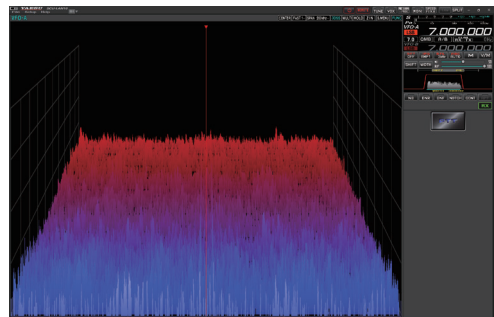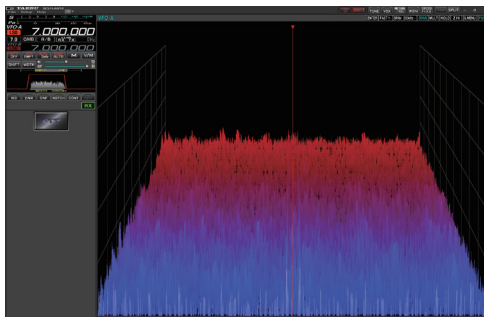

Click & Hold: To reset the size of the changed display area on the screen to the default setting.

Transmission function button

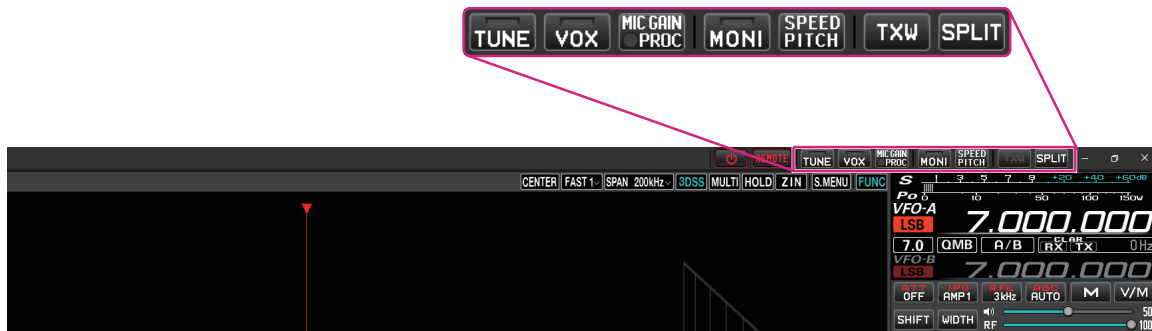

TUNE button



Click: Switches the antenna tuner ON / OFF.
When ON, the button indicator lights red.


Click & Hold: The transceiver will switch to the transmit mode, and automatically start the antenna tuner.

VOX button



Click: Switches VOX ON / OFF.
When ON, the button indicator lights red.


Right click: The VOX settings window opens.

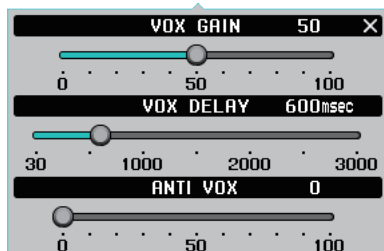

MIC GAIN/PROC button



Click: Switches the PROC ON / OFF. (Only works in LSB / USB modes)
When ON, the round indicator on the button lights red.

Right click: The MIC GAIN / AMC / PROC settings window opens.
To keep the MIC GAIN / AMC / PROC settings window displayed, click the [Pin Button]  in the upper right of the window.



MONI button




- Click:** Switches MONITOR ON / OFF.
When ON, the button indicator lights red.
- Right click:** The MONITOR level settings window opens.



SPEED/PITCH button



- Click:** The CW SPEED and CW PITCH settings window opens.

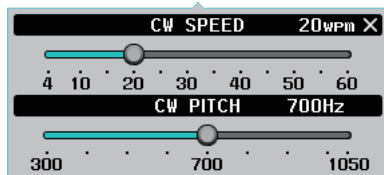

TXW button



- Click:** The transmission and reception frequencies are switched during SPLIT ON.
When ON, the button flashes in red.


SPLIT button




- Click:** Switches the SPLIT function ON / OFF.
When ON, the button is displayed in red.
- Click & Hold:** With the quick split function, the opposite VFO is set to the frequency obtained by adding the “offset frequency setting value of the quick split function (initial setting value: +5 kHz)” to the current VFO frequency, and the split function is turned ON.
When the split function is ON, the “offset frequency setting value of the quick split function (initial setting value: +5 kHz)” is added to the current VFO-B frequency each time you click and hold.
- Right click:** The setting screen for the offset frequency of the split function opens.




When set to “DELTA”, the offset value of the transmission frequency with respect to the reception frequency is displayed as “+” or “-”. (If the offset exceeds 100kHz, the normal frequency display will be displayed.)

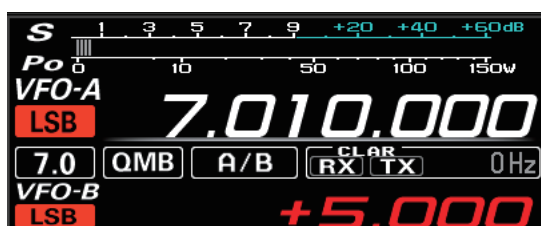

FUNC button (Function menu display)

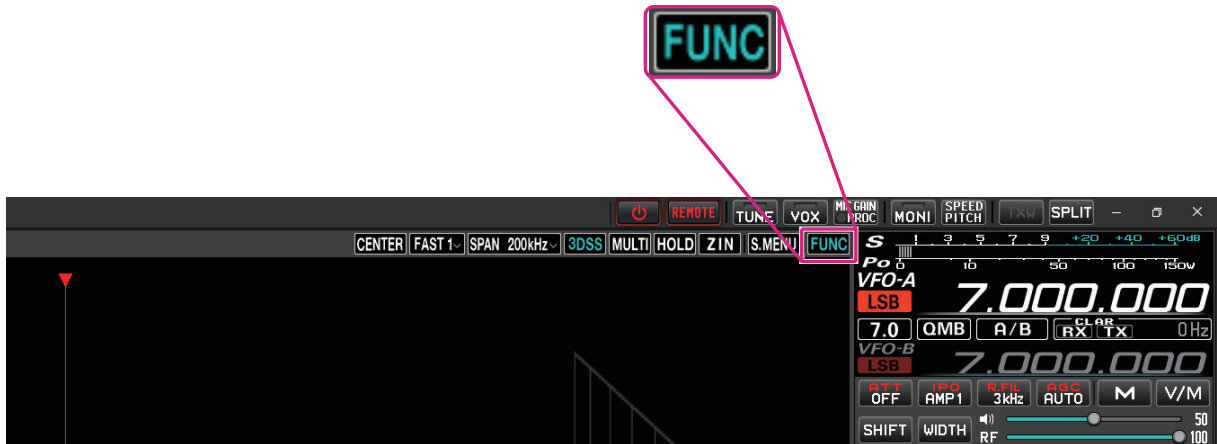




Displays the function menu screen for setting various functions. (Some items are different from the transceiver function menu display.)

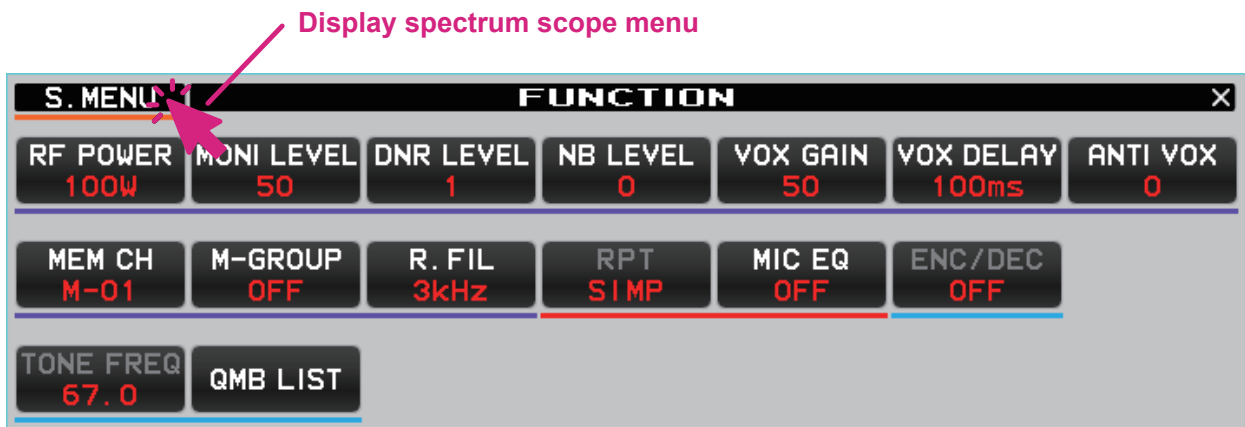

RF POWER button



   Adjust the current transmit frequency (HF / 50MHz band) or communication mode (AM mode) and the transmit output of each.



The maximum transmit power that can be set is less than or equal to the following MAX POWER set in the transceiver set mode.

SET MODE [OPERATION SETTING] → [TX GENERAL]

- HF MAX POWER (HF)
- 50M MAX POWER (50MHz)
- AM MAX POWER (AM Mode)

MONI LEVEL button

MONI LEVEL
50

Monitor level adjustment



DNR LEVEL button

DNR LEVEL
1

Set the Digital Noise Reduction response.



NB LEVEL button

NB LEVEL
0

Noise blanker level setting



VOX GAIN button

VOX GAIN
50

VOX gain setting



VOX DELAY button

VOX DELAY
500ms

 
The “Hang-Time” of the VOX system (the transmit-receive delay after the cessation of speech) may also be adjusted.



ANTI VOX button

ANTI VOX
50

The Anti-Trip setting sets the negative feedback of receiver audio to the microphone, to prevent receiver audio from activating the transmitter



MEM CH button

Selects the memory channel in memory mode.

MEM CH
M-01

Click: Select memory channels in sequence.

Wheel: Select a memory channel.

M-GROUP button



 
- Click:** When the memory group function is ON, memory groups are selected in sequence.
Wheel: Selects the memory group when the memory group function is ON.
Right click: Select ON / OFF of the memory group function.



R.FIL button



Select the bandwidth of the roofing filter. The bandwidth of the roofing filter that can be selected depends on the communication mode.



- Roofing filters that are not included in the remote control transceiver are not displayed.
- 300Hz roofing filters is optional.
- Keyboard shortcuts
r key

RPT button



Select the shift direction when operating through a repeater.



- SIMP:** Both transmit and receive have the same frequency.
+ (plus): Transmit is at a higher frequency than the receive frequency (default setting is +100kHz).
- (minus): Transmit is at a lower frequency than the receive frequency (default setting is -100kHz).

MIC EQ button

Select the parametric microphone equalizer function ON / OFF.



The parameters of the microphone equalizer cannot be set with the remote control.

ENC/DEC button



 
Turn the tone encoder function or tone squelch function ON.



TONE FREQ button



Set the tone frequency for the tone encoder function and tone squelch function.



QMB LIST button

QMB LIST


You can check or delete the contents stored in the QMB (quick memory bank) of the current frequency band. Also, the number of QMB channels can be selected from 5ch or 10ch.

QMB LIST						X
1	--.---.---	-----	6	--.---.---	-----	10ch
2	--.---.---	-----	7	--.---.---	-----	
3	--.---.---	-----	8	--.---.---	-----	
4	--.---.---	-----	9	--.---.---	-----	
5	--.---.---	-----	10	--.---.---	-----	DELETE

Spectrum scope area


Screen operation

3DSS display

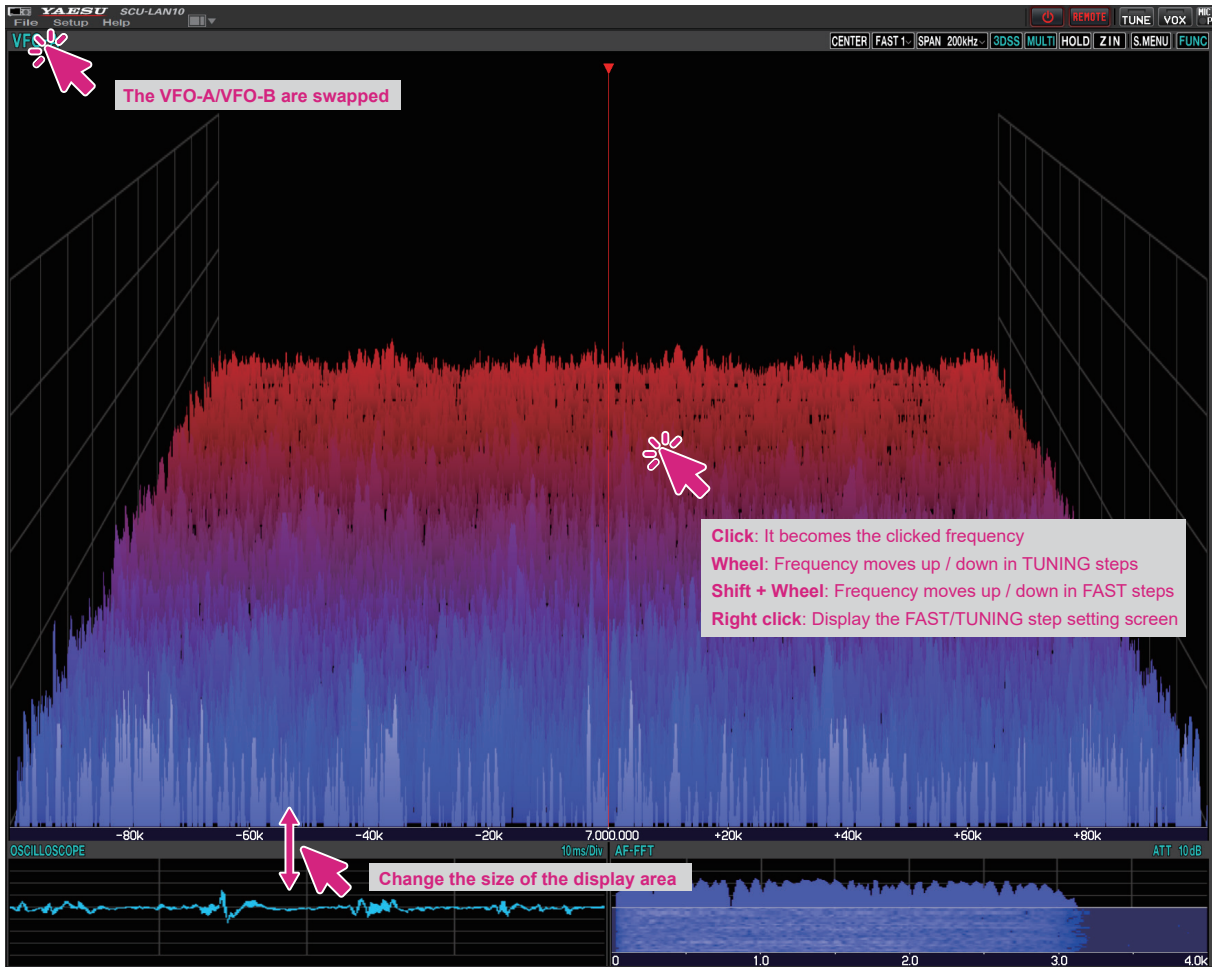

If you hold down the [SHIFT] key on the keyboard and turn the mouse wheel, the frequency will increase or decrease in FAST steps.

Water fall display

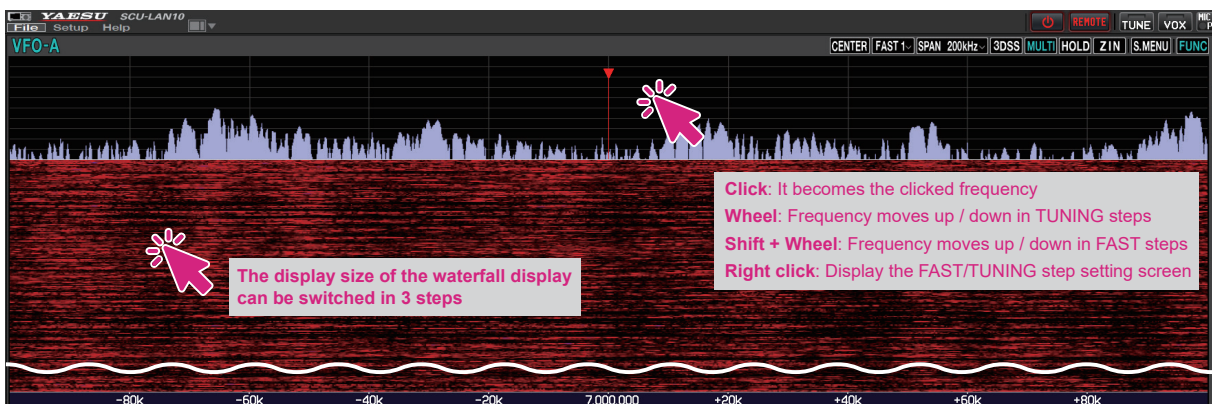

If you hold down the [SHIFT] key on the keyboard and turn the mouse wheel, the frequency will increase or decrease in FAST steps.

- **Turn the wheel to change the receive frequency**

Turn the **mouse wheel** on the spectrum scope screen to change the frequency in the set “**TUNING**” step. If you turn the **mouse wheel** while pressing the [SHIFT] key on the keyboard, the frequency will increase or decrease in “**FAST**” steps.

- **Click to change the receive frequency**

Click on the spectrum scope screen to jump to that frequency. You can then turn the mouse wheel to tune the frequency and hear the desired signal.

- **Right-click to change the steps**

Right-click on the spectrum scope screen to display the setting screen for the FAST step and TUNING step.


- **MAIN / SUB band display switching**

VFO-A / VFO-B

The display positions of the MAIN band and the SUB band will swap each time you click.


- **Change the size of the MAIN / SUB area**

The size* of the MAIN band and SUB band display area may be changed by dragging the mouse cursor when it changes to “↕”.


*You can initialize the size by clicking and holding the screen layout icon .

- **Resize the waterfall display area**

While the spectrum scope is in the waterfall display, the size* of the display area may be changed in 3 steps by clicking the waterfall display.

*You can initialize the size by clicking and holding the screen layout icon .

Scope function button

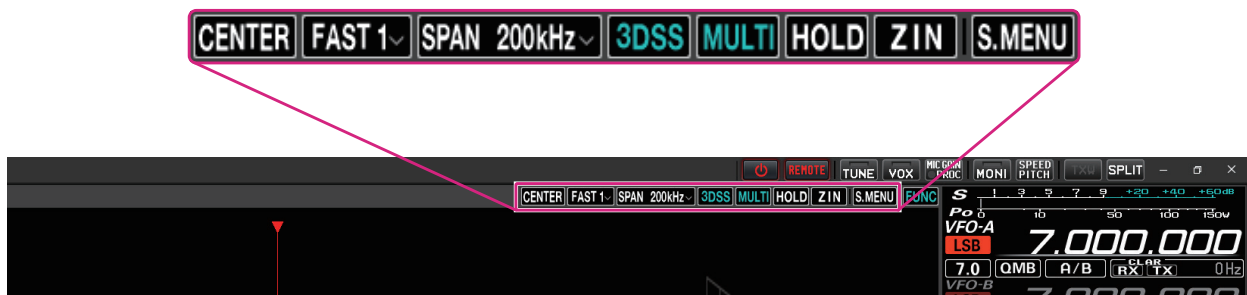

CENTER / CURSOR / FIX button

CENTER / CURSOR / FIX

Switches the operation of the spectrum scope.

Click: The CENTER display, CURSOR display, and FIX display switch each time the button is clicked.

Click & Hold:

- If you click and hold the button while in CENTER or CURSOR, the digits below 100 Hz of the receive frequency will be zero.
- If you click and hold the button during FIX, the receive frequency will return to the scope start frequency.

Right Click: Right clicking the button during FIX will open a pop-up screen for entering the scope start frequency (left edge).



Keyboard operation:

Enter key: Finish the input (**ENT**)

Backspace key: Delete the character before the cursor (**⌫**)

Delete key: Delete the character (**CE**)

Esc key: Cancels input and closes the numeric keypad screen (**BACK**)

SLOW1 / SLOW2 / FAST1 / FAST2 / FAST3 buttons



Switches the scope display speed.

Click: A popup screen for selecting the speed of the scope display is displayed.



SLOW1:	sweep speed	Slow
SLOW2:	sweep speed	↑
FAST1:	sweep speed	Normal
FAST2:	sweep speed	↓
FAST3:	sweep speed	Fast



The settings for this feature apply only to the remote-control software.

SPAN button



Sets the frequency span (display range) of the scope screen.

Click: A popup screen for selecting the span of the scope display is displayed.



Keyboard shortcuts
Arrow keys (Left/Right)

3DSS button



Switches between the 3DSS display and the waterfall display.

Click: The “3DSS” display and “Waterfall” display switch. When “3DSS” is displayed, the button text is displayed in green.

MULTI (Multi display switching) button



Click: Switches to the “multi display” that displays the oscilloscope screen and AF-FFT screen. When “MULTI” is displayed, the button text is displayed in green.

Click & Hold: Clicking and holding the button during “Multi display” will change the display position of the oscilloscope screen and AF-FFT screen.

HOLD button



Temporarily suspends waveform drawing on both the MAIN / SUB scope screen and the receive filter screen.

Click: Switches between pause / cancel.
The button flashes red and appears during pause.

ZIN (auto Zero-in) button




While receiving a CW signal in CW mode, it can be automatically adjusted (zero-in) to the frequency of the partner station so that it matches the received PITCH (pitch).

Click: If you click while receiving a CW signal, it will automatically zero in.

S.MENU button (Spectrum scope menu display)



Displays the scope menu screen to permit settings related to the scope display.

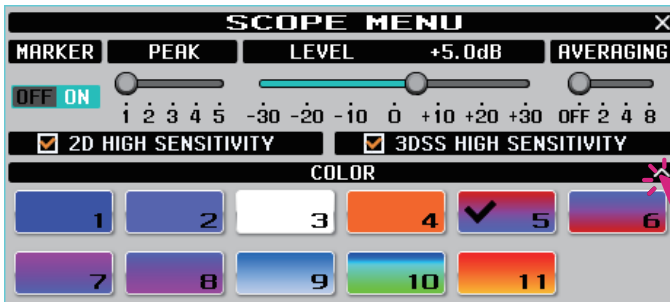

Show / hide COLOR settings

● MARKER

 


Click the button to turn the display of the receive frequency marker (green line) and transmit frequency marker (red line) ON / OFF.



When the operation of the spectrum scope is set to "CENTER", the center of the scope is always the receive frequency, so the receive frequency marker (green) is not displayed.

● PEAK



The color density may be adjusted to the level of the signal.

- LV1: Light
- LV2: ↑
- LV3: Normal
- LV4: ↓
- LV5: Dark



 
The settings for this feature apply only to the remote-control software.

● LEVEL



Adjust the level to make it easier to distinguish between the desired signal and noise.

● **AVERAGING**



Waveforms are averaged and displayed smoothly.

OFF: Do not average

2 to 8: Display averaging ON



- The AVERAGING setting is common to the MAIN band / SUB band spectrum scope screens.
- This function is available only with the remote-control software.

● **2D HIGH SENSITIVITY**




If a check mark is added, the waterfall display sensitivity will be emphasized.

● **3DSS HIGH SENSITIVITY**



If a check mark is added, the 3DSS display sensitivity will be emphasized.

● **COLOR**

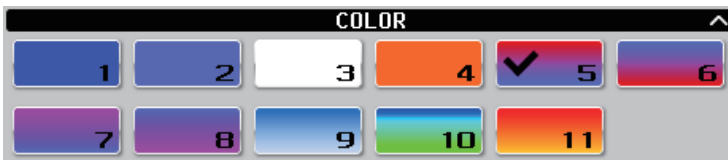


Click the preferred colors to select the display colors.



- The settings for this feature apply only to the remote-control software.

Oscilloscope / AF-FFT area

Screen operation

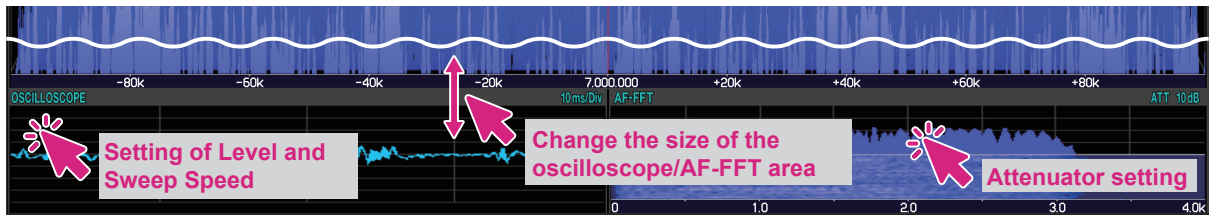

- **Resize oscilloscope / AF-FFT area**

The size* of the oscilloscope / AF-FFT display area can be reduced by dragging the title bar at the top of the oscilloscope / AF-FFT area.

*Click and hold the screen layout icon  at the top of the screen to initialize the size.

- **Click to set the level and sweep speed of the oscilloscope**

Click in the oscilloscope display area to set the waveform display level and time axis scale.




- **Attenuator setting (AF-FFT)**

You can set the attenuator by clicking inside the AF-FFT display area.



- **Change the display position**

You can change the display position of the oscilloscope screen and AF-FFT screen by clicking and holding the [MULTI] button during "Multi display".

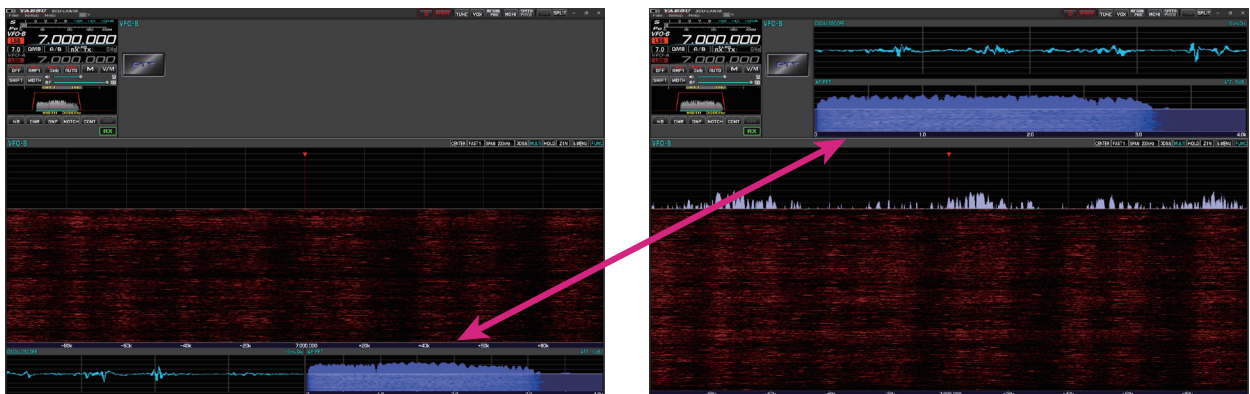

VFO-A / VFO-B operation area



Meter operation selection during transmit



Click: To select the meter operation during transmit:



- PO: Transmission output display
- ALC: ALC voltage display
- SWR: Antenna SWR display
- COMP: AMC gain control display
(Compression level display when the speech processor is operating)
- ID: Final stage FET Drain current display
- VDD: Final stage FET Drain voltage display

Selecting the memory channel



Wheel: Select the memory channel during a memory channel recall.

Selecting the QMB channel



Wheel: Select the QMB channel during a QMB channel recall.



Keyboard shortcuts
q key

Selecting the operating mode



Click: Select the operating mode.



Right Click: Switch between the following modes with one touch.

LSB ↔ **USB**
CW-L ↔ **CW-U**
AM ↔ **AM-N**
FM ↔ **FM-N**
DATA-L ↔ **DATA-U**
DATA-FM ↔ **D-FM-N**
RTTY-L ↔ **RTTY-U**




Keyboard shortcuts
LSB/USB: F1 key
CW-L/CW-U: F2 key
AM: F3 key
FM: F4 key

Frequency change operation

Switch frequency band


Click the MHz digit or band icon to display the band selection screen.

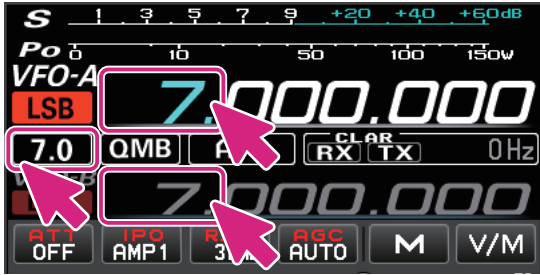

Click: Band selection



MHz digit

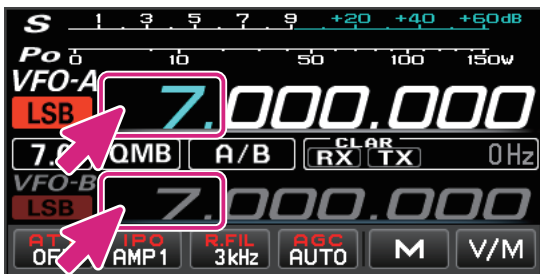


Wheel: Move frequency Up / down at 1MHz

Click: Band selection



Right Click: The numeric keypad screen pops up and you can enter the frequency. You can also click with the mouse, or enter with the number keys on your computer keyboard.

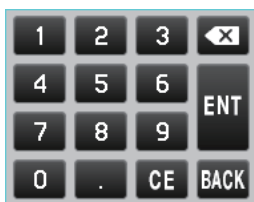

Keyboard operation:


Enter key: Finish the input (ENT)

Backspace key: Delete the character before the cursor (X)


Delete key: Delete the character (CE)

Esc key: Cancels input and closes the numeric keypad screen (BACK)

kHz digit

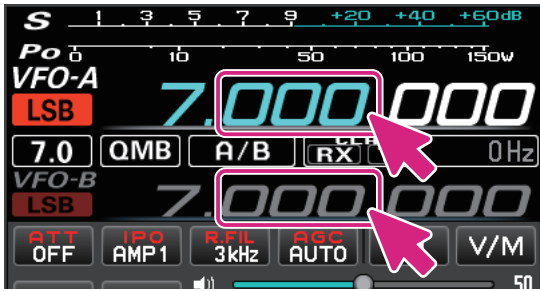


- Wheel:** Frequency moves up/down in FAST steps
- Click:** Click the upper half / lower half of the number move the frequency up/down in FAST steps
- Drag up and down:** Frequency changes up / down in FAST step
- Right Click:** Display the setting screen of FAST step / TUNING step

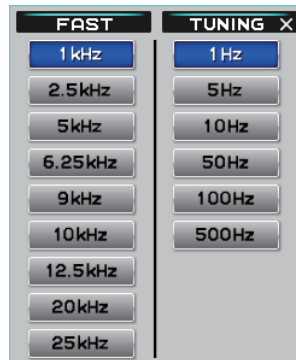

By holding down the [SHIFT] key on the keyboard and clicking the number of each digit, you can zero the numbers below that digit with one touch.

Hz digit

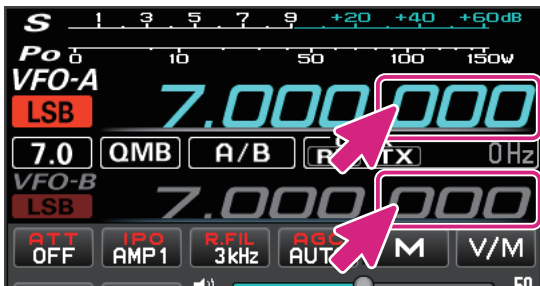

- Wheel:** Frequency goes up / down in TUNING step
- Click:** Click the upper half / lower half of the number to frequency goes up / down the frequency in TUNING steps
- Drag up and down:** Frequency continuously increases / decreases in TUNING steps
- Right Click:** Displays the FAST step / TUNING step setting screen





- In the frequency display, turning the wheel while pressing the [SHIFT] key on the keyboard does not result in the FAST step.
- By holding down the [SHIFT] key on the keyboard and clicking the number of each digit, you can zero the numbers below that digit with one touch.
- Keyboard shortcuts
Current VFO: Page UP key / Page Down key
Opposite VFO: Shift + Page UP key / Shift + Page Down key

QMB Operation



Click: Recalls the information stored in QMB in order.



- You can select a QMB channel by turning the wheel while hovering the mouse over the QMB channel number display while recalling QMB.
- Keyboard shortcuts
q key

Click & Hold: Stores up to 5 or 10 channels of the current operating status in a dedicated memory channel (QMB: Quick Memory Bank).

Right Click: A list of QMB memories will be displayed.

QMB LIST						
1	--.---.---	-----	6	--.---.---	-----	10ch
2	--.---.---	-----	7	--.---.---	-----	
3	--.---.---	-----	8	--.---.---	-----	
4	--.---.---	-----	9	--.---.---	-----	
5	--.---.---	-----	10	--.---.---	-----	DELETE

Click the QMB channels you want to delete and click the [DELETE] button to delete them.


Click the [5ch] or [10ch] button to switch the number of QMB channels.

VFO-A / VFO-B operation



Click: Switch the VFO-A / VFO-B.

CLAR (Clarifier) operation

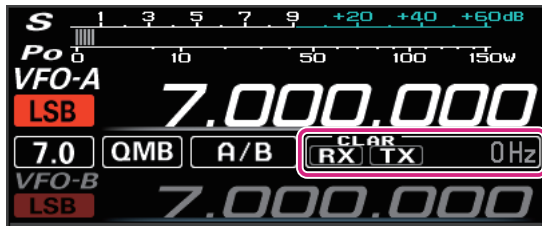

Click: Click the [RX] or [TX] button to turn the RX clarifier or TX clarifier ON.

Wheel: When the mouse wheel is rotated on the display of the offset amount (difference between reception frequency and transmission frequency), the offset amount changes in 10Hz or 100Hz steps (AM / FM / DATA-FM / D-FM-N).

Click & Hold: Click and hold the [RX] or [TX] button to clear the offset amount.

Receiver setting operation



ATT (Attenuator) button



Displays the current ATT (Amount of receive input signal attenuation).

Click: Select the attenuation level.



IPO (Intercept Point Optimization) button



Displays the current IPO (Intercept Point Optimization). can establish the gain of the RF amplifier section to accommodate the connected antenna and the received signal conditions.

Click: Select from IPO, AMP1 (Approximately 10 dB gain) and AMP2 (Approximately 20 dB gain).



R.FIL (Roofing Filter Switching) button



Displays the bandwidth of the currently selected roofing filter.

Click: Switches the crystal roofing filters of 300Hz, 500Hz, 3kHz, and 12 kHz that are installed in this transceiver.





- Roofing filters that are not included in the remote control transceiver are not displayed.
- 300Hz roofing filter is optional.
- Keyboard shortcuts
r key

AGC (Automatic Gain Control) button



Displays the currently selected AGC setting. The AGC system is designed to help compensate for fading and other propagation effects.

Click: Select from OFF, AUTO, FAST, MID and SLOW. The “AUTO” selection mode selects the optimum receiver-recovery time for the reception mode.



Memory channel operation



M button



When the memory channel list is not displayed:

Click: Open the memory channel list.

Click & Hold: Writes the VFO data to the last used memory channel and opens the memory channel list.

When the memory channel list is displayed:

Click: Close the memory channel list.

Click & Hold: The VFO data will be written to the memory channel that was last recalled.

V/M button



When the memory channel list is not displayed:

Click: The VFO and the last used memory channel will be recalled alternately.

You can select a Memory channel by turning the wheel while hovering the mouse over the Memory channel number display while recalling Memory.







Click & Hold: Open the memory channel list.

When the memory channel list is displayed:

Click: Close the memory channel list.

Memory channel list operation

CH	FREQ	MODE	NAME	SCAN MEMORY	DISPLAY TYPE
M-01	7.000.000	LSB		SCAN	FREQ
M-02	7.000.000	LSB		SCAN	FREQ
M-03	14.000.000	USB	YAESU	SCAN	FREQ
M-04	--.---.---	-----	-----	----	----
M-05	--.---.---	-----	-----	----	----
M-06	--.---.---	-----	-----	----	----



The window can be expanded to increase the number of channels displayed by dragging the bottom border of the memory channel list screen.

Read memory data from radio



The data of all memory channels stored in the transceiver can be read into the remote-control software.



When memory data is read from the transceiver, the memory data currently set in the remote-control software will be overwritten.



If the memory data currently held by the remote-control software is written to a different model transceiver, the transferred initial values may not match the different model. Be very careful when writing data to other models.

Click: A confirmation screen is displayed. Click **[YES]** to load.

Right click: Displays the date and time when the memory data was last read.

Transfer memory data to transceiver



The data of all memory channels stored in the remote-control software can be transferred to the transceiver.



In the remote-control software, in addition to the memory data stored in the transceiver, the remote-control software has memory data independently.



When reading data from a different model transceiver than the memory data currently held by the remote-control software, all the data stored in the memory channels, including the model-dependent data, is transferred and overwritten. Please be careful when reading data from other models.

Click: A confirmation screen is displayed. Click **[YES]** to transfer.

Right click: Displays the date and time when the memory data was last transferred.

Recall memory channel



Click: Recall the data of the selected memory channel.

Move memory data to VFO



Click: Transfers the data of the selected memory channel to the current VFO.

Write to memory



Click: Writes information such as the current VFO frequency and operation mode to the selected memory channel.

Erase / Resume Memory Channel




Click: Erases or restores the selected memory channel.

Right click: A confirmation screen is displayed. Click [YES] to initialize all memory information.



Memory channel "M-01" cannot be erased.

Editing memory channels

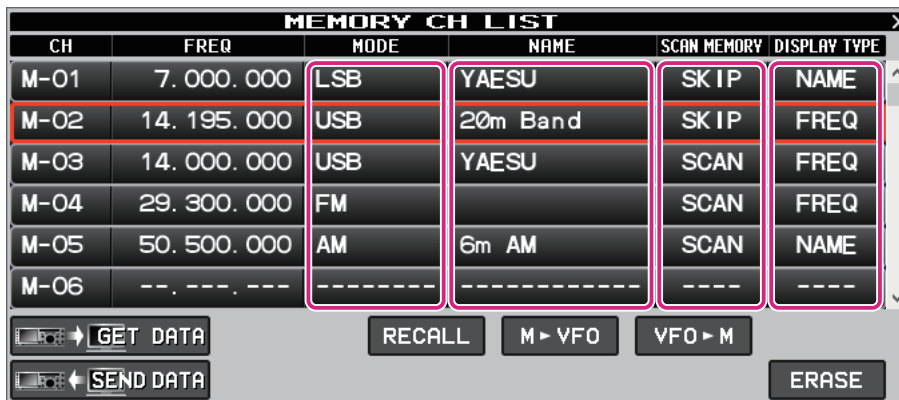

You can edit the contents of the memory channel by right-clicking the MODE, NAME, SCAN MEMORY, and DISPLAY TYPE fields.

● MODE

Select the operation mode.



● NAME

Edit the alpha tag (maximum 12 characters) of the memory channel.

● SCAN MEMORY

When scanning the memory, set the channels you do not want to scan to "SKIP".



● DISPLAY TYPE

Set the display when the memory is called to "frequency display" or "alpha tag display".



AF Gain / RF Gain adjustment



AF (Speaker icon)

Turn the mouse wheel over the slide bar or drag or click to adjust the receive volume.



Each time you click the speaker icon, MUTE & MUTE cancel will switch.

RF (RF GAIN) / SQL

Turn the mouse wheel over the slide bar or drag or click to adjust the RF gain.



Right-click on RF to select whether to adjust RF gain or SQL level.

SHIFT/WIDTH operation



SHIFT button



Click: When the button is blue, the IF filter shift frequency can be changed by operating the mouse in the filter function display area.



Keyboard shortcuts
s key

Click & Hold: The IF filter shift frequency returns to 0 Hz.



When the radio wave format cannot be shifted, the button is grayed out.

WIDTH button



Click: When the button is blue, you can change the IF filter bandwidth by operating the mouse in the filter function display area.



Keyboard shortcuts
w key

Click & Hold: The IF filter bandwidth returns to the initial value.



The button is grayed out for radio wave formats where the bandwidth cannot be changed.

Operation of the filter function display area



Right Click: You can select to show / hide the spectrum display of the signal in the filter function display area.



Interference Reduction Systems operation




NB (Noise blanker) button



Click: The noise blanker function turns ON / OFF.

Right click: The operation setting of the noise blanker function can be changed.

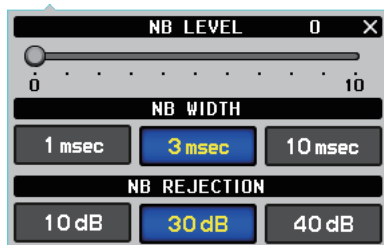

DNR (Digital Noise Reduction) button



Click: The digital noise reduction function turns ON / OFF.

Right click: You can set the level of the digital noise reduction function.



DNF (Digital NOTCH Filter) button



Click: The digital NOTCH filter function turns ON / OFF.

NOTCH (IF NOTCH Filter) button



Click: The IF NOTCH filter function turns ON / OFF.



Keyboard shortcuts
n key

Right click: The bandwidth of the IF NOTCH filter function can be selected.



CONT (Contour) button




Click: The Contour function turns ON / OFF.



Keyboard shortcuts
c key

Right click: The attenuation and bandwidth of the contour function can be set.

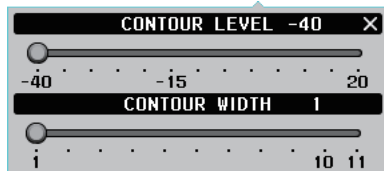

APF (Audio Peak Filter) button



The APF function is for CW mode only.



Click: The APF function turns ON / OFF.

Right click: The bandwidth of the APF function can be set.



PTT operation



PTT button

Click & Hold: To transmit




Keyboard shortcuts
Space key


Right click: To switch the button function between “PTT” and “MOX”.



MENU bar

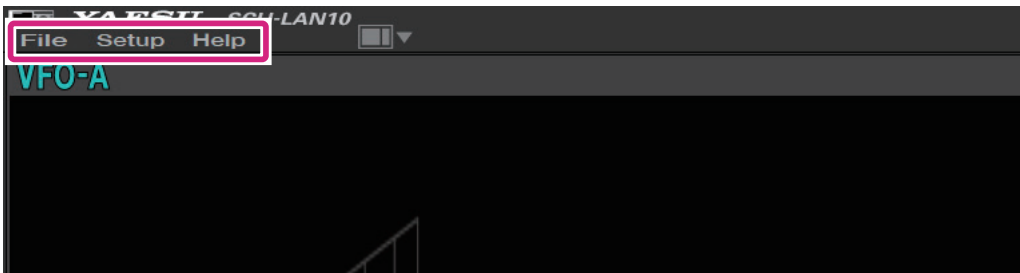


File

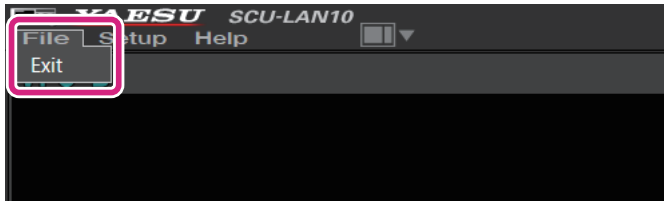


Exit: Closes the remote-control software.

Setup

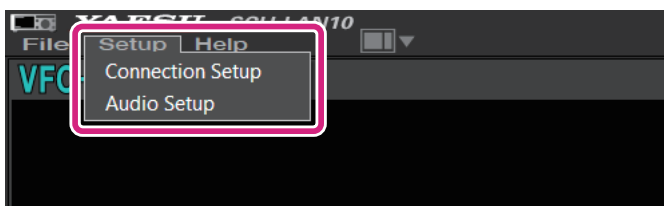


Connection Setup: Make settings related to connection with SCU-LAN10.
There is no need to change it if you have set it once at the beginning.

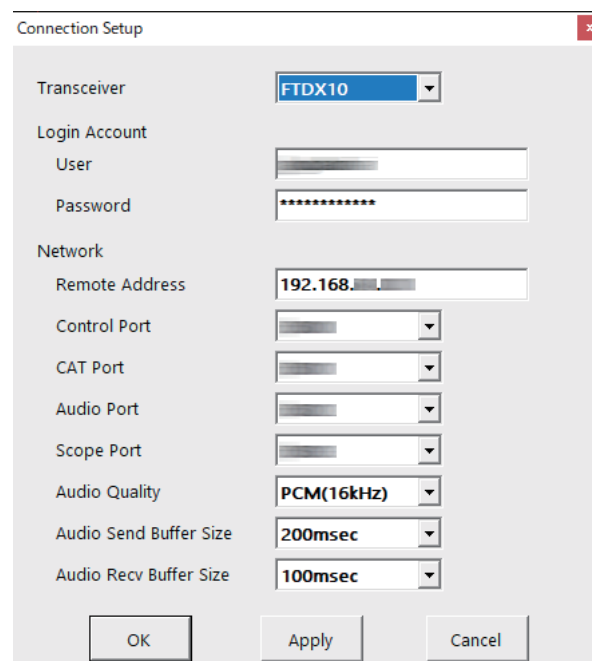

While remotely connected to the SCU-LAN10, it is grayed out and you can only check the settings.

For details, refer to the SCU-LAN10 Installation Manual.

Audio Setup: Opens the audio level settings screen.

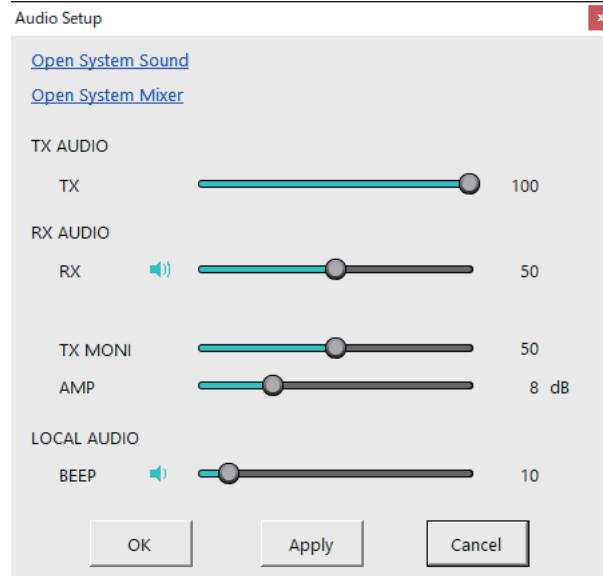

Open System Sound
Open System Mixer


The Windows **“Sound”** screen appears.

The Windows **“Volume Mixer”** screen appears.

For details on adjusting the volume on Windows, refer to the SCU-LAN10 Installation Manual.

TX AUDIO
TX


Adjust the transmit modulation level.

This adjustment is the same as adjusting the MIC GAIN adjustment bar that appears when you right-click the MIC GAIN / PROC button .



RX AUDIO
RX

Adjusts the receive volume of the MAIN band.

This adjustment is the same as adjusting the volume control bar  on the VFO operation area.

TX MONI

Adjusts the volume of the transmitted audio that is monitored by the monitor function.

This adjustment is the same as the MONI adjustment bar  that appears when you right-click the **MONI** button.

AMP

Adjust this when the receive audio of the MAIN / SUB band or the TX MONI volume is extremely low or distorted even when the Windows volume adjustment or the above volume adjustment is performed. Normally you do not need to change. (Factory setting: 8 dB)


LOCAL AUDIO
BEEP

Adjusts the beep volume when operating the remote-control software.



If the volume is extremely low even if you adjust it on the “Audio Setup” screen, or if the sound is too loud and distorted, use Windows to adjust the volume. For details on adjusting the volume on Windows, refer to the SCU-LAN10 Installation Manual. If you are still unable to make adjustments, change the RX AUDIO “AMP” setting above.

Help

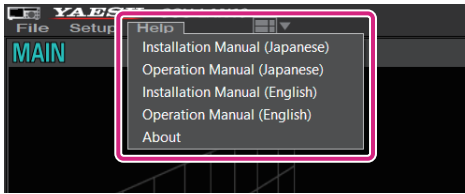

- Installation Manual (Japanese):** Open the Installation Manual (Japanese)
Operation Manual (Japanese): Open the Operation Manual (Japanese)
Installation Manual (English): Open the Installation Manual (English)
Operation Manual (English): Open the Operation Manual (English) (This Manual)

About: Displays information about this software.

Shortcut keys

The functions in the table below can be operated with the keys on the PC keyboard.

Function	Shortcut
Spectrum scope span (wide)	Cursor key Right (→)
Spectrum scope span (narrow)	Cursor key Left (←)
VFO frequency Up	Page Up key (current VFO) Shift + Page Up key (opposite VFO)
VFO frequency Down	Page Down key (current VFO) Shift + Page Down key (opposite VFO)
AF GAIN Up	Cursor key Up (↑)
AF GAIN Down	Cursor key Down (↓)
SHIFT function select	s key
WIDTH function select	w key
Roofing filter select	r key
NOTCH function select	n key
CONTOUR function select	c key
Mode select (LSB / USB)	F1 key
Mode select (CW-L / CW-U)	F2 key
Mode select (AM)	F3 key
Mode select (FM)	F4 key
QMB recall	q key
PTT (Transmission)	Space key

Basic Operation (FT-710)

Starting the SCU-LAN10 Remote Software

1. Click the Windows **Start** button, and then click the [YAESU SCU-LAN10] icon in the “Yaesu Musen” group to start the remote-control software.




- You can also double-click the [YAESU SCU-LAN10] icon on the desktop to start the remotecontrol software.
- If the transceiver (FT-710) to be used is not set to “**Connection Setup**” of the “**Setup**” menu on the upper left of the screen, some functions and the screen display will not work properly. For details on the settings, refer to “**SCU-LAN10 Installation Manual**”.
- When connecting to the SCU-LAN10 for the first time, make the initial setting on the “**Connection Setup**” screen. Set it by referring to the “**SCU-LAN10 Installation Manual**”.

2. Click the [] button.

The “  ” button and the “**REMOTE**” button turns red during remote control.



- The [REMOTE] button starts or stops the remote control. Click the [REMOTE] button to turn it ON automatically when the transceiver is turned OFF. If the remote control is disconnected due to network instability, you can restart it by clicking the [REMOTE] button.
- When using the remote-control software for the first time, a warning screen of Windows or firewall software may appear. In this case, set it to allow (unblock) Internet access from the remote-control software.

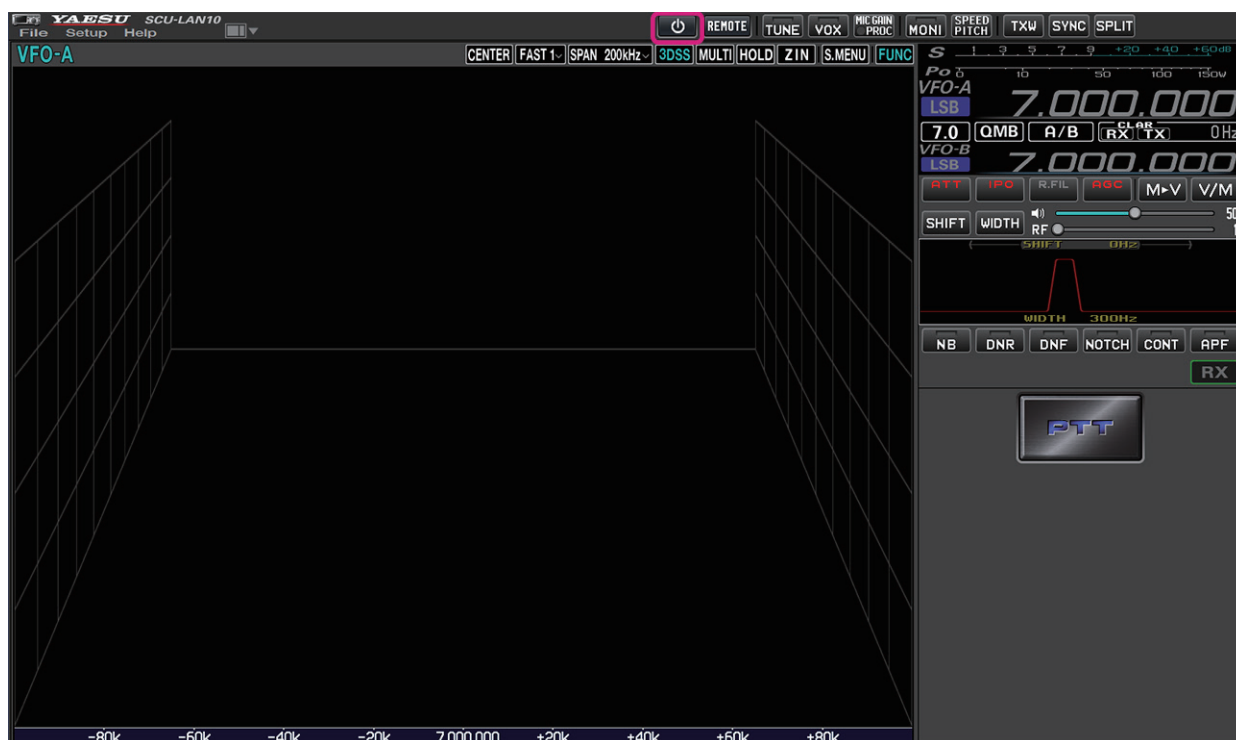


Remote control software screen

By default, the VFO-A is displayed on the upper area of the screen, the VFO-B is displayed on the lower area, the spectrum scope is displayed on the left side of the screen, and the frequency and meter are displayed on the right side.




- The size and layout of each area will be adjusted automatically depending on the screen resolution of your computer, so the display may differ slightly from the example below.
- In the display example below, the **[MULTI]** button is may be clicked to display the oscilloscope and the AF-FFT.

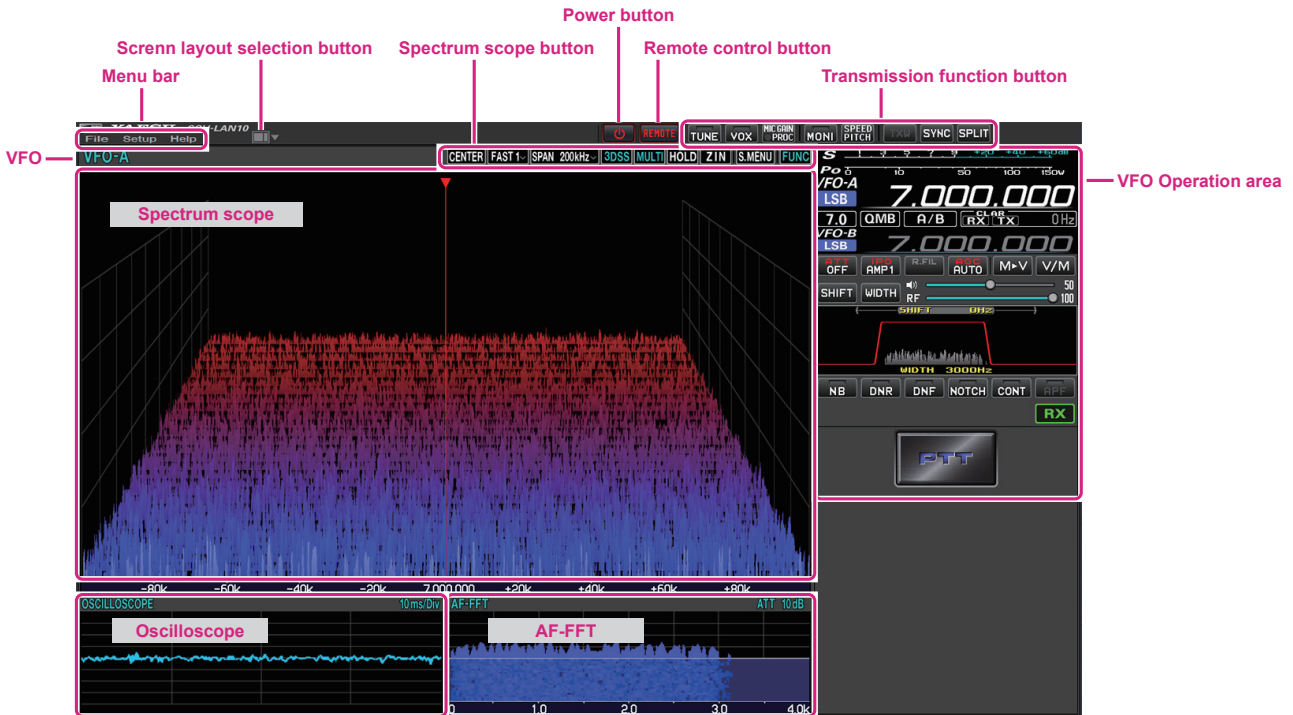

Select screen layout

Screen layout selection button

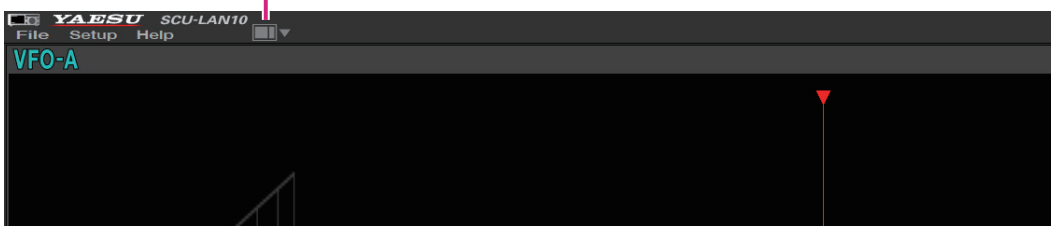


Click: Select the screen layout from 5 types.



Click & Hold: Returns the size of each area on the screen to the default settings.

Adjusting the receiver volume

AF GAIN (Speaker icon)

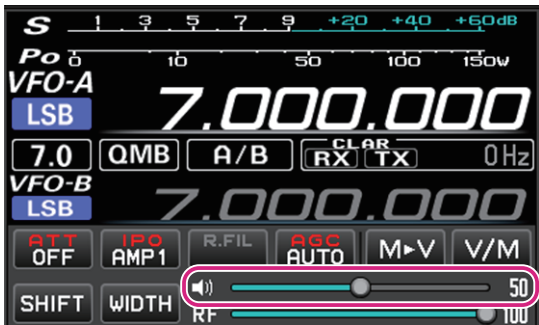

Turn the **mouse wheel**, or drag or click on the slide bar to adjust the receive audio to a comfortable volume.




- Each time you click the speaker icon, mute & mute cancel are switched.
- Keyboard shortcuts
Arrow keys (Up/Down)

Change frequency

Switch frequency band

1. Click the MHz digit or the Band icon to display the band selection screen.

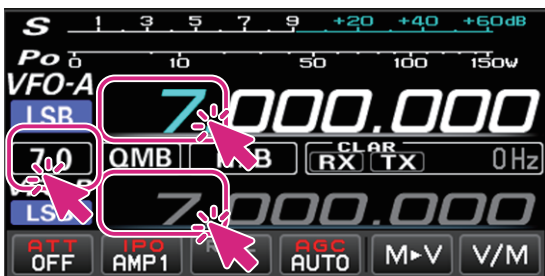

2. Click the desired band.



Change frequency

There are three ways to change the frequency:

(1) Mouse wheel operation and drag operation

• MHz digit


1. When you mouse over the MHz digit of the frequency, the number turns blue.



2. In this state, turning the mouse wheel will change the frequency in 1MHz steps.

● kHz digit

1. When you mouseover the 3 digits of the frequency from 100kHz to 1kHz, the digits higher than 1kHz turn blue.

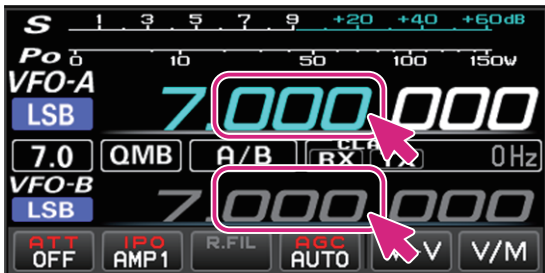

2. In this state, turning the mouse wheel will change the frequency in the set “FAST” step.
 - Click in the upper or lower half of the number to increase or decrease the frequency in the set “FAST” step.
 - If you move the mouse up or down while clicking the number, the frequency will change continuously with the set “FAST” step.
 - Right-click on the 100kHz or 1Hz digit to select the FAST step or TUNING step. For details, see “Changing the tuning step” on the next page.



By holding down the [SHIFT] key on the keyboard and clicking a number from 100kHz to 1Hz, you can zero the numbers below that digit with a single touch.

● Hz digit

1. When you mouseover the 3 digits of the frequency from 100Hz to 1Hz, all the digits of the frequency change to blue.




2. In this state, turning the mouse wheel will change the frequency in the set “TUNING” step.
 - Click in the upper or lower half of the number to increase or decrease the frequency in the set “TUNING” steps.
 - If you click the number and then move the mouse up or down, the frequency will change continuously at the “TUNING” step.
 - Right-click on the 100kHz or 1Hz digit to select the FAST step or TUNING step. For details, see “Changing the tuning step” on the next page.



- By holding down the [SHIFT] key on the keyboard and clicking a number from 100kHz to 1Hz, you can zero the numbers below that digit with a single touch.
- Turning the wheel while holding down the [SHIFT] key on the keyboard does not change the TUNING step to the FAST step.
- Keyboard shortcuts
Current VFO: Page UP key/Page Down key

• **Change the frequency step**

1. Right-click on the digit from 100kHz to 1Hz of the frequency to display the setting screen for the FAST step and TUNING step.
2. Click on the desired FAST step or TUNING step.

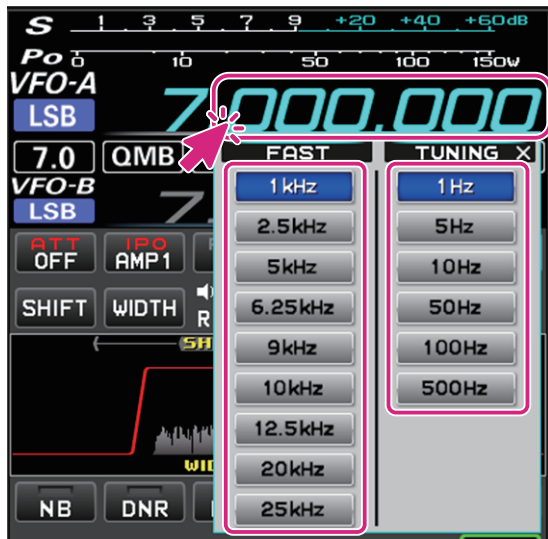


(2) Change the frequency on the spectrum scope screen

1. Move the mouse cursor to the display area of the spectrum scope and turn the mouse wheel to change the frequency in the set “TUNING” step.
 - In the Spectrum Scope screen, press and hold the [SHIFT] key on the keyboard and turn the mouse wheel to increase or decrease the frequency in the set FAST steps.
 - When you click on the point you want to receive such as the peak of the signal on the spectrum scope screen, the frequency jumps to the vicinity. You can then turn the mouse wheel to fine tune the frequency and hear the desired signal.




(3) Enter the frequency on the numeric keypad screen

1. Right-click on the MHz digit of the frequency to display the numeric keypad screen.

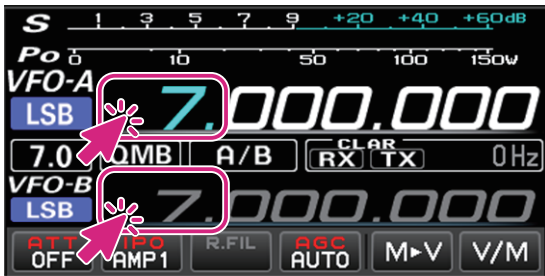

2. You can enter the frequency by clicking on the screen or using the keys on your computer.

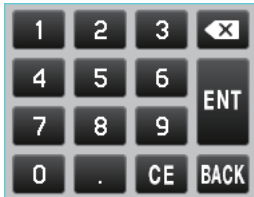

Keyboard operation:

Enter key: Finish the input (**ENT**)

Backspace key: Delete the character before the cursor (**⌫**)

Delete key: Delete the character (**CE**)

Esc key: Cancels input and closes the numeric keypad screen (**BACK**)

● Select mode

1. Click the mode icon.



2. Click on the desired mode.



- You can right-click the mode icon to switch between the following modes with one touch:
LSB↔USB; CW-L↔CW-U; AM↔AM-N; FM↔FM-N; DATA-L↔DATA-U; DATA-FM↔D-FM-N; RTTY-L↔RTTY-U



- Keyboard shortcuts
LSB / USB: F1 key
CW-L / CW-U: F2 key
AM: F3 key
FM: F4 key

Meter operation selection during transmit

1. Click on the S/Power meter.




2. Click on the desired meter function.



Transmitting

1. While clicking and holding the **PTT** button, the transceiver will be in transmit status.
The TX icon is displayed above the frequency during transmission.



 Keyboard shortcuts
Space key

2. Speak into the microphone of the computer.
3. Release the PTT button to return to receive.

● Change to the MOX button

Change the PTT button to the MOX button.

1. Right-click the PTT button to display the “PTT” and “MOX” setting screens.



2. Click MOX.

On Screen Functions & Controls (FT-710)

Power button

Power button



Click: When not in remote control, the transceiver automatically powers ON and remote control starts. During remote control, the transceiver automatically turns OFF and remote control stops.

Remote button

Remote control button



Click: When not in remote control, the transceiver automatically powers ON and remote control starts. During remote control, the transceiver remains ON and only remote control stops.



If the remote control is disconnected due to network instability, etc., you can restart the remote control by clicking the [REMOTE] button.

• Warning sign

If the warning sign illuminates or occasionally opens, there may be a problem with the network line or port open settings. Refer to the SCU-LAN10 Installation Manual and restart the settings from the beginning. Click the warning sign to see the detected issues.








Screen layout selection button

Screen layout selection button




Click:

Select a screen layout from 5 types.

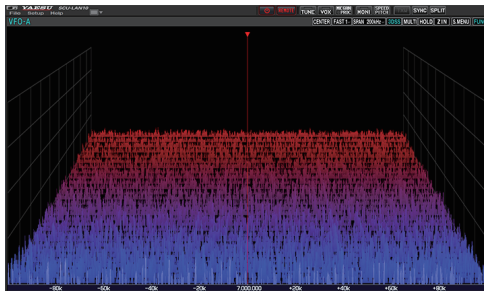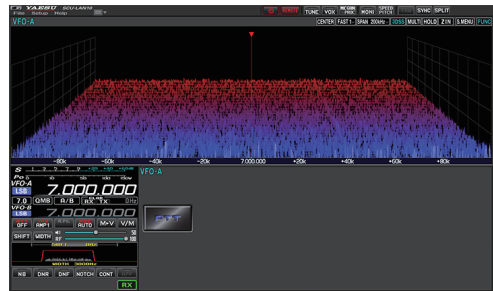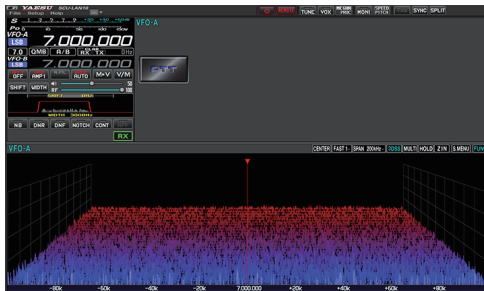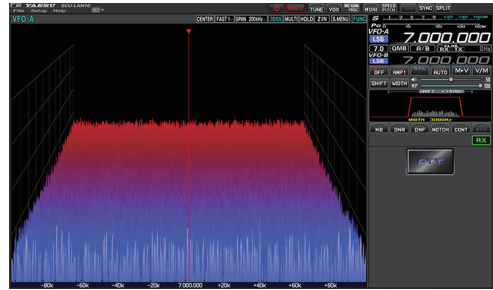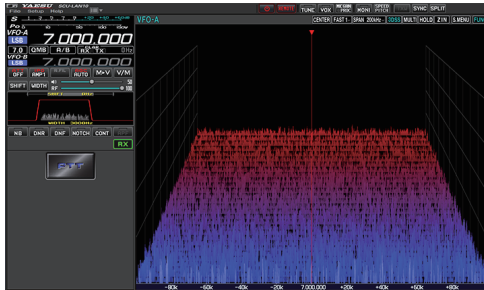

Click & Hold: To reset the size of the changed display area on the screen to the default setting.

Transmission function button

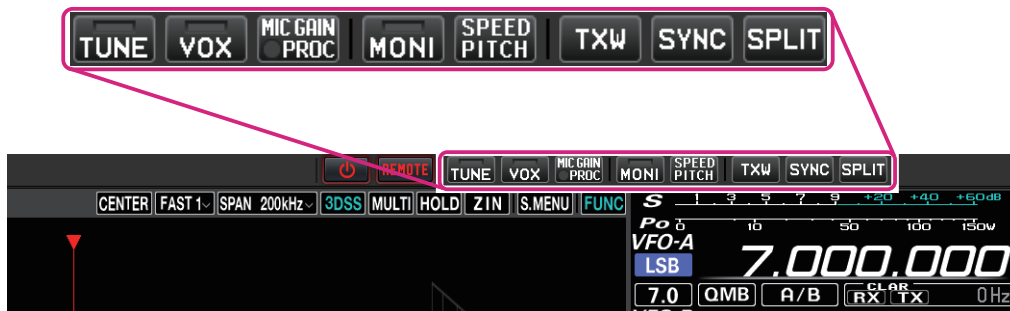

TUNE button



Click: Switches the antenna tuner ON / OFF.
When ON, the button indicator lights red.


Click & Hold: The transceiver will switch to the transmit mode, and automatically start the antenna tuner.

VOX button



Click: Switches VOX ON / OFF.
When ON, the button indicator lights red.


Right click: The VOX settings window opens.

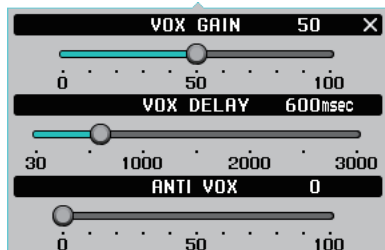

MIC GAIN/PROC button



Click: Switches the PROC ON / OFF. (Only works in LSB / USB modes)
When ON, the round indicator on the button lights red.

Right click: The MIC GAIN / AMC / PROC settings window opens.
To keep the MIC GAIN / AMC / PROC settings window displayed, click the [Pin Button]  in the upper right of the window.



MONI button



Click: Switches MONITOR ON / OFF.
When ON, the button indicator lights red.


Right click: The MONITOR level settings window opens.



SPEED/PITCH button



Click: The CW SPEED and CW PITCH settings window opens.

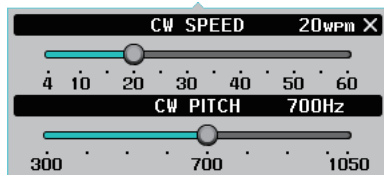

TXW button



Click: The transmission and reception frequencies are switched during SPLIT ON.
When ON, the button flashes in red.

SYNC button



Click: The VFO-A and VFO-B frequencies change in the same step at the same time.
When ON, the button is displayed in red.

SPLIT button




Click: Switches the SPLIT function ON / OFF.
When ON, the button is displayed in red.

Click & Hold: With the quick split function, the opposite VFO is set to the frequency obtained by adding the "offset frequency setting value of the quick split function (initial setting value: 0)" to the current VFO frequency, and the split function is turned ON.
When the split function is ON, the "offset frequency setting value of the quick split function (initial setting value: 0)" is added to the current VFO-B frequency each time you click and hold.


Right click: The setting screen for the offset frequency of the split function opens.



FUNC button (Function menu display)

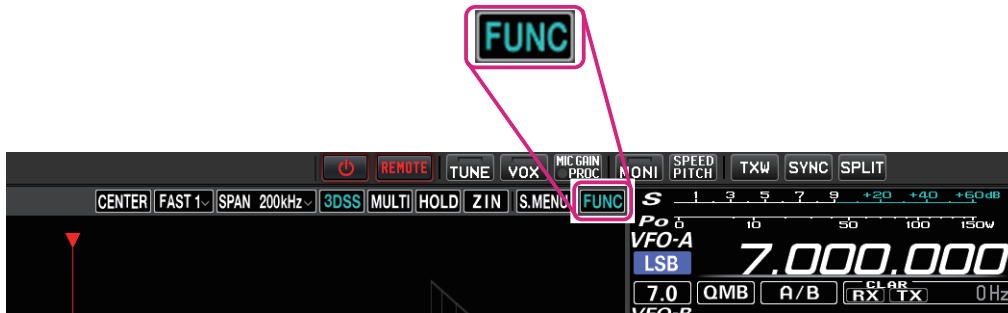




Displays the function menu screen for setting various functions. (Some items are different from the transceiver function menu display.)

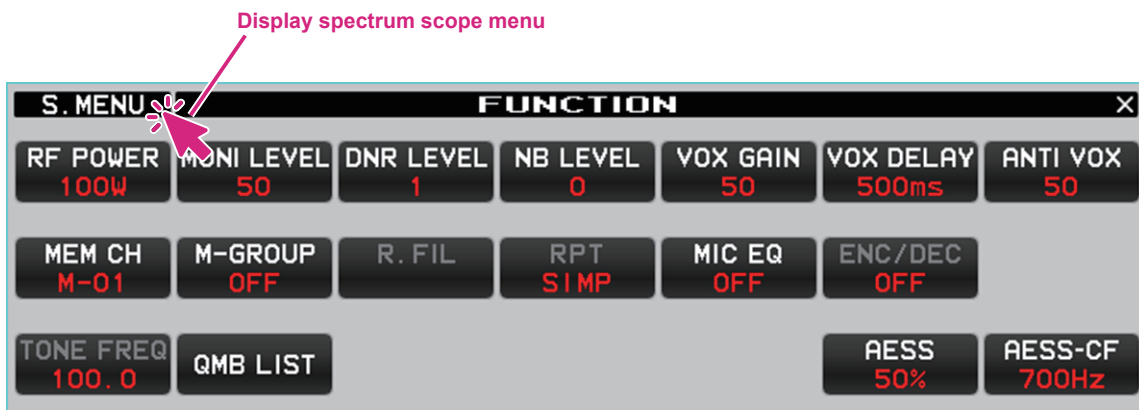

RF POWER button



   Adjust the current transmit frequency (HF / 50MHz band) or communication mode (AM mode) and the transmit output of each.



The maximum transmit power that can be set is less than or equal to the following MAX POWER set in the transceiver set mode.

SET MODE [OPERATION SETTING] → [TX GENERAL]

HF MAX POWER (HF)

50M MAX POWER (50MHz)

AM MAX POWER (AM Mode)

MONI LEVEL button

MONI LEVEL
50

Monitor level adjustment



DNR LEVEL button

DNR LEVEL
1

Set the Digital Noise Reduction response.



NB LEVEL button

NB LEVEL
0

Noise blanker level setting



VOX GAIN button

VOX GAIN
50

VOX gain setting



VOX DELAY button

VOX DELAY
500ms

 
The “Hang-Time” of the VOX system (the transmit-receive delay after the cessation of speech) may also be adjusted.



ANTI VOX button

ANTI VOX
50

The Anti-Trip setting sets the negative feedback of receiver audio to the microphone, to prevent receiver audio from activating the transmitter



MEM CH button

Selects the memory channel in memory mode.

MEM CH
M-01

Click: Select memory channels in sequence.

Wheel: Select a memory channel.

M-GROUP button



- Click:** When the memory group function is ON, memory groups are selected in sequence.
Wheel: Selects the memory group when the memory group function is ON.
Right click: Select ON / OFF of the memory group function.



RPT button



Select the shift direction when operating through a repeater.



- SIMP:** Both transmit and receive have the same frequency.
+ (plus): Transmit is at a higher frequency than the receive frequency (default setting is +100kHz).
- (minus): Transmit is at a lower frequency than the receive frequency (default setting is -100kHz).

MIC EQ button

Select the parametric microphone equalizer function ON / OFF.



The parameters of the microphone equalizer cannot be set with the remote control.

ENC/DEC button



Turn the tone encoder function or tone squelch function ON.



TONE FREQ button



Set the tone frequency for the tone encoder function and tone squelch function.



QMB LIST button




You can check or delete the contents stored in the QMB (quick memory bank) of the current frequency band. Also, the number of QMB channels can be selected from 5ch or 10ch.

QMB LIST						X
1	--.---.---	-----	6	--.---.---	-----	10ch
2	--.---.---	-----	7	--.---.---	-----	
3	--.---.---	-----	8	--.---.---	-----	
4	--.---.---	-----	9	--.---.---	-----	
5	--.---.---	-----	10	--.---.---	-----	DELETE

Spectrum scope area

Screen operation

3DSS display

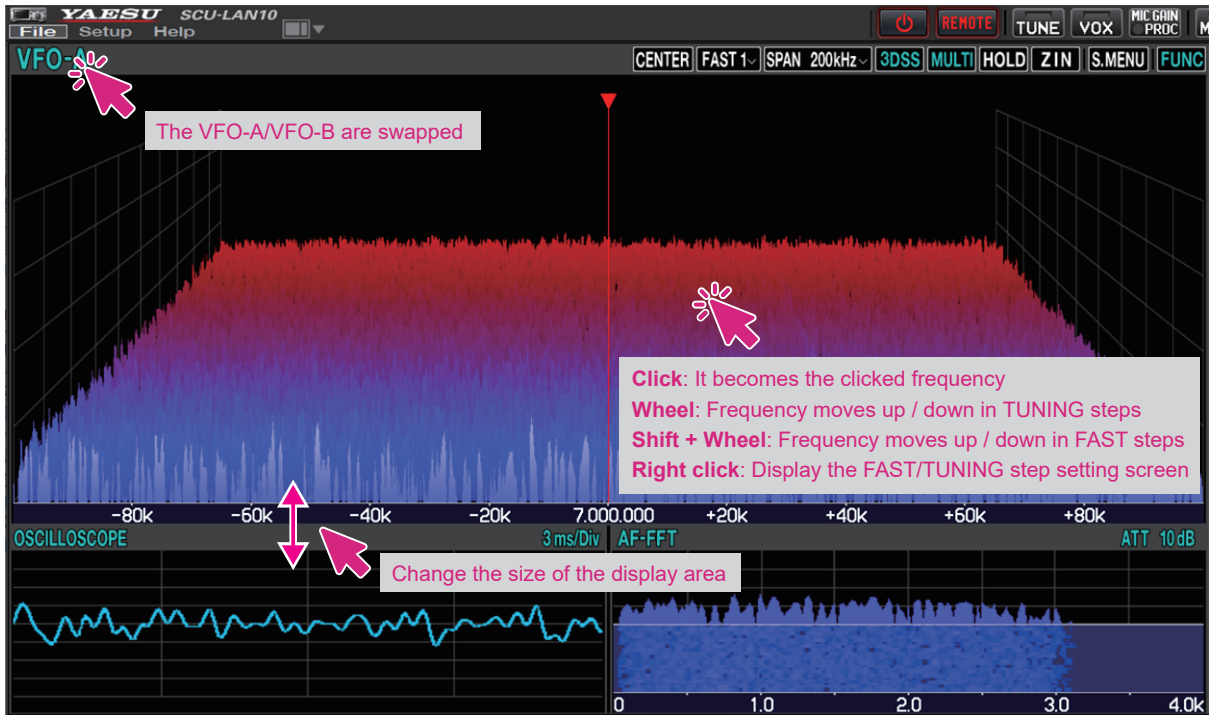

If you hold down the [SHIFT] key on the keyboard and turn the mouse wheel, the frequency will increase or decrease in FAST steps.

Water fall display



If you hold down the [SHIFT] key on the keyboard and turn the mouse wheel, the frequency will increase or decrease in FAST steps.

- **Turn the wheel to change the receive frequency**

Turn the **mouse wheel** on the spectrum scope screen to change the frequency in the set “**TUNING**” step. If you turn the **mouse wheel** while pressing the **[SHIFT]** key on the keyboard, the frequency will increase or decrease in “**FAST**” steps.

- **Click to change the receive frequency**

Click on the spectrum scope screen to jump to that frequency. You can then turn the mouse wheel to tune the frequency and hear the desired signal.

- **Right-click to change the steps**

Right-click on the spectrum scope screen to display the setting screen for the FAST step and TUNING step.


- **VFO-A / VFO-B display switching**



The display positions of the VFO-A and the VFO-B will swap each time you click.


- **Change the size of the VFO-A / VFO-B area**

The size* of the VFO-A and VFO-B display area may be changed by dragging the mouse cursor when it changes to “↕”.


*You can initialize the size by clicking and holding the screen layout icon .

- **Resize the waterfall display area**

While the spectrum scope is in the waterfall display, the size* of the display area may be changed in 3 steps by clicking the waterfall display.

*You can initialize the size by clicking and holding the screen layout icon .

Scope function button

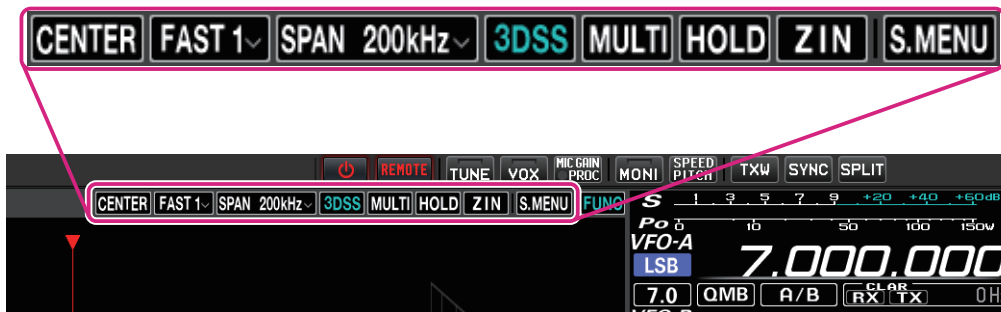

CENTER / CURSOR / FIX button



Switches the operation of the spectrum scope.

Click: The CENTER display, CURSOR display, and FIX display switch each time the button is clicked.

Click & Hold:

- If you click and hold the button while in CENTER or CURSOR, the digits below 100Hz of the receive frequency will be zero.
- If you click and hold the button during FIX, the receive frequency will return to the scope start frequency.

Right Click: Right clicking the button during FIX will open a pop-up screen for entering the scope start frequency (left edge).



Keyboard operation:

Enter key: Finish the input (**ENT**)

Backspace key: Delete the character before the cursor (**⌫**)

Delete key: Delete the character (**⌴**)

Esc key: Cancels input and closes the numeric keypad screen (**BACK**)

SLOW1 / SLOW2 / FAST1 / FAST2 / FAST3 buttons



Switches the scope display speed.

Click: A popup screen for selecting the speed of the scope display is displayed.



SLOW1:	sweep speed	Slow
SLOW2:	sweep speed	↑
FAST1:	sweep speed	Normal
FAST2:	sweep speed	↓
FAST3:	sweep speed	Fast



The settings for this feature apply only to the remote-control software.

SPAN button



Sets the frequency span (display range) of the scope screen.

Click: A popup screen for selecting the span of the scope display is displayed.



Keyboard shortcuts
Arrow keys (Left/Right)

3DSS button



Switches between the 3DSS display and the waterfall display.

Click: The “3DSS” display and “Waterfall” display switch. When “3DSS” is displayed, the button text is displayed in green.

MULTI (Multi display switching) button



Click: Switches to the “multi display” that displays the oscilloscope screen and AF-FFT screen. When “MULTI” is displayed, the button text is displayed in green.

Click & Hold: Clicking and holding the button during “Multi display” will change the display position of the oscilloscope screen and AF-FFT screen.

HOLD button



Temporarily suspends waveform drawing on the scope screen and the receive filter screen.

Click: Switches between pause / cancel.
The button flashes red and appears during pause.

ZIN (auto Zero-in) button




While receiving a CW signal in CW mode, it can be automatically adjusted (zero-in) to the frequency of the partner station so that it matches the received PITCH (pitch).

Click: If you click while receiving a CW signal, it will automatically zero in.

S.MENU button (Spectrum scope menu display)



Displays the scope menu screen to permit settings related to the scope display.

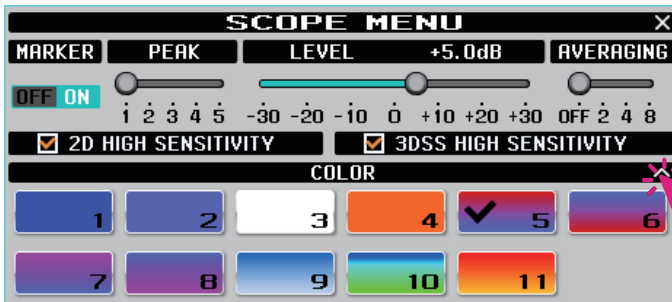

Show / hide COLOR settings

● MARKER

 


Click the button to turn the display of the receive frequency marker (green line) and transmit frequency marker (red line) ON / OFF.



When the operation of the spectrum scope is set to "CENTER", the center of the scope is always the receive frequency, so the receive frequency marker (green) is not displayed.

● PEAK



The color density may be adjusted to the level of the signal.

LV1: Light
LV2: ↑
LV3: Normal
LV4: ↓
LV5: Dark



 
The settings for this feature apply only to the remote-control software.

● LEVEL



Adjust the level to make it easier to distinguish between the desired signal and noise.

● **AVERAGING**



Waveforms are averaged and displayed smoothly.

OFF: Do not average

2 to 8: Display averaging ON



This function is available only with the remote-control software.

● **2D HIGH SENSITIVITY**




If a check mark is added, the waterfall display sensitivity will be emphasized.

● **3DSS HIGH SENSITIVITY**



If a check mark is added, the 3DSS display sensitivity will be emphasized.

● **COLOR**

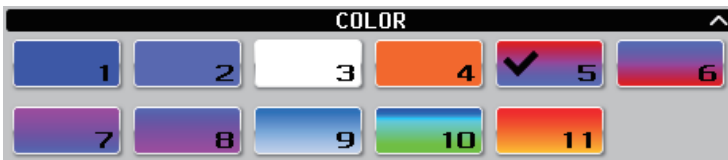


Click the preferred colors to select the display colors.



The settings for this feature apply only to the remote-control software.

Oscilloscope / AF-FFT area

Screen operation

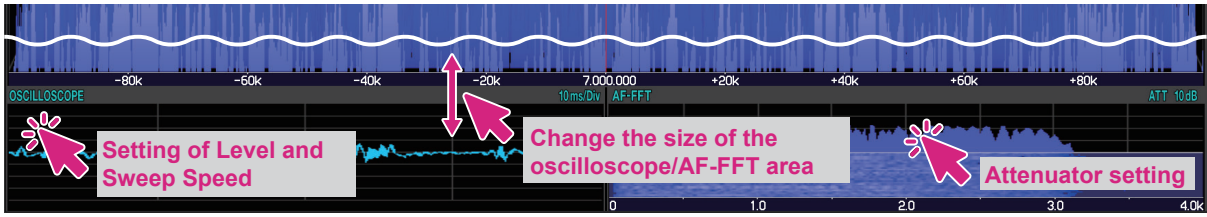

- **Resize oscilloscope / AF-FFT area**

The size* of the oscilloscope / AF-FFT display area can be reduced by dragging the title bar at the top of the oscilloscope / AF-FFT area.

*Click and hold the screen layout icon  at the top of the screen to initialize the size.

- **Click to set the level and sweep speed of the oscilloscope**

Click in the oscilloscope display area to set the waveform display level and time axis scale.




- **Attenuator setting (AF-FFT)**

You can set the attenuator by clicking inside the AF-FFT display area.



- **Change the display position**

You can change the display position of the oscilloscope screen and AF-FFT screen by clicking and holding the [MULTI] button during "Multi display".

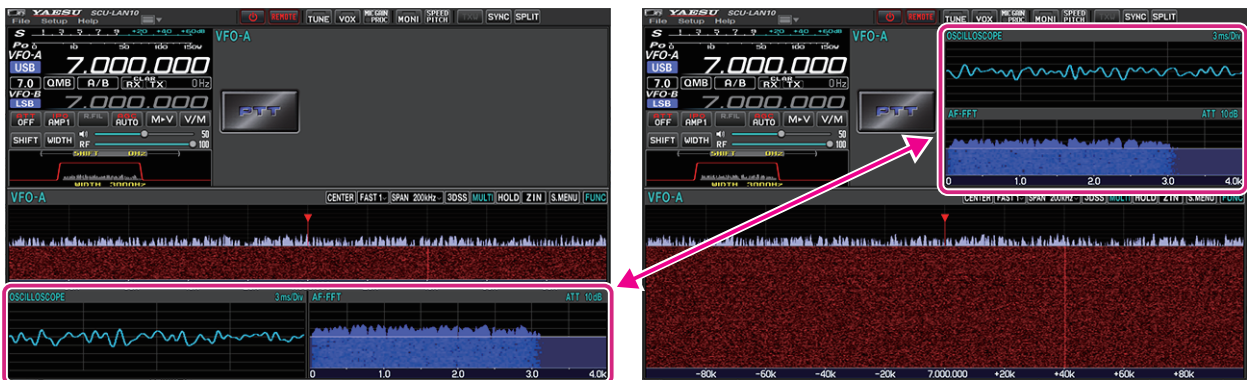

VFO-A / VFO-B operation area



Meter operation selection during transmit




Click: To select the meter operation during transmit:



- PO: Transmission output display
- ALC: ALC voltage display
- SWR: Antenna SWR display
- COMP: AMC gain control display
(Compression level display when the speech processor is operating)
- ID: Final stage FET Drain current display
- VDD: Final stage FET Drain voltage display

Selecting the memory channel

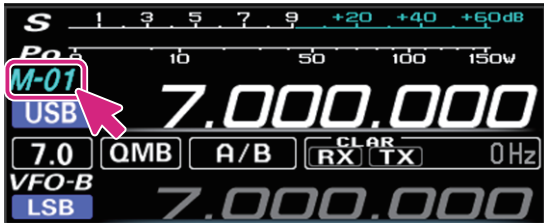


Wheel: Select the memory channel during a memory channel recall.

Selecting the QMB channel



Wheel: Select the QMB channel during a QMB channel recall.

 Keyboard shortcuts
q key

Selecting the operating mode




Click: Select the operating mode.



Right Click: Switch between the following modes with one touch.


LSB ↔ **USB**
CW-L ↔ **CW-U**
AM ↔ **AM-N**
FM ↔ **FM-N**
DATA-L ↔ **DATA-U**
DATA-FM ↔ **D-FM-N**
RTTY-L ↔ **RTTY-U**

Keyboard shortcuts
 LSB/USB: F1 key
CW-L/CW-U: F2 key
AM: F3 key
FM: F4 key

Frequency change operation

Switch frequency band


Click the MHz digit or band icon to display the band selection screen.

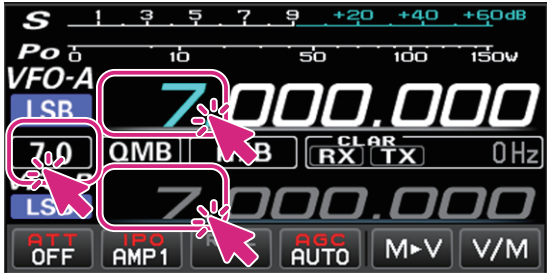

Click: Band selection



MHz digit

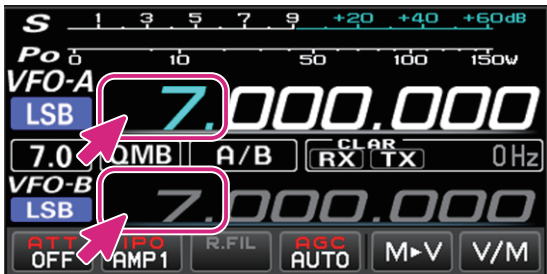


Wheel: Move frequency Up / down at 1MHz

Click: Band selection



Right Click: The numeric keypad screen pops up and you can enter the frequency. You can also click with the mouse, or enter with the number keys on your computer keyboard.

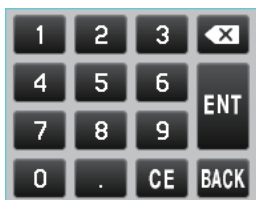

Keyboard operation:


Enter key: Finish the input (**ENT**)

Backspace key: Delete the character before the cursor (**X**)


Delete key: Delete the character (**CE**)

Esc key: Cancels input and closes the numeric keypad screen (**BACK**)

kHz digit

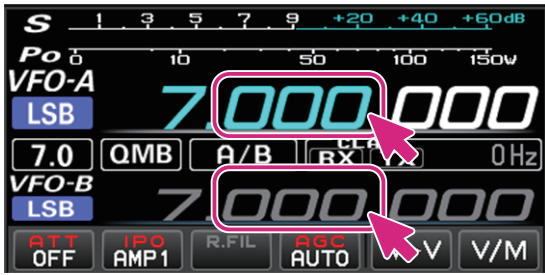

- Wheel:** Frequency moves up/down in FAST steps
- Click:** Click the upper half / lower half of the number move the frequency up/down in FAST steps
- Drag up and down:** Frequency changes up / down in FAST step
- Right Click:** Display the setting screen of FAST step / TUNING step

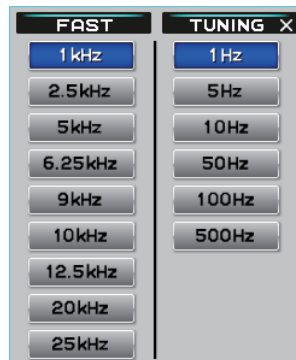

By holding down the [SHIFT] key on the keyboard and clicking the number of each digit, you can zero the numbers below that digit with one touch.

Hz digit



- Wheel:** Frequency goes up / down in TUNING step
- Click:** Click the upper half / lower half of the number to frequency goes up / down the frequency in TUNING steps
- Drag up and down:** Frequency continuously increases / decreases in TUNING steps
- Right Click:** Displays the FAST step / TUNING step setting screen





- In the frequency display, turning the wheel while pressing the [SHIFT] key on the keyboard does not result in the FAST step.
- By holding down the [SHIFT] key on the keyboard and clicking the number of each digit, you can zero the numbers below that digit with one touch.
- Keyboard shortcuts
Current VFO: Page UP key / Page Down key
Opposite VFO: Shift + Page UP key / Shift + Page Down key

QMB Operation



Click: Recalls the information stored in QMB in order.



- You can select a QMB channel by turning the wheel while hovering the mouse over the QMB channel number display while recalling QMB.
- Keyboard shortcuts
q key

Click & Hold: Stores up to 5 or 10 channels of the current operating status in a dedicated memory channel (QMB: Quick Memory Bank).

Right Click: A list of QMB memories will be displayed.



Click the QMB channels you want to delete and click the [DELETE] button to delete them.


Click the [5ch] or [10ch] button to switch the number of QMB channels.

VFO-A / VFO-B operation



Click: Switch the VFO-A / VFO-B.

CLAR (Clarifier) operation

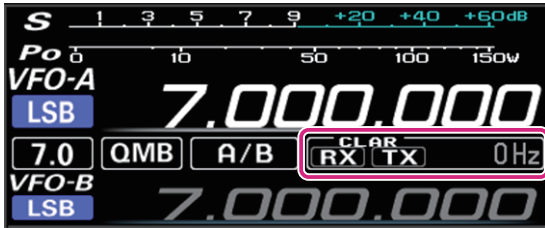


Click: Click the [RX] or [TX] button to turn the RX clarifier or TX clarifier ON.

Wheel: When the mouse wheel is rotated on the display of the offset amount (difference between reception frequency and transmission frequency), the offset amount changes in 10Hz or 100Hz steps (AM / FM / DATA-FM / D-FM-N).

Click & Hold: Click and hold the [RX] or [TX] button to clear the offset amount.

Receiver setting operation

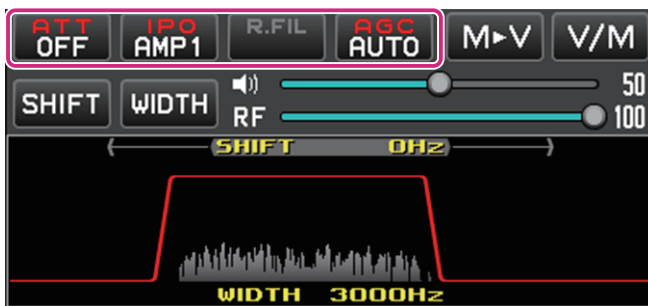

ATT (Attenuator) button



Displays the current ATT (Amount of receive input signal attenuation).

Click: Select the attenuation level.



IPO (Intercept Point Optimization) button



Displays the current IPO (Intercept Point Optimization). can establish the gain of the RF amplifier section to accommodate the connected antenna and the received signal conditions.

Click: Select from IPO, AMP1 (Approximately 10 dB gain) and AMP2 (Approximately 20 dB gain).



AGC (Automatic Gain Control) button




Displays the currently selected AGC setting. The AGC system is designed to help compensate for fading and other propagation effects.

Click: Select from OFF, AUTO, FAST, MID and SLOW. The "AUTO" selection mode selects the optimum receiver-recovery time for the reception mode.



Memory channel operation

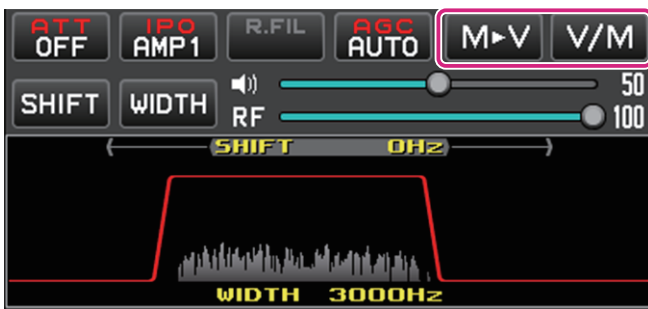

M button



When the memory channel list is not displayed:

Click: The last used VFO memory may be copied to VFO-A.

V/M button



When the memory channel list is not displayed:

Click: The VFO and the last used memory channel will be recalled alternately. You can select a Memory channel by turning the wheel while hovering the mouse over the Memory channel number display while recalling Memory.

Click & Hold: Open the memory channel list.

When the memory channel list is displayed:

Click: Close the memory channel list.

Memory channel list operation

CH	FREQ	MODE	NAME	SCAN MEMORY	DISPLAY TYPE
M-01	7.000.000	LSB		SCAN	FREQ
M-02	7.000.000	LSB		SCAN	FREQ
M-03	14.000.000	USB	YAESU	SCAN	FREQ
M-04	--.---.---	-----	-----	----	----
M-05	--.---.---	-----	-----	----	----
M-06	--.---.---	-----	-----	----	----

GET DATA RECALL M > VFO VFO > M ERASE

SEND DATA



The window can be expanded to increase the number of channels displayed by dragging the bottom border of the memory channel list screen.

Read memory data from radio



The data of all memory channels stored in the transceiver can be read into the remote-control software.



When memory data is read from the transceiver, the memory data currently set in the remote-control software will be overwritten.



If the memory data currently held by the remote-control software is written to a different model transceiver, the transferred initial values may not match the different model. Be very careful when writing data to other models.

Click: A confirmation screen is displayed. Click **[YES]** to load.

Right click: Displays the date and time when the memory data was last read.

Transfer memory data to transceiver



The data of all memory channels stored in the remote-control software can be transferred to the transceiver.



In the remote-control software, in addition to the memory data stored in the transceiver, the remote-control software has memory data independently.



When reading data from a different model transceiver than the memory data currently held by the remote-control software, all the data stored in the memory channels, including the model-dependent data, is transferred and overwritten. Please be careful when reading data from other models.

Click: A confirmation screen is displayed. Click **[YES]** to transfer.

Right click: Displays the date and time when the memory data was last transferred.

Recall memory channel



Click: Recall the data of the selected memory channel.

Move memory data to VFO



Click: Transfers the data of the selected memory channel to the current VFO.

Write to memory



Click: Writes information such as the current VFO frequency and operation mode to the selected memory channel.

Erase / Resume Memory Channel




Click: Erases or restores the selected memory channel.

Right click: A confirmation screen is displayed. Click [YES] to initialize all memory information.



Memory channel "M-01" cannot be erased.


Editing memory channels

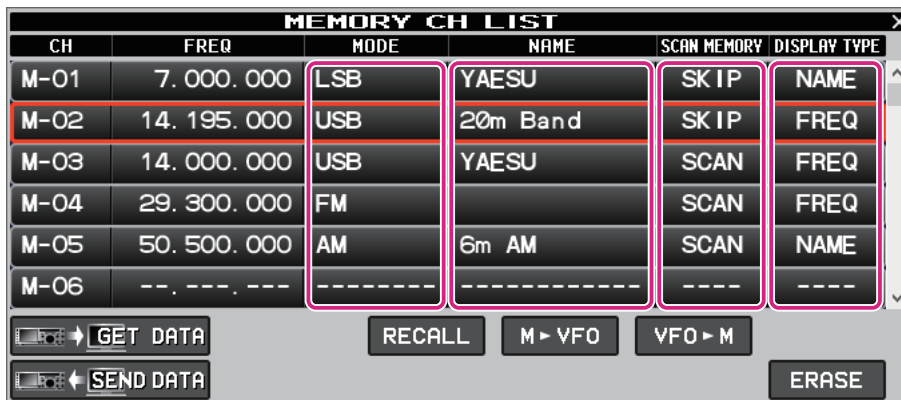

You can edit the contents of the memory channel by right-clicking the MODE, NAME, SCAN MEMORY, and DISPLAY TYPE fields.

● MODE

Select the operation mode.

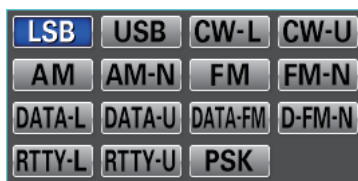

● NAME

Edit the alpha tag (maximum 12 characters) of the memory channel.

● SCAN MEMORY

When scanning the memory, set the channels you do not want to scan to "SKIP".



● DISPLAY TYPE

Set the display when the memory is called to "frequency display" or "alpha tag display".



AF Gain / RF Gain adjustment



AF (Speaker icon)

Turn the mouse wheel over the slide bar or drag or click to adjust the receive volume.



Each time you click the speaker icon, MUTE & MUTE cancel will switch.

RF (RF GAIN) / SQL

Turn the mouse wheel over the slide bar or drag or click to adjust the RF gain.



Right-click on RF to select whether to adjust RF gain or SQL level.

SHIFT/WIDTH operation



SHIFT button



Click: When the button is blue, the IF filter shift frequency can be changed by operating the mouse in the filter function display area.



Keyboard shortcuts
s key

Click & Hold: The IF filter shift frequency returns to 0 Hz.



When the radio wave format cannot be shifted, the button is grayed out.

WIDTH button



Click: When the button is blue, you can change the IF filter bandwidth by operating the mouse in the filter function display area.




Keyboard shortcuts
w key

Click & Hold: The IF filter bandwidth returns to the initial value.



The button is grayed out for radio wave formats where the bandwidth cannot be changed.

Operation of the filter function display area

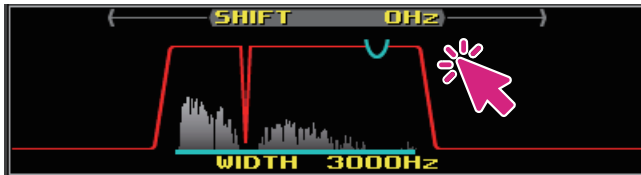

Right Click: You can select to show / hide the spectrum display of the signal in the filter function display area.



Interference Reduction Systems operation




NB (Noise blanker) button



Click: The noise blanker function turns ON / OFF.

Right click: The operation setting of the noise blanker function can be changed.

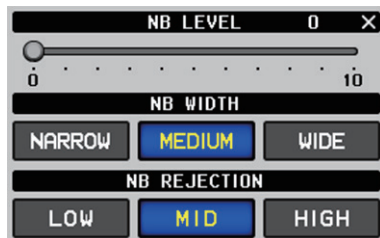

DNR (Digital Noise Reduction) button



Click: The digital noise reduction function turns ON / OFF.

Right click: You can set the level of the digital noise reduction function.



DNF (Digital NOTCH Filter) button



Click: The digital NOTCH filter function turns ON / OFF.

NOTCH (IF NOTCH Filter) button



Click: The IF NOTCH filter function turns ON / OFF.



Keyboard shortcuts
n key

Right click: The bandwidth of the IF NOTCH filter function can be selected.



CONT (Contour) button




Click: The Contour function turns ON / OFF.



Keyboard shortcuts
c key

Right click: The attenuation and bandwidth of the contour function can be set.

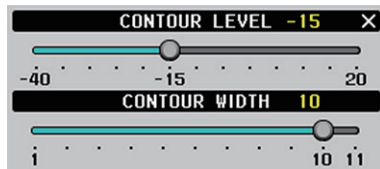

APF (Audio Peak Filter) button



The APF function is for CW mode only.



Click: The APF function turns ON / OFF.

Right click: The bandwidth of the APF function can be set.



PTT operation



PTT button

Click & Hold: To transmit




Keyboard shortcuts
Space key


Right click: To switch the button function between “PTT” and “MOX”.



MENU bar

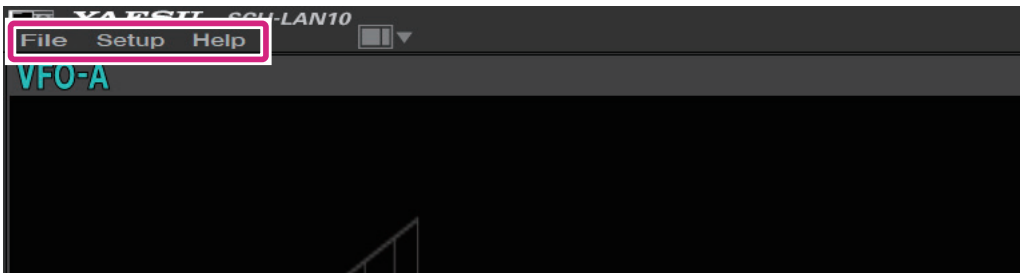


File

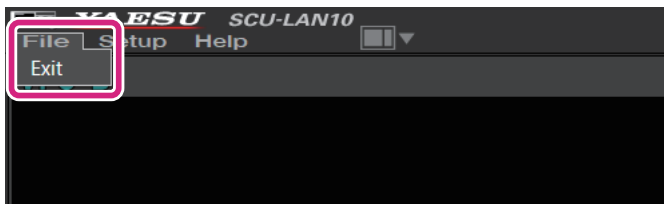


Exit: Closes the remote-control software.

Setup

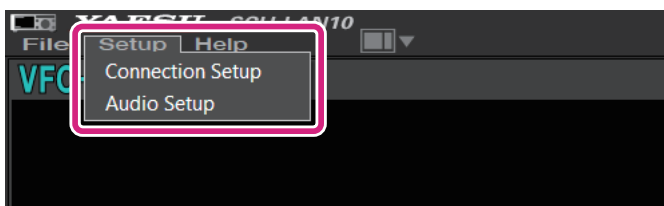


Connection Setup: Make settings related to connection with SCU-LAN10.
There is no need to change it if you have set it once at the beginning.

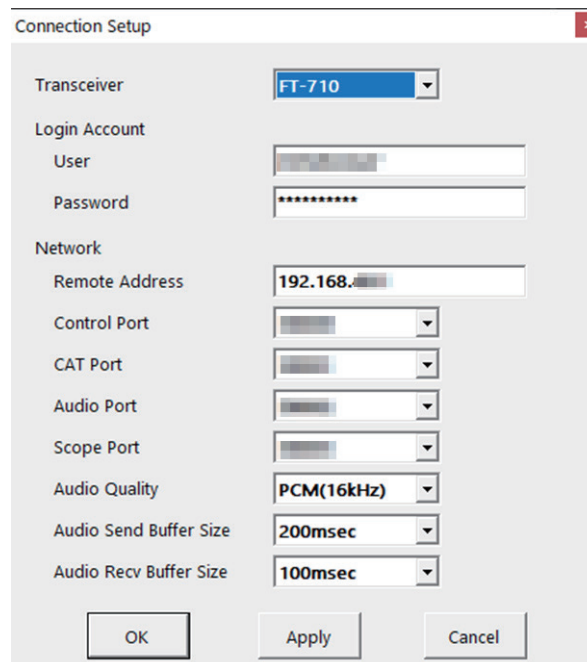

While remotely connected to the SCU-LAN10, it is grayed out and you can only check the settings.

For details, refer to the SCU-LAN10 Installation Manual.

Audio Setup: Opens the audio level settings screen.

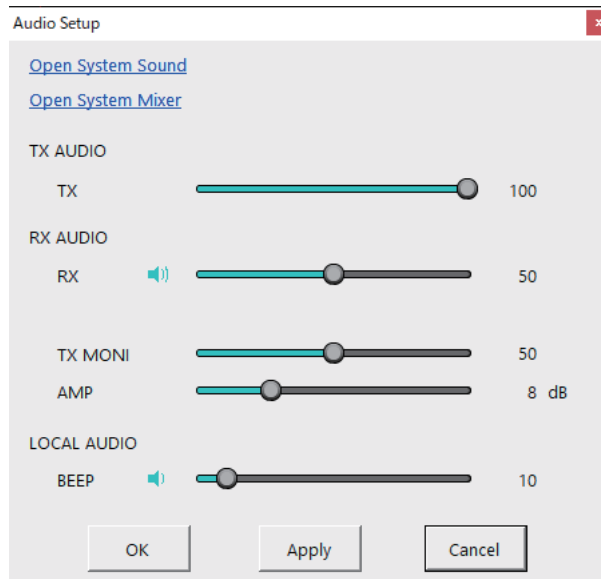

Open System Sound
Open System Mixer

The Windows **“Sound”** screen appears.

The Windows **“Volume Mixer”** screen appears.

For details on adjusting the volume on Windows, refer to the SCU-LAN10 Installation Manual.

TX AUDIO
TX

Adjust the transmit modulation level.

This adjustment is the same as adjusting the MIC GAIN adjustment bar that appears when you right-click the MIC GAIN / PROC button



RX AUDIO
RX

Adjusts the receive volume.

This adjustment is the same as adjusting the volume control bar on the VFO operation area.



TX MONI

Adjusts the volume of the transmitted audio that is monitored by the monitor function.

This adjustment is the same as the MONI adjustment bar that appears when you right-click the **MONI** button.



AMP

Adjust this when the receive audio of the VFO-A / VFO-B or the TX MONI volume is extremely low or distorted even when the Windows volume adjustment or the above volume adjustment is performed. Normally you do not need to change. (Factory setting: 8 dB)


LOCAL AUDIO
BEEP

Adjusts the beep volume when operating the remote-control software.



If the volume is extremely low even if you adjust it on the “Audio Setup” screen, or if the sound is too loud and distorted, use Windows to adjust the volume. For details on adjusting the volume on Windows, refer to the SCU-LAN10 Installation Manual. If you are still unable to make adjustments, change the RX AUDIO “AMP” setting above.

Help

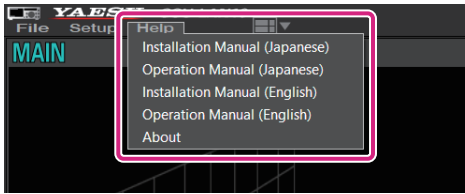

- Installation Manual (Japanese):** Open the Installation Manual (Japanese)
Operation Manual (Japanese): Open the Operation Manual (Japanese)
Installation Manual (English): Open the Installation Manual (English)
Operation Manual (English): Open the Operation Manual (English) (This Manual)

About: Displays information about this software.

Shortcut keys

The functions in the table below can be operated with the keys on the PC keyboard.

Function	Shortcut
Spectrum scope span (wide)	Cursor key Right (→)
Spectrum scope span (narrow)	Cursor key Left (←)
VFO frequency Up	Page Up key (current VFO) Shift + Page Up key (opposite VFO)
VFO frequency Down	Page Down key (current VFO) Shift + Page Down key (opposite VFO)
AF GAIN Up	Cursor key Up (↑)
AF GAIN Down	Cursor key Down (↓)
SHIFT function select	s key
WIDTH function select	w key
NOTCH function select	n key
CONTOUR function select	c key
Mode select (LSB / USB)	F1 key
Mode select (CW-L / CW-U)	F2 key
Mode select (AM)	F3 key
Mode select (FM)	F4 key
QMB recall	q key
PTT (Transmission)	Space key

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy; and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



Copyright 2023
YAESU MUSEN CO., LTD.
All rights reserved.

No portion of this manual may be
reproduced without the permission of
YAESU MUSEN CO., LTD.

YAESU MUSEN CO., LTD.

Omori Bellport Building D-3F
6-26-3 Minami-Oi, Shinagawa-ku, Tokyo, 140-0013, Japan

YAESU USA

6125 Phyllis Drive, Cypress, CA 90630, U.S.A.

YAESU UK

Unit 12, Sun Valley Business Park, Winnall Close
Winchester, Hampshire, SO23 0LB, U.K.