 
# ADVANCED OPERATION (VOR NAVIGATION: AIR BAND)

## Flying to a VOR Station

 
The **VXA-700** can indicate the deviation from the direct course to a VOR station.

- ☐ Select a VOR station on your aeronautical chart and turn the **DIAL** selector knob (or enter the frequency directly with the keypad) to the frequency of the VOR station.
- To indicate the deviation between your current flight path and the desired course, press ♠ course to change to the CDI (Course Deviation Indicator) mode. The "Course Deviation Arrow" will appear on the display when your aircraft is off the direct course to the VOR station.
- □ When your aircraft is off course to the *righ*t, the Course Deviation Arrow display will show bars to the left side of the diamond ("||| ◇"). When your aircraft is off course to the *left*, the Course Deviation Arrow display will show bars to the right side of the diamond ("◇|||"). Correct your course until no bars appear on either side of the CDI "diamond" (only ("◇") will be visible when the heading is correct).
- $\square$  To return to the DVOR mode, press  $\bigcirc$   $\rightarrow$   $\bigcirc$   $\bigcirc$   $\bigcirc$   $\bigcirc$   $\bigcirc$   $\bigcirc$  .


#### The Aircraft is "ON COURSE"



### OFF COURSE to the "right" 6 degrees



### OFF COURSE to the "left" 6 degrees

 

# ADVANCED OPERATION (VOR NAVIGATION: AIR BAND)

